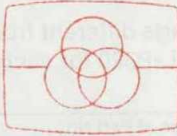 


Service Manual


DIGITAL

 Free service manuals
 Gratis schema's

Digitized by

Compact Disc Player

SL-P220

Compact Disc Player

www.freeservicemanuals.info
Color

(K) Black Type



Color	Areas
(K)	[E] Switzerland and Scandinavia.
(K)	[EK] United Kingdom.
(K)	[XL] Australia.
(K)	[EG] ... F.R. Germany.
(K)	[EB] Belgium.
(K)	[EH] Holland.
(K)	[EF] France.
(K)	[Ei] Italy.
(K)	[XA] Asia, Latin America, Middle Near East, Africa and Oceania.
(K)	[XB] Saudi Arabia.
(K)	[PA] East PX.
(K)	[PE] European Military.
(K)	[PC] European Audio Club.

Please use this manual together with the service manual for Model No. SL-P320, Order No. HAD8702603C0.

- Notes:** ★ Mentioned in this service manual is the differences from Model No. SL-P320 for each area.
- ★ Please note the following major difference when servicing.
- This product is not provided with the numeric switches on the operation P.C.B.

Technics

 Matsushita Electric Trading Co., Ltd.
 P.O. Box 288, Central Osaka Japan

Worldwide electronic heritage manuals

 Panasonic Tokyo Office
 Matsushita Electric Trading Co., Ltd.
 6th Floor, World Trade Center Bldg.,
 No. 4-1, Hamamatsu-cho 2-Chome, Minato-ku,
 Tokyo 105, Japan

CHANGES

REPLACEMENT PARTS LIST

Note: Mentioned in this parts list are only those parts different from Model No. SL-P320 for each destination. Other parts are the same as for Model No. SL-P320 for each destination.


Ref. No.	Change of Part No.		Part Name & Description
	SL-P320 (K)	SL-P220 (K)	
[INTEGRATED CIRCUITS]			I.C., D/A CONVERTER
IC801	SVIPCM54JP	SVIPCM54HP	
[CABINET AND CHASSIS]			
9 (E)	SGPLP320-KE	SGPLP220-KE	CHASSIS
(EB, EH, EF, Ei)	SGPLP320-KEB	SGPLP220-KEB	CHASSIS
(EG)	SGPLP320-KEG	SGPLP220-KEG	CHASSIS
(EK)	SGPLP320-KEK	SGPLP220-KEK	CHASSIS
(PA, PE, PC)	SGPLP320-KPA	SGPLP220-KPA	CHASSIS
(XA)	SGPLP320-KXA	SGPLP220-KXA	CHASSIS
(XB)	SGPLP320-KXB	SGPLP220-KXB	CHASSIS
(XL)	SGPLP320-KXL	SGPLP220-KXL	CHASSIS
10	SGYLP320-KM	SGYLP220-KM	FRONT PANEL ASS'Y
14	SBCD4620ZK0B	SBCD4630ZK0C	BUTTON MEMORY
15	SBCD4610ZK0C	SGXD3070ZK0B	KNOB HEADPHONES
16	SBCD4610ZK0D	SBCD4630ZK0D	BUTTON TIME
[PACKINGS]			
P1 (EF)	SPND204	SPND217	CARTON BOX
P1 (others)	SPND202	SPND215	CARTON BOX
[ACCESSORIES]			
A1 (XL, XA)	SQUD212	SQUD236	INSTRUCTION MANUAL
(EG)	SQUD214	SQUD238	INSTRUCTION MANUAL
(EF)	SQUD215	SQUD239	INSTRUCTION MANUAL
(Ei)	SQUD216	SQUD240	INSTRUCTION MANUAL
(EK)	SQUD217	SQUD241	INSTRUCTION MANUAL
(E, EB, EH)	SQULP320-KE	SQULP220-KE	INSTRUCTION MANUAL
(PA, PE, PC)	SQULP320-KPA	SQULP220-KPA	INSTRUCTION MANUAL
(XB)	SQULP320-KXB	SQULP220-KXB	INSTRUCTION MANUAL
[SWITCHES]			
S411 ~ 420	EVQQS405K		PROGRAM SWITCH

Please use this manual together with the service manual for Model No. SL-P320. Order No. HAD670503C0.


Notes: * Mentioned in this service manual is the difference from Model No. SL-P320 for each area.
* Please note the following major difference when servicing.
* This product is not provided with the numeric switches on the operation P.C.B.

■ EXPLODED VIEWS

 [SL-P320]

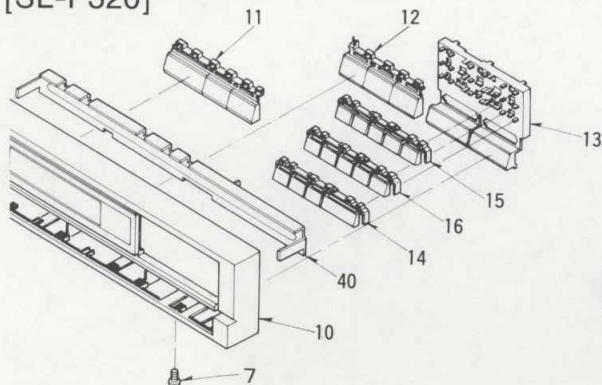


[SL-P220]

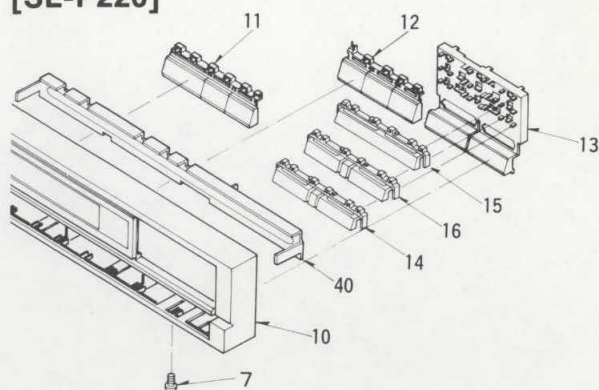 


■ PRINTED CIRCUIT BOARD AND WIRING CONNECTION DIAGRAM

• OPERATION P.C.B.

 [SL-P320]

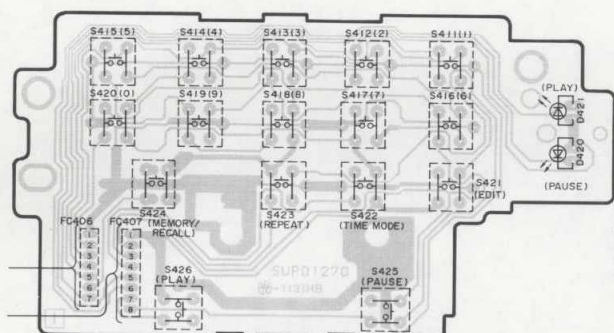

[SL-P220]

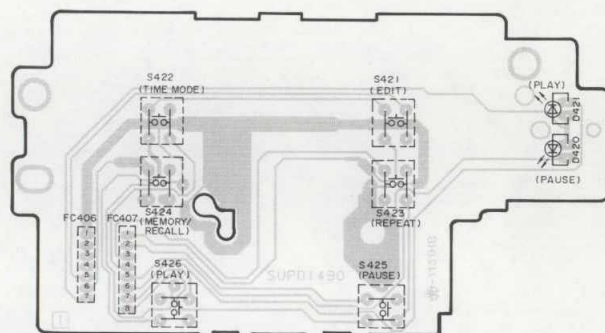 

■ SCHEMATIC DIAGRAM

Note: This product is not provided with the numeric switches in the shaded area.

