

# Indesit Error Messages and Error Codes

The following are an explanation of specific error codes that may appear if there is a problem with your **Indesit washing machine, tumble dryer, dishwasher, fridge or freezer**. In most cases it is recommended to book a service engineer to rectify this fault but there are certain things that you can do to minimise any inconvenience or even avoid an unnecessary engineer visit.

Don't forget, should our advice fail to solve your issue then you can [book an Indesit appliance repair](#). Alternatively phone us on **08448 224 224** to book your Indesit washing machine repair.

If an explanation of an error code on your Indesit appliance is not shown please [contact us](#) for an explanation

## Indesit Washing Machines and Washer Dryers

- **F10** - No cold fill. Check that the taps are on or if the drain hoses are kinked.
- **F11** - No hot fill. The ambient temperature is likely to be below freezing possibly due to the pipes being frozen. Also check that the taps are on or if the drain hoses are kinked.
- **F12** - No mixed fill. It is likely that the water is not turned on at the taps.
- **F13** - Check the water supply, inlet valve and hot and cold hose connections.
- **F14** - A fault with the water heating has occurred. [Book a washing machine repair](#)
- **F15** - Water is not being pumped out and a flood condition could occur. Check that the drainage hose is raised to the recommended minimum height and that the pipe is not blocked.
- **F16** - Extremely high water level Disconnect or turn off the water supply and ensure that the water level does not rise any more. Then [Book a washing machine repair](#)
- **F17** - Door not closed properly. Close door firmly at the 3 o'clock position.
- **F20/1** - The thermistor resistance has drifted or the temperature scanning sequence is incorrect. The ambient temperature could be below freezing. [Book a washing machine repair](#).
- **F30/31** - A motor drive problem has occurred. Try running the programme again. If the problem persists [Book a washing machine repair](#).
- **F40** - Water below protection level during a heat step. [Book a washing machine repair](#).
- **F41** - Water level detect sequence incorrect. [Book a washing machine repair](#).
- **F50/51** - Customer language and wash programme have not been saved. The system will run with default conditions (1000rpm max and English language). [Book a washing machine repair](#) to re-programme your product.

## Fault codes for Indesit LCD EVO1 Washing Machines and Washer Dryers

- **F01** - Short circuit motor triac - [Book a washing machine repair](#).
- **F02** - Motor jammed tacho detached - [Book a washing machine repair](#).
- **F03** - Wash thermistor open/short circuit - [Book a washing machine repair](#).
- **F04** - Pressure switch jammed on empty - [Book a washing machine repair](#).
- **F05** - Pressure switch jammed on full - [Book a washing machine repair](#).
- **F06** - Program selector error - [Book a washing machine repair](#).
- **F07** - Heater relay stuck - [Book a washing machine repair](#).
- **F08** - Heater relay cannot be activated - [Book a washing machine repair](#).
- **F09** - Incompatible eeprom - [Book a washing machine repair](#).
- **F10** - Pressure switch not sensing correctly - [Book a washing machine repair](#).
- **F11** - Pump cannot be activated - [Book a washing machine repair](#).
- **F12** - Communication error - [Book a washing machine repair](#).
- **F13** - Dryer fan or dryer thermistor faulty - [Book a washing machine repair](#).
- **F14** - Dryer element faulty - [Book a washing machine repair](#).
- **F15** - Dryer element relay faulty - [Book a washing machine repair](#).
- **H20** - Not fillings. Check tap, hose and inlet valves
- **LOCKED** - Check interlock - [Book a washing machine repair](#).

## Fault codes for Indesit LCD EVO2 and V4 Washing Machines and Washer Dryers

- **F01** - Motor triac short circuit - [Book a washing machine repair](#).
- **F02** - Motor jammed or tacho detached - [Book a washing machine repair](#).
- **F03** - Wash thermistor open/short circuit - [Book a washing machine repair](#).
- **F04** - Pressure switch jammed on empty - [Book a washing machine repair](#).
- **F05** - Pressure switch jammed on full - [Check pump for blockages](#).
- **F07** - Heater relay stuck - [Book a washing machine repair](#).
- **F08** - Heater relay stuck - [Book a washing machine repair](#).

- **F09** - Setup error - [Book a washing machine repair.](#)
- **F10** - Pressure switch not sensing - [Book a washing machine repair.](#)
- **F11** - Pump cannot be activated - [Book a washing machine repair.](#)
- **F12** - No communication between cards - [Book a washing machine repair.](#)
- **F13** - Drying thermistor open/short circuit - [Book an appliance repair.](#)
- **F14** - Drying element faulty - [Book an appliance repair.](#)
- **F15** - Dryer element relay fault - [Book an appliance repair.](#)
- **F17** - Interlock error - [Book a washing machine repair.](#)
- **F18** - Communication error - [Book a washing machine repair.](#)
- **H20** - **Not filling. Check tap, hose and inlet valves**

#### Indesit Fridges and Freezers

- **F1** - Freezer thermistor open circuit. [Book a freezer repair.](#)
- **F2** - Freezer thermistor short circuit. [Book a freezer repair.](#)
- **F3** - Fridge thermistor open circuit. [Book a fridge repair.](#)
- **F4** - Fridge thermistor short circuit. [Book a fridge repair.](#)
- **F7** - Evaporator thermistor open circuit. [Book a fridge repair.](#)
- **F8** - Evaporator thermistor short circuit. [Book a fridge repair.](#)
- **F9** - Temperature set switch open circuit [Book a fridge repair.](#)
- **FA** - No feedback from Baffle [Book a fridge repair.](#)
- **FB** - Fridge Baffle motor operating continuously. [Book a fridge repair.](#)
- **FE** - Defrost time out. [Book a freezer repair.](#)

#### Indesit Dishwashers

- **F10** - Fill or empty time out. Check that the hoses are not kinked, that the taps are on or whether the drain pump or hose is blocked.
- **F11** - Heater timed out. The heater has not reached the required level. [Book a dishwasher repair.](#)
- **F20** - Temperature under range. [Book a dishwasher repair.](#)
- **F21** - Temperature over range. [Book a dishwasher repair.](#)

#### Fault codes for Indesit LCD Dishwasher Models

- **A01** - Float switch operated - [Book a dishwasher repair.](#)
- **A02** - Open/Short circuit heater relay - [Book a dishwasher repair.](#)
- **A03** - Short circuit on thermistor or Time-out drain- Check filter for blockages then [book a dishwasher repair](#) if the problem persists.
- **A04** - Unable to reach or sense temperature within 70 minutes - [Book a dishwasher repair.](#)
- **A05** - Pressure switch has not been reset - [Book a dishwasher repair.](#)
- **A07** - Open/Short circuit wash motor triac - [Book a dishwasher repair.](#)
- **A08** - Open/Short circuit auxiliary wash motor triac - [Book a dishwasher repair.](#)
- **A09** - Open/Short circuit with main wash traic - [Book a dishwasher repair.](#)
- **A10** - Open/Short circuit fill valve traic - [Book a dishwasher repair.](#)
- **A11** - Half load valve traic or alternating motor action - [Book a dishwasher repair.](#)
- **A12** - Open circuit heater rely - [Book a dishwasher repair.](#)
- **A13** - Open/Short circuit dispenser traic - [Book a dishwasher repair.](#)
- **A14** - Drain hose too low causing syphoning. Check drain hose and re-adjust.
- **H20** - Check tap and pressure of incoming water.

#### Indesit Tumble Dryers

- **F1** - The level of required dryness has not been reached within the time period. Check that the correct programme has been selected
- **F2** - Thermistor or sensing circuit failure. [Book a tumble dryer repair.](#)
- **F3** - Heater plate over temperature. Check the filter and vent hose for a possible blockage.

#### Fault codes for Indesit LCD Tumble Dryers

- **F01** - Short circuit motor traic - [Book a tumble dryer repair.](#)
- **F02** - Motor jammed or fan blocked - [Book a tumble dryer repair.](#)
- **F03** - Front thermistor open/short circuit - [Book a tumble dryer repair.](#)
- **F04** - No pump piloting - [Book a tumble dryer repair.](#)
- **F05** - No feedback from the pump - [Book a tumble dryer repair.](#)
- **F08** - Static heater relay with contact welded closed - [Book a tumble dryer repair.](#)
- **F09** - Eeprom is not programmed or not functioning - [Book a tumble dryer repair.](#)
- **F10** - Common of heater open or one shot open - [Book a tumble dryer repair.](#)
- **F11** - No pump connection - [Book a tumble dryer repair.](#)

- **F12** - Communication error between boards - **Book a tumble dryer repair.**
- **F13** - Rear thermistor open/short circuit - **Book a tumble dryer repair.**
- **F15** - Dynamic heater relay with contact welded closed - **Book a tumble dryer repair.**
- **F-17** - Master relay welded closed - **Book a tumble dryer repair.**