

ZANUSSI washing machine heating element with sensor
Product no.: 1325064234

NTC: K276/4.8k/A112 5930



Washing machine heating element with temperature sensor. Original spare part for many AEG Lavamat, Electrolux EWF EWT EWB EWW, Husqvarna QW, Rosenlew RTT RTF, Zanussi ZWG ZWF ZWC ZWN ZWJ ZWH -models:

PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND
913217004	L70360TL	AEG	914903515	L62640	AEG
913217005	L70268TL	AEG	914903516	L64640	AEG
913217006	L60260TL	AEG	914903517	L62645	AEG
913217007	L60060TL	AEG	914903518	L64645	AEG
913217015	L70360TL	AEG	914903519	L64647	AEG
913217016	L70260TL	AEG	914903523	L62840	AEG
913217017	L60260TL	AEG	914903524	L64840	AEG
913217018	L60060TL	AEG	914903525	L66840	AEG
			914523664	914523664	ELECTROLUX
			914523665	914523665	ELECTROLUX
			914523666	914523666	ELECTROLUX
			914523674	914523674	ELECTROLUX
			914523675	914523675	ELECTROLUX
			914523676	914523676	ELECTROLUX
			914523677	914523677	ELECTROLUX
			914523680	914523680	ELECTROLUX

PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND	MODEL	BRAND
913217020	L60465TL	AEG	914903527	L64640	AEG	914523681	EWF169542W	ELECTROLUX		
913217033	L60460TL	AEG	914903528	L64840	AEG	914523682	EWF169542W	ELECTROLUX		
913217034	L60460TL	AEG	914903529	L64845	AEG	914523684	EWF169547W	ELECTROLUX		
913217035	L60460TL	AEG	914903530	L64846	AEG	914524405	WAK2E100	ELECTROLUX		
913217036	L60260TL	AEG	914903531	L66840	AEG	914524516	WAL2E100	ELECTROLUX		
913217049	LB1482	AEG	914903532	L64840	AEG	914524517	WAL4E100	ELECTROLUX		
913217056	L70360TL	AEG	914903533	L66841	AEG	914524518	WAL6E100	ELECTROLUX		
913217071	L45000	AEG	914903536	L64640	AEG	914524519	WAGLES7000	ELECTROLUX		
913217072	L45200	AEG	914903539	L64845	AEG	914524520	WA1356F	ELECTROLUX		
913217081	L60260TL	AEG	914903540	L66845	AEG	914524570	WAL4E101	ELECTROLUX		
913217082	L60460TL	AEG	914903541	L60840	AEG	914524571	WAL6E101	ELECTROLUX		
913217086	L60060TL	AEG	914903542	L62840	AEG	914524572	WAL7E101	ELECTROLUX		
913217087	L60260TL	AEG	914903543	L64640	AEG	914524605	WASL4E100	ELECTROLUX		
913217088	L70260TL	AEG	914903544	L64641	AEG	914525522	WAGL4E100	ELECTROLUX		
913217100	L60069TL	AEG	914903545	L64845	AEG	914525523	WAGL6E100	ELECTROLUX		
913217155	L70260TLP	AEG	914903546	L66845	AEG	914525524	WAGL7E100	ELECTROLUX		
913217157	L60060TLP	AEG	914903547	L6261	AEG	914525541	WAGLES7000	ELECTROLUX		
913217271	L60460TL	AEG	914903548	L6461	AEG	914525551	WAGLES7000	ELECTROLUX		
913217275	L6026TL	AEG	914903549	L64848	AEG	914525593	WAGL6E101	ELECTROLUX		
913217298	L6026TL	AEG	914903550	LN68460	AEG	914525615	WASL2E100	ELECTROLUX		
913217303	L75460TL1	AEG	914903551	LN68661	AEG	914525619	WASL1E100	ELECTROLUX		
913217304	L60060TL1	AEG	914903552	LN68460	AEG	914525713	WASL6E100	ELECTROLUX		
913217305	L60069TL1	AEG	914903553	LN68661	AEG	914526004	WASL1E102	ELECTROLUX		
913217306	L60260TL1	AEG	914903554	LN66260	AEG	914526005	WASL2E102	ELECTROLUX		
913217307	L60460TL1	AEG	914903555	LN66460	AEG	914526676	WASL1E101	ELECTROLUX		
913217308	L60460TL1	AEG	914903557	LN66460	AEG	914526677	WASL2E101	ELECTROLUX		
913217309	L70260TL1	AEG	914903558	LN66265	AEG	914526743	WASL3E101	ELECTROLUX		
913217310	L70269TL1	AEG	914903559	LN66465	AEG	914526744	WASL6E101	ELECTROLUX		
913217311	L70360TL1	AEG	914903560	LN66467	AEG	914526758	WASL3E102	ELECTROLUX		
913217312	L75260TL1	AEG	914903562	LN68665	AEG	914526759	WASL6E102	ELECTROLUX		
913217312	L75265TL1	AEG	914903563	L62840L	AEG	914533805	EWF1476EOW	ELECTROLUX		
913217313	L75269TL1	AEG	914903564	L64840L	AEG	914533904	EWF1484EDW	ELECTROLUX		
913217314	L75465TL1	AEG	914903565	L66840L	AEG	914533905	EWF1284EDW	ELECTROLUX		
913217315	L75460TL1	AEG	914903566	L62612	AEG	914533906	EWF1084EDW	ELECTROLUX		
913217322	L60260TL1	AEG	914903567	L64614	AEG	914533907	EWF1284EDW	ELECTROLUX		
913217323	L60465TL1	AEG	914903568	L64848L	AEG	914533908	EWF1484EDW	ELECTROLUX		
913217324	L70360TL1	AEG	914903569	L62640L	AEG	914533910	EWF1284EDW	ELECTROLUX		
913217325	L75469TL1	AEG	914903570	L64640L	AEG	914533912	EWF1483EDW	ELECTROLUX		
913217327	L75268TL1	AEG	914903571	L66640L	AEG	914602300	EWX14440W	ELECTROLUX		

PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND	MODEL	BRAND
913217328	L86560TL4	AEG	914903572	L52840D	AEG	914602400	EWX14540W	ELECTROLUX		
913217329	L70260TL1	AEG	914903573	L54840D	AEG	914602402	EWX14540W	ELECTROLUX		
913217330	L75460TL1	AEG	914903574	L54849D	AEG	914602403	EWX12540W	ELECTROLUX		
913217344	LB1483	AEG	914903575	LN68465	AEG	914604005	EWX12470W	ELECTROLUX		
913217347	L60460TL1	AEG	914903576	LN68665	AEG	914604007	EWX14470W	ELECTROLUX		
913217350	L60260TL1	AEG	914903577	L7664	AEG	914604014	EWX12470W	ELECTROLUX		
913217351	L60460TL1	AEG	914903578	LN66469	AEG	914604015	EWX12470W	ELECTROLUX		
913217352	L70360TL1	AEG	914903579	L62840L	AEG	914604026	EWX12470W	ELECTROLUX		
913217354	L60460TL1	AEG	914903580	L64840L	AEG	914604027	EWX12470W	ELECTROLUX		
913217366	L60260TL1	AEG	914903581	L60840L	AEG	914604202	EWX12480W	ELECTROLUX		
913217367	L75460TL1	AEG	914903584	L52840D	AEG	914604204	EWX15580W	ELECTROLUX		
913217375	L75260TL1	AEG	914903585	L54840D	AEG	914604215	EWX14480W	ELECTROLUX		
913217376	L70260TL1	AEG	914903586	L54849D	AEG	914604224	EWX12480W	ELECTROLUX		
913217377	L60260TL1	AEG	914903591	LN69460L	AEG	914604230	EWX147410W	ELECTROLUX		
913217378	L60060TL1	AEG	914903592	LN69660L	AEG	914604231	EWX147410W	ELECTROLUX		
913217380	L75260TLP1	AEG	914903596	LN69665L	AEG	914604232	EWX147410W	ELECTROLUX		
913217381	L70260TLP1	AEG	914903598	L6060	AEG	914604306	EWX14781W	ELECTROLUX		
913217382	L60260TLP1	AEG	914903599	L5482	AEG	914604307	EWX16781W	ELECTROLUX		
913217383	L60060TLP1	AEG	914903800	L72850	AEG	914604308	EWX14781W	ELECTROLUX		
913217389	L70260TLC1	AEG	914903801	L72850	AEG	914604310	EWX14581W	ELECTROLUX		
913217390	L75260TLC1	AEG	914903802	L74650	AEG	914604312	EWX16489W	ELECTROLUX		
913217398	L75260TLE1	AEG	914903803	L74659	AEG	914604313	WTGL3E100	ELECTROLUX		
913217399	L70260TLE1	AEG	914903804	L76659	AEG	914604315	EWX14582W	ELECTROLUX		
913217400	L60260TLE1	AEG	914903805	L64859	AEG	914604319	EWX14781W	ELECTROLUX		
913217401	L60060TLE1	AEG	914903806	L6485EX	AEG	914604325	EWX12580W	ELECTROLUX		
913217406	L60060TL1	AEG	914903807	L6685EX	AEG	914604342	EWX167443W	ELECTROLUX		
913217407	L60260TL1	AEG	914903808	L64857	AEG	914604345	EWX167443W	ELECTROLUX		
913217408	L70260TL1	AEG	914903809	L66855	AEG	914604408	EWX14791W	ELECTROLUX		
913217410	L60260TL1	AEG	914903810	L66857	AEG	914604409	EWX14791W	ELECTROLUX		
913217411	L75260TL1	AEG	914903811	L74658	AEG	914604410	EWX14791W	ELECTROLUX		
913217440	L71260TL	AEG	914903812	L76658	AEG	914604420	EWX14791W	ELECTROLUX		
913217442	L71270TL	AEG	914903813	L72650	AEG	914604421	EWX14791W	ELECTROLUX		
913217444	L74270TL	AEG	914903815	L74655	AEG	914604422	EWX14791W	ELECTROLUX		
913217445	L74270TL	AEG	914903816	L76650	AEG	914604424	EWX148540W	ELECTROLUX		
913217446	L74270TLE	AEG	914903817	L76655	AEG	914604425	EWX148540W	ELECTROLUX		
913217451	L74270TL	AEG	914903818	L76657	AEG	914604428	EWX148540W	ELECTROLUX		
913217465	L60060TL1	AEG	914903821	L74650	AEG	914604431	EWX148540W	ELECTROLUX		
913217466	L60260TL1	AEG	914903822	L76650	AEG	914605325	WTSL4E101	ELECTROLUX		
913217467	L70260TL1	AEG	914903823	L76656	AEG	914900153	EWF8586	ELECTROLUX		

PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND
913217476	L70265TLP	AEG	914903824	L76657	AEG	914900154	EW8576	ELECTROLUX
913217477	L70265TLC	AEG	914903831	L64853	AEG	914900155	EW8556	ELECTROLUX
913217478	L70265TL	AEG	914903834	LBELLA	AEG	914900156	EW1083	ELECTROLUX
913217480	L50060TL	AEG	914903835	LREGINA	AEG	914900157	EW1074	ELECTROLUX
913217481	L50260TL	AEG	914903837	LN76670	AEG	914900158	EW8555	ELECTROLUX
913217482	L61060TL	AEG	914903840	LN76475	AEG	914900159	EW1074	ELECTROLUX
913217483	L61260TL	AEG	914903841	LN76675	AEG	914900160	EW1073	ELECTROLUX
913217484	L61465TL	AEG	914903842	LN76677	AEG	914900161	EW1082	ELECTROLUX
913217492	L61069TL	AEG	914903843	L64859L	AEG	914900162	EW1282	ELECTROLUX
913217495	L61060TLE	AEG	914903844	L6485EXL	AEG	914900163	EW1481	ELECTROLUX
913217496	L61260TL	AEG	914903845	L6685EXL	AEG	914900166	EW1082	ELECTROLUX
913217497	L61260TL	AEG	914903846	L66855L	AEG	914900167	EW1082	ELECTROLUX
913217501	L61260TL	AEG	914903847	L64857L	AEG	914900168	EW1082B	ELECTROLUX
913217502	L61460TL	AEG	914903848	L66857L	AEG	914900169	EW1082B	ELECTROLUX
913217504	L61460TL	AEG	914903849	L64850LSPO	AEG	914900170	EW1082B	ELECTROLUX
913217505	L61460TL	AEG	914903850	L66850LSPO	AEG	914900171	EW1082G	ELECTROLUX
913217506	L61460TL	AEG	914903851	L74550	AEG	914900172	EW1082G	ELECTROLUX
913217509	L74270TL	AEG	914903852	L74559	AEG	914900173	EW1082G	ELECTROLUX
913217511	L71269TL	AEG	914903853	LAV5.0	AEG	914900174	EW1073	ELECTROLUX
913217515	L61260TLE	AEG	914903854	LAV5.0	AEG	914900175	EW1073	ELECTROLUX
913217516	L74270TL	AEG	914903855	LAV5.0	AEG	914900176	EW1073A	ELECTROLUX
913217521	L61264ETL	AEG	914903856	L62850L	AEG	914900177	EW1073A	ELECTROLUX
914524425	L56840	AEG	914903857	L64850L	AEG	914900178	EW1073A	ELECTROLUX
914524430	L56870	AEG	914903858	L66850L	AEG	914900179	EW1074	ELECTROLUX
914524431	L54870	AEG	914903859	L64850LE	AEG	914900180	EW1074	ELECTROLUX
914524526	LP2252F	AEG	914903860	L64852L	AEG	914900181	EW8555	ELECTROLUX
914524800	L60260MFL	AEG	914903863	L64858L	AEG	914900182	EW8555	ELECTROLUX
914524801	L60460MFL	AEG	914903866	L64850L	AEG	914900183	EW8586	ELECTROLUX
914524802	L50460FL	AEG	914903867	L64855L	AEG	914900184	EW8586	ELECTROLUX
914524803	L51460FL	AEG	914903868	L64856L	AEG	914900185	EW8576	ELECTROLUX
914524804	L60260MFL	AEG	914903869	L64858L	AEG	914900186	EW8576	ELECTROLUX
914524805	L60260MFL	AEG	914903870	L72550	AEG	914900187	EW8556	ELECTROLUX
914524806	L60260MFL	AEG	914903872	LN77470	AEG	914900188	EW8556	ELECTROLUX
914524808	L60460MFL	AEG	914903877	L72650H	AEG	914900189	EW1282	ELECTROLUX
914524809	L60466MFL	AEG	914903878	L74650H	AEG	914900190	EW1073	ELECTROLUX
914525532	L74658	AEG	914903879	L74750	AEG	914900191	EW8576	ELECTROLUX
914526003	L62953A3	AEG	914903881	LN73670	AEG	914900192	EW8556	ELECTROLUX
914526659	L74950A	AEG	914903882	LN75677	AEG	914900201	EW1282G	ELECTROLUX
914530504	L60460FL	AEG	914903883	LN75670	AEG	914900216	EW1082G	ELECTROLUX

PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND
914530505	L60468FL	AEG	914903884	LN77670	AEG	914900217	EW1082G	ELECTROLUX	914900273	EW1273S CN	ELECTROLUX
914530506	L60460FL	AEG	914903886	LN77675	AEG	914900218	EW1082G	ELECTROLUX	914902200	EW8012W	ELECTROLUX
914530508	L60660FL	AEG	914903887	LN68471S	AEG	914900219	EW1282G	ELECTROLUX	914902201	EW10012W	ELECTROLUX
914530510	L60660FL	AEG	914903889	L74756	AEG	914900226	EW1073	ELECTROLUX	914902208	EW8014W	ELECTROLUX
914530512	L60660FL	AEG	914903891	L74650	AEG	914900227	EW1273S	ELECTROLUX	914902300	EW10412W	ELECTROLUX
914530515	L61476FL	AEG	914903892	L76755	AEG	914900228	EW1273	ELECTROLUX	914902301	EW12412W	ELECTROLUX
914530516	L61470FL	AEG	914903894	L6650	AEG	914900229	EW1273	ELECTROLUX	914902302	EW10612W	ELECTROLUX
914530517	L60260FL	AEG	914903895	L64854L	AEG	914900230	EW1274	ELECTROLUX	914902303	EW12612W	ELECTROLUX
914530523	L60270FL	AEG	914903896	L74752	AEG	914900231	EW1274	ELECTROLUX	914902400	EW10712W	ELECTROLUX
914530524	L60270FL	AEG	914903897	LN77470	AEG	914900232	EW1273	ELECTROLUX	914902401	EW10020W	ELECTROLUX
914530543	L61473FL	AEG	914903898	LN77670	AEG	914900233	EW1274	ELECTROLUX	914902500	EW8020W	ELECTROLUX
914530544	L60260FL	AEG	914903899	LN77470	AEG	914900234	EW1274	ELECTROLUX	914902515	EW8040W	ELECTROLUX
914530545	L60460FL	AEG	914903900	L77470	AEG	914900235	EW1274	ELECTROLUX	914904400	EW10040W	ELECTROLUX
914530549	L6027FL	AEG	914903901	L74850	AEG	914900254	EW1273	ELECTROLUX	914904401	EW12040W	ELECTROLUX
914530573	L6047FL	AEG	914903902	L76850	AEG	914900255	NWF1076	ELECTROLUX	914904402	EW10149W	ELECTROLUX
914530576	L62080FL	AEG	914903903	L74850	AEG	914900255	NWF8566	ELECTROLUX	914904403	EW10149W	ELECTROLUX
914530577	L62280FL	AEG	914903904	L76850	AEG	914900255	NWF8566	ELECTROLUX	914904408	EW8040W	ELECTROLUX
914530578	L62083FL	AEG	914903905	L74850	AEG	914900273	EW1273S CN	ELECTROLUX	914904409	EW10040W	ELECTROLUX
914530579	L62283FL	AEG	914903906	L74859	AEG	914902200	EW8012W	ELECTROLUX	914904413	EW10149W	ELECTROLUX
914530580	L62280FL	AEG	914903907	L76859	AEG	914902201	EW10012W	ELECTROLUX	914904414	EW10149W	ELECTROLUX
914530581	L63472FL	AEG	914903908	L76859	AEG	914902208	EW8014W	ELECTROLUX	914904415	EW14070W	ELECTROLUX
914530582	L63470FL	AEG	914903909	L74850	AEG	914902300	EW10412W	ELECTROLUX	914904416	EW12070W	ELECTROLUX
914530583	L62670FL	AEG	914903913	L76850	AEG	914902301	EW12412W	ELECTROLUX	914904417	EW16070W	ELECTROLUX
914530585	L63478FL	AEG	914903914	L74850	AEG	914902302	EW10612W	ELECTROLUX	914904420	EW12070W	ELECTROLUX
914530586	L63479FL	AEG	914903915	L76850	AEG	914902303	EW12612W	ELECTROLUX	914904420	EW14079W	ELECTROLUX
914530587	L6347FL	AEG	914903916	L76855	AEG	914902400	EW10712W	ELECTROLUX			
914530588	L63476FL	AEG	914903917	L74659	AEG	914902401	EW10020W	ELECTROLUX			
914530591	L6227FL	AEG	914903918	L76659	AEG	914902500	EW8020W	ELECTROLUX			
914530592	L63472FL	AEG	914903919	L76855	AEG	914902515	EW8040W	ELECTROLUX			
914530593	L63472FL	AEG	914903920	L74859	AEG	914904400	EW10040W	ELECTROLUX			
914530594	L62470FL	AEG	914903921	L76859	AEG	914904401	EW12040W	ELECTROLUX			
914530595	L62270FL	AEG	914903922	LN78470	AEG	914904402	EW12040W	ELECTROLUX			
914530596	L62272FL	AEG	914903923	LN78670	AEG	914904403	EW10149W	ELECTROLUX			
914530597	L6227FL	AEG	914903924	LN78670	AEG	914904408	EW8040W	ELECTROLUX			
914530598	L6246FL	AEG	914903925	LN78675	AEG	914904409	EW10040W	ELECTROLUX			
914530639	L70470FL	AEG	914903926	LN78675	AEG	914904413	EW10149W	ELECTROLUX			
914530663	L73480FL	AEG	914903927	LN78675	AEG	914904414	EW10149W	ELECTROLUX			
914530665	L70272FL	AEG	914903928	LN78675	AEG	914904415	EW14070W	ELECTROLUX			
914530667	L73282FL	AEG	914903929	OKOLPLUS14	AEG	914904416	EW12070W	ELECTROLUX			
		AEG	914903929	OKOPLUS16	AEG	914904417	EW16070W	ELECTROLUX			
		AEG	914903929	LN78479	AEG	914904420	EW12070W	ELECTROLUX			

PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND	MODEL	BRAND
914530668	L73281FL	AEG	914903930	LN78679	AEG	914904452	EW16079W	ELECTROLUX		ELECTROLUX
914530669	L73283FL	AEG	914903931	L72850A	AEG	914904484	EW126110W	ELECTROLUX		ELECTROLUX
914530670	L73480FL	AEG	914903932	L74850A	AEG	914904488	EW146110W	ELECTROLUX		ELECTROLUX
914530671	L73281FL	AEG	914903933	L76850A	AEG	914904489	EW166110W	ELECTROLUX		ELECTROLUX
914530672	L73470PMFL	AEG	914903934	L74650LE	AEG	914904500	EW12270W	ELECTROLUX		ELECTROLUX
914530674	L73478FL	AEG	914903937	LN78479A	AEG	914904501	EW10670W	ELECTROLUX		ELECTROLUX
914530675	L73472VFL	AEG	914903938	L76859A	AEG	914904502	EW12670W	ELECTROLUX		ELECTROLUX
914530676	L73678FL	AEG	914903939	L74859A	AEG	914904503	EW10470W	ELECTROLUX		ELECTROLUX
914530678	L73489FL	AEG	914903942	LN79470A	AEG	914904504	EW12470W	ELECTROLUX		ELECTROLUX
914530679	L72475FL	AEG	914903943	LN79670A	AEG	914904505	EW14470W	ELECTROLUX		ELECTROLUX
914530680	L72675FL	AEG	914903944	L76850A	AEG	914904506	EW10240W	ELECTROLUX		ELECTROLUX
914530681	L73479FL	AEG	914903945	L72850A	AEG	914904507	EW10479W	ELECTROLUX		ELECTROLUX
914530682	L73476FL	AEG	914903946	L74850A	AEG	914904508	EW10679W	ELECTROLUX		ELECTROLUX
914530683	L7347EXFL	AEG	914903947	L74850A	AEG	914904510	EW10240W	ELECTROLUX		ELECTROLUX
914530684	L73477FL	AEG	914903948	L76855A	AEG	914904512	EW12449W	ELECTROLUX		ELECTROLUX
914530685	L72470FL	AEG	914903949	L76856A	AEG	914904513	EW12370W	ELECTROLUX		ELECTROLUX
914530686	L73472FL	AEG	914903950	LN73471S	AEG	914904514	EW14370W	ELECTROLUX		ELECTROLUX
914530687	L73476FL	AEG	914903952	L74858A	AEG	914904515	EW16370	ELECTROLUX		ELECTROLUX
914530688	L73479FL	AEG	914903954	LN78679A	AEG	914904515	EW16370W	ELECTROLUX		ELECTROLUX
914530689	L72670FL	AEG	914903956	L74657A3	AEG	914904516	EW14470W	ELECTROLUX		ELECTROLUX
914530690	L73679FL	AEG	914903958	L74650A3	AEG	914904517	EW16470W	ELECTROLUX		ELECTROLUX
914530691	L73470FL	AEG	914903959	L76650A3	AEG	914904518	EW12470W	ELECTROLUX		ELECTROLUX
914530692	L73673FL	AEG	914903962	L74850A3	AEG	914904519	EW14373W	ELECTROLUX		ELECTROLUX
914530693	L72470FL	AEG	914903963	L76850A3	AEG	914904522	EW12376W	ELECTROLUX		ELECTROLUX
914530694	L73471FL	AEG	914903964	L76855A3	AEG	914904541	EW12479W	ELECTROLUX		ELECTROLUX
914530695	L72670FL	AEG	914903965	L76856A3	AEG	914904547	EW10475W	ELECTROLUX		ELECTROLUX
914530696	L73471FL	AEG	914903966	LN79670A3	AEG	914904548	EW146410W	ELECTROLUX		ELECTROLUX
914530697	L73482FL	AEG	914903967	LN79470A3	AEG	914904554	EW126310W	ELECTROLUX		ELECTROLUX
914530698	L73484FL	AEG	914903969	L74651	AEG	914904555	EW126310W	ELECTROLUX		ELECTROLUX
914530699	L73283FL	AEG	913101301	EWB65210W	ELECTROLUX	914904558	EW126310W	ELECTROLUX		ELECTROLUX
914534000	L6247FL	AEG	913101302	EWB65210W	ELECTROLUX	914904559	EW146310W	ELECTROLUX		ELECTROLUX
914534001	L6227FL	AEG	913101302	EWB85210W	ELECTROLUX	914904561	EW126311W	ELECTROLUX		ELECTROLUX
914534006	L63473FL	AEG	913101307	EWB65210W	ELECTROLUX	914904563	EW146310W	ELECTROLUX		ELECTROLUX
914534009	L62283FL	AEG	913101308	EWB85210W	ELECTROLUX	914904600	EW12440W	ELECTROLUX		ELECTROLUX
914534100	L73480FL	AEG	913101340	EWT0862TDW	ELECTROLUX	914904601	EW12660W	ELECTROLUX		ELECTROLUX
914534102	L73478FL	AEG	913101341	EWT1062TDW	ELECTROLUX	914904700	EW14170W	ELECTROLUX		ELECTROLUX
914534103	L73280FL	AEG	913101342	EWT1066TDW	ELECTROLUX	914904701	EW12170W	ELECTROLUX		ELECTROLUX
914534104	LB4450	AEG	913101343	EWT0862TDW	ELECTROLUX	914904704	EW147110W	ELECTROLUX		ELECTROLUX
914534108	L73483FL	AEG	913101344	EWT1062TDW	ELECTROLUX	914904705	EW147210W	ELECTROLUX		ELECTROLUX

PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND
914534109	L73481FL	AEG	913101345	EWT1066TDW	ELECTROLUX	914904707	EW127210W	ELECTROLUX
914534111	L72270FL	AEG	913101346	EWT0862TDW	ELECTROLUX	914904709	EW147110W	ELECTROLUX
914534112	L73483FL	AEG	913101347	EWT1062TDW	ELECTROLUX	914904710	EW127111W	ELECTROLUX
914534113	L7347FL	AEG	913101348	EWT1066TDW	ELECTROLUX	914904800	EW12680W	ELECTROLUX
914605309	L16850	AEG	913101349	EWT0862TDW	ELECTROLUX	914904802	EW14370W	ELECTROLUX
914903210	L5460DFL	AEG	913101350	EWT1062TDW	ELECTROLUX	914904811	EW14280W	ELECTROLUX
914903211	L5462DFL	AEG	913101351	EWT1066TDW	ELECTROLUX	914904812	EW14283W	ELECTROLUX
914903212	L6460FL	AEG	913101352	EWT0862TDW	ELECTROLUX	914904813	EW147311W	ELECTROLUX
914903213	L6468AFL	AEG	913101353	EWT1062TDW	ELECTROLUX	914904814	EW147312W	ELECTROLUX
914903214	L6460AFL	AEG	913101354	EWT1066TDW	ELECTROLUX	914904815	EW147310W	ELECTROLUX
914903215	L6469AFL	AEG	913101355	EWT1062TDW	ELECTROLUX	914904817	EW147310W	ELECTROLUX
914903216	L5614FL	AEG	913101356	EWT1062TDW	ELECTROLUX	914904818	EW147312W	ELECTROLUX
914903217	L5462CS	AEG	913101357	EWT0862TDW	ELECTROLUX	914904823	EW167321W	ELECTROLUX
914903418	L5260FL	AEG	913101358	EWT1062TDW	ELECTROLUX	914904831	EW167321W	ELECTROLUX
914903419	L5468FL	AEG	913101359	EWT1066TDW	ELECTROLUX	914904832	EW147310W	ELECTROLUX
914903420	L5460FL	AEG	913101360	EWT1262TDW	ELECTROLUX	914904833	EW1673210	ELECTROLUX
914903421	L5460FL	AEG	913101361	EWT1262TDW	ELECTROLUX	914904837	EW147310W	ELECTROLUX
914903504	L64840	AEG	913101362	EWT1262TDW	ELECTROLUX	914904839	EW167320W	ELECTROLUX
914903509	L64848	AEG	913101363	EWT1262TDW	ELECTROLUX	914904840	EW107410W	ELECTROLUX
914903570	L64640L	AEG	913101364	EWT1262TDW	ELECTROLUX	914904841	EW127410W	ELECTROLUX
914903571	L66640L	AEG	913101365	EWT1262TDW	ELECTROLUX	914904900	EW12780W	ELECTROLUX
914903878	L74650H	AEG	913101366	EWT1262TDW	ELECTROLUX	914904901	EW14780W	ELECTROLUX
914903956	L74657A3	AEG	913101367	EWT1262TDW	ELECTROLUX	914904902	EW16589W	ELECTROLUX
914903958	L74650A3	AEG	913101368	EWT1266TDW	ELECTROLUX	914904903	EW14589W	ELECTROLUX
914903959	L76650A3	AEG	913101369	EWT1266TDW	ELECTROLUX	914904904	EW14470W	ELECTROLUX
913212031	L47330	AEG	913101370	EWT1266TDW	ELECTROLUX	914904905	EW16370W	ELECTROLUX
913212151	L47420	AEG	913101371	EWT1266TDW	ELECTROLUX	914904906	EW16470W	ELECTROLUX
913212221	L47230	AEG	913101372	EWT1266TDW	ELECTROLUX	914904907	EW14580W	ELECTROLUX
913212231	L47238	AEG	913101379	EWT1062TEW	ELECTROLUX	914904908	EW16580W	ELECTROLUX
913212241	L47239	AEG	913101380	EWT1262TEW	ELECTROLUX	914904911	EW16780W	ELECTROLUX
913212261	L46200	AEG	913101413	EWT11264TW	ELECTROLUX	914904912	EW14780W	ELECTROLUX
913212271	L46000	AEG	913101414	EWT1264TDW	ELECTROLUX	914904913	EW14781W	ELECTROLUX
913212281	L45200	AEG	913101415	EWT11064TW	ELECTROLUX	914904914	EW16781W	ELECTROLUX
913212291	L45000	AEG	913101416	EWT1064TDW	ELECTROLUX	914904915	EW14583W	ELECTROLUX
913212331	L47333	AEG	913101417	EWT0862TAW	ELECTROLUX	914904916	EW14781W	ELECTROLUX
913212401	L46113	AEG	913101420	EWT31064TW	ELECTROLUX	914904918	EW14781W	ELECTROLUX
913212461	L48540	AEG	913101421	EWT31264TW	ELECTROLUX	914904919	EW16781W	ELECTROLUX
913212471	L47330	AEG	913101427	EWT31064TW	ELECTROLUX	914904924	EW147441W	ELECTROLUX
913212531	L47430	AEG	913101428	EWT31264TW	ELECTROLUX	914904933	EW127440W	ELECTROLUX

PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND	MODEL	BRAND
913212651	L46310	AEG	913101441	EWT1264TDW	ELECTROLUX	914904935	EWF147440W	ELECTROLUX		ELECTROLUX
913212661	L47328	AEG	913101442	EWT26410W	ELECTROLUX	914904939	EWF147440W	ELECTROLUX		ELECTROLUX
913212681	L47330	AEG	913211061	EWT12420W	ELECTROLUX	914904940	EWF167440W	ELECTROLUX		ELECTROLUX
913213181	L47230	AEG	913211131	EWT13420W	ELECTROLUX	914905414	EWF10049W	ELECTROLUX		ELECTROLUX
913213191	L46000	AEG	913211171	EWT13420W	ELECTROLUX	914905415	EWF12049W	ELECTROLUX		ELECTROLUX
913213361	LB1380	AEG	913211591	EWT13420W	ELECTROLUX	913101386	TT1057	ELEKTRO HELIOS		ELEKTRO HELIOS
913213601	L46211	AEG	913211601	EWT12020W	ELECTROLUX	913101436	TT1058	ELEKTRO HELIOS		ELEKTRO HELIOS
913213611	L47430	AEG	913211881	EWT12420W	ELECTROLUX	913101437	TT1203	ELEKTRO HELIOS		ELEKTRO HELIOS
913214291	L46010	AEG	913212831	EWT10320W	ELECTROLUX	913216191	TT1200	ELEKTRO HELIOS		ELEKTRO HELIOS
913214551	L46009	AEG	913212831	EWT10420W	ELECTROLUX	913216811	TT1056	ELEKTRO HELIOS		ELEKTRO HELIOS
913214781	L46310L	AEG	913213481	WASL3T100	ELECTROLUX	913216931	TT1201	ELEKTRO HELIOS		ELEKTRO HELIOS
913215061	L46210LE	AEG	913213841	EWT14730W	ELECTROLUX	913217286	TT1202	ELEKTRO HELIOS		ELEKTRO HELIOS
913215311	L46210L	AEG	913214021	EWT13730W	ELECTROLUX	914604203	KT2255	ELEKTRO HELIOS		ELEKTRO HELIOS
913215321	L46010L	AEG	913214171	EWT11420W	ELECTROLUX	914604233	KT2256	ELEKTRO HELIOS		ELEKTRO HELIOS
913215331	L47030	AEG	913214181	EWT11730W	ELECTROLUX	914604237	KT4257	ELEKTRO HELIOS		ELEKTRO HELIOS
913215341	L46210L	AEG	913214611	EWT12428W	ELECTROLUX	914904418	TF1255E	ELEKTRO HELIOS		ELEKTRO HELIOS
913215351	L46310L	AEG	913214621	EWT8027W	ELECTROLUX	914904419	TF1455E	ELEKTRO HELIOS		ELEKTRO HELIOS
913215361	L47243A	AEG	913214631	EWT12427W	ELECTROLUX	914904461	TF1236E	ELEKTRO HELIOS		ELEKTRO HELIOS
913215461	L46210L	AEG	913214831	EWTS13931W	ELECTROLUX	914904520	TF1465E	ELEKTRO HELIOS		ELEKTRO HELIOS
913215481	L46211L	AEG	913215131	EWTS10120W	ELECTROLUX	914905406	TF1021E	ELEKTRO HELIOS		ELEKTRO HELIOS
913215661	L48540A	AEG	913215141	EWTS13120W	ELECTROLUX	914905407	TF1235E	ELEKTRO HELIOS		ELEKTRO HELIOS
913215671	L47430A	AEG	913215151	EWTS10420W	ELECTROLUX	913215631	QW1306T	HUSQVARNA		HUSQVARNA
913215681	L47230H	AEG	913215161	EWTS13420W	ELECTROLUX	913216851	QW1307T	HUSQVARNA		HUSQVARNA
913215711	L48540A	AEG	913215171	EWTS10620W	ELECTROLUX	913217085	QW14060T	HUSQVARNA		HUSQVARNA
913215721	L47430A	AEG	913215181	EWTS13620W	ELECTROLUX	913217349	QW14061T	HUSQVARNA		HUSQVARNA
913215731	L46210L	AEG	913215191	EWTS13741W	ELECTROLUX	914524604	QW18805	HUSQVARNA		HUSQVARNA
913215741	L46410LE	AEG	913215591	EWT13439W	ELECTROLUX	914525712	QW16905	HUSQVARNA		HUSQVARNA
913215751	LB1481	AEG	913215761	EWT106210W	ELECTROLUX	914526612	QW14785	HUSQVARNA		HUSQVARNA
913215891	L47430A	AEG	913215771	EWT126210W	ELECTROLUX	914526615	QW14785K	HUSQVARNA		HUSQVARNA
913215951	L47330A	AEG	913215821	EWB85110W	ELECTROLUX	914526635	QW14786	HUSQVARNA		HUSQVARNA
913215961	L47430A	AEG	913215831	EWB85210W	ELECTROLUX	914526645	QW14786K	HUSQVARNA		HUSQVARNA
913215981	L46215LE	AEG	913215841	EWT105410W	ELECTROLUX	914526661	QW14783	HUSQVARNA		HUSQVARNA
913216031	L47330A	AEG	913215861	EWT106510W	ELECTROLUX	914526688	QW14787	HUSQVARNA		HUSQVARNA
913216041	EWT136540W	AEG	913215911	EWB65110W	ELECTROLUX	914526721	QW16980	HUSQVARNA		HUSQVARNA
913216051	L47330A	AEG	913215921	EWB75110W	ELECTROLUX	914526748	QW16981	HUSQVARNA		HUSQVARNA
913216051	L47330A ES	AEG	913215931	EWB85210W	ELECTROLUX	914534007	QW126071	HUSQVARNA		HUSQVARNA
913216101	L47338A	AEG	913215941	EWB95210W	ELECTROLUX	914534008	QW146071	HUSQVARNA		HUSQVARNA
913216181	L46010L	AEG	913216041	EWT136540W	ELECTROLUX	914605306	QW1600HT	HUSQVARNA		HUSQVARNA
913216201	L47330A	AEG	913216061	WASL3T101	ELECTROLUX	914605501	QW1480HT	HUSQVARNA		HUSQVARNA

PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND
913216341	L47230A3	AEG	913216071	EWB95210W	ELECTROLUX	914903520	QW12675	HUSQVARNA			HUSQVARNA
913216601	L47330	AEG	913216081	EWT106210W	ELECTROLUX	914903521	QW14675	HUSQVARNA			HUSQVARNA
913216631	L46213L	AEG	913216281	EWT126450W	ELECTROLUX	914903522	QW14585	HUSQVARNA			HUSQVARNA
913216641	L47233A3	AEG	913216291	EWT145510W	ELECTROLUX	914903582	QW12676	HUSQVARNA			HUSQVARNA
913216791	L46310L	AEG	913216351	EWT136450W	ELECTROLUX	914903583	QW14676	HUSQVARNA			HUSQVARNA
913217004	L70360TL	AEG	913216361	EWB105110W	ELECTROLUX	914903819	QW14765	HUSQVARNA			HUSQVARNA
913217005	L70268TL	AEG	913216371	EWB125110W	ELECTROLUX	914903820	QW16775	HUSQVARNA			HUSQVARNA
913217006	L60260TL	AEG	913216401	EWT105210W	ELECTROLUX	914903861	QW14692	HUSQVARNA			HUSQVARNA
913217007	L60060TL	AEG	913216411	EWT135210W	ELECTROLUX	914903862	QW16690	HUSQVARNA			HUSQVARNA
913217011	L86560TL	AEG	913216421	EWT105410W	ELECTROLUX	914903874	QW16771	HUSQVARNA			HUSQVARNA
913217012	L76469TL	AEG	913216431	EWT135410W	ELECTROLUX	914903875	QW14694	HUSQVARNA			HUSQVARNA
913217013	L76460TL	AEG	913216441	EWT105510W	ELECTROLUX	914903876	QW16694	HUSQVARNA			HUSQVARNA
913217014	L76260TL	AEG	913216451	EWT135510W	ELECTROLUX	914903910	QW14695	HUSQVARNA			HUSQVARNA
913217015	L70360TL	AEG	913216461	EWT136640W	ELECTROLUX	914903911	QW14805	HUSQVARNA			HUSQVARNA
913217016	L70260TL	AEG	913216481	EWT116210W	ELECTROLUX	914903912	QW16778	HUSQVARNA			HUSQVARNA
913217017	L60260TL	AEG	913216591	EWT136540W	ELECTROLUX	914903936	QW16800	HUSQVARNA			HUSQVARNA
913217018	L60060TL	AEG	913216651	EWB125115W	ELECTROLUX	914522667	RENLI6778	IKEA			IKEA
913217020	L60465TL	AEG	913216661	EWT136210W	ELECTROLUX	914522668	RENLI6778	IKEA			IKEA
913217022	L70269TL	AEG	913216671	EWB135110W	ELECTROLUX	914522672	RENLI6778	IKEA			IKEA
913217028	L76460TL	AEG	913216711	EWT105417W	ELECTROLUX	914522673	RENLI6778	IKEA			IKEA
913217030	L76460TL	AEG	913216721	EWT105210W	ELECTROLUX	914604347	RENLI6778	IKEA			IKEA
913217033	L60460TL	AEG	913216731	EWT106210W	ELECTROLUX	914604348	RENLI6778	IKEA			IKEA
913217034	L60460TL	AEG	913216741	EWB105110W	ELECTROLUX	913101268	RTT1010	ROSENLEW			ROSENLEW
913217035	L60460TL	AEG	913216751	EWB125115W	ELECTROLUX	913101281	RTT2120	ROSENLEW			ROSENLEW
913217036	L60260TL	AEG	913216761	EWB125115W	ELECTROLUX	913101283	RTT1020	ROSENLEW			ROSENLEW
913217041	L60260TL	AEG	913216771	EWT135410W	ELECTROLUX	913101290	RTT1011	ROSENLEW			ROSENLEW
913217044	L47223	AEG	913216781	EWT135418W	ELECTROLUX	913101316	RTT1015	ROSENLEW			ROSENLEW
913217049	LB1482	AEG	913216831	EWT135410W	ELECTROLUX	913101317	RTT1025	ROSENLEW			ROSENLEW
913217056	L70360TL	AEG	913216941	EWT136459W	ELECTROLUX	913101318	RTT2125	ROSENLEW			ROSENLEW
913217071	L45000	AEG	913217039	EWT105410W	ELECTROLUX	913101373	RTT1012	ROSENLEW			ROSENLEW
913217072	L45200	AEG	913217040	EWT105514W	ELECTROLUX	913101374	RTT1260	ROSENLEW			ROSENLEW
913217075	L47230H	AEG	913217043	EWB85100W	ELECTROLUX	913101404	RTT2135	ROSENLEW			ROSENLEW
913217081	L60260TL	AEG	913217046	EWT135510W	ELECTROLUX	913101406	RTT1016	ROSENLEW			ROSENLEW
913217082	L60460TL	AEG	913217048	EWT136414W	ELECTROLUX	913101407	RTT1026	ROSENLEW			ROSENLEW
913217083	L70360TL	AEG	913217050	EWB105110W	ELECTROLUX	913101429	RTTB1016	ROSENLEW			ROSENLEW
913217086	L60060TL	AEG	913217051	EWT116212W	ELECTROLUX	913101430	RTTB1026	ROSENLEW			ROSENLEW
913217087	L60260TL	AEG	913217052	EWT116210W	ELECTROLUX	913101431	RTTB1266	ROSENLEW			ROSENLEW
913217088	L70260TL	AEG	913217053	EWT116210W	ELECTROLUX	913101432	RTTB2126	ROSENLEW			ROSENLEW
913217100	L60069TL	AEG	913217057	EWT106414W	ELECTROLUX	913101433	RTTB2120	ROSENLEW			ROSENLEW

PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND
913217111	L70260TL	AEG	913217058	EWB125112W	ELECTROLUX	913101447	RTTB1012	ROSENLEW			
913217153	L86560TLP	AEG	913217059	EWB135112W	ELECTROLUX	913212941	RRT5370	ROSENLEW			
913217154	L76260TLP	AEG	913217060	EWT106411W	ELECTROLUX	913212951	RRT5270	ROSENLEW			
913217155	L70260TLP	AEG	913217061	EWT136411W	ELECTROLUX	913212961	RRT4350	ROSENLEW			
913217156	L60260TLP	AEG	913217062	EWT106511W	ELECTROLUX	913212981	RRT4253	ROSENLEW			
913217157	L60060TLP	AEG	913217063	EWT136511W	ELECTROLUX	913216861	RRT5300	ROSENLEW			
913217182	L70260TL	AEG	913217064	EWT136551W	ELECTROLUX	913216871	RRT6310	ROSENLEW			
913217271	L60460TL	AEG	913217065	EWT126451W	ELECTROLUX	913216881	RRT1060	ROSENLEW			
913217272	L60460TL	AEG	913217068	EWT136451W	ELECTROLUX	913217170	RRT1061	ROSENLEW			
914524400	L52840	AEG	913217070	EWT136414W	ELECTROLUX	913217171	RRT5400	ROSENLEW			
914524401	L50843	AEG	913217076	EWT136410W	ELECTROLUX	913217172	RRT6410	ROSENLEW			
914524403	L54840	AEG	913217077	EWT136418W	ELECTROLUX	913217404	RRTB1061	ROSENLEW			
914524404	L50840	AEG	913217089	EWB125119W	ELECTROLUX	913217405	RRTB6410	ROSENLEW			
914524406	LP5052	AEG	913217091	EWB135116W	ELECTROLUX	914904426	RTF3520	ROSENLEW			
914524407	LP5252	AEG	913217098	EWB125115W	ELECTROLUX	914904427	RTF3540	ROSENLEW			
914524408	L54840	AEG	913217099	EWB125116W	ELECTROLUX	914904525	RTF5720	ROSENLEW			
914524409	L54630	AEG	913217101	WASL3T200	ELECTROLUX	914904804	RTF5740	ROSENLEW			
914524410	L54638	AEG	913217102	WAGL2T200	ELECTROLUX	914904863	RTF6480	ROSENLEW			
914524411	L54840	AEG	913217103	EWT146511W	ELECTROLUX	914904877	RTFB6480	ROSENLEW			
914524412	L52840	AEG	913217104	EWT136511W	ELECTROLUX	914905410	RTF3300	ROSENLEW			
914524413	L52840	AEG	913217105	EWT126451W	ELECTROLUX	914905411	RTF3301	ROSENLEW			
914524414	L55845	AEG	913217106	EWT136451W	ELECTROLUX	913101216	ZWQ5100	ZANUSSI			
914524416	L50840	AEG	913217109	EWT136451W	ELECTROLUX	913101217	ZWQ5101	ZANUSSI			
914524417	L52840	AEG	913217110	EWT136410W	ELECTROLUX	913101218	ZWQ6100	ZANUSSI			
914524418	L52840	AEG	913217112	EWB126210W	ELECTROLUX	913101223	ZWY180	ZANUSSI			
914524420	L50840	AEG	913217113	EWB136210W	ELECTROLUX	913101224	ZWY1100	ZANUSSI			
914524422	LP5240	AEG	913217118	EWT126215W	ELECTROLUX	913101231	ZWP580	ZANUSSI			
914524423	L56840	AEG	913217119	EWT136215W	ELECTROLUX	913101238	ZWQ6120	ZANUSSI			
914524425	L56840	AEG	913217120	EWB126216W	ELECTROLUX	913101266	ZWY2100	ZANUSSI			
914524426	LP5452	AEG	913217121	EWB136216W	ELECTROLUX	913101267	ZWY2120	ZANUSSI			
914524427	LP5652	AEG	913217122	EWT106411W	ELECTROLUX	913101270	ZWY1100	ZANUSSI			
914524428	L54840	AEG	913217126	EWT136541W	ELECTROLUX	913101274	ZWY1120	ZANUSSI			
914524430	L56870	AEG	913217127	EWT106211W	ELECTROLUX	913101295	ZWY1100	ZANUSSI			
914524431	L54870	AEG	913217128	EWT106411W	ELECTROLUX	913101295	ZWY2120	ZANUSSI			
914524500	L64840	AEG	913217129	EWT106511W	ELECTROLUX	913101298	ZWY160	ZANUSSI			
914524501	L62840	AEG	913217130	EWT136411W	ELECTROLUX	913101310	ZWY1200	ZANUSSI			
914524502	L64840	AEG	913217131	EWT136511W	ELECTROLUX	913101311	ZWY1220	ZANUSSI			
914524503	L66840	AEG	913217135	EWT106211W	ELECTROLUX	913101312	ZWY2200	ZANUSSI			
914524504	L60843	AEG	913217140	EWB126219W	ELECTROLUX	913101313	ZWY2220	ZANUSSI			

PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND
914524505	L64841	AEG	913217141	EWT106211W	ELECTROLUX	913101324	ZWQ5102	ZANUSSI		ZWQ5102	ZANUSSI
914524506	L64842	AEG	913217142	EWT106211W	ELECTROLUX	913101325	ZWQ5103	ZANUSSI		ZWQ5103	ZANUSSI
914524507	L64843	AEG	913217143	EWT106211W	ELECTROLUX	913101326	ZWP581	ZANUSSI		ZWP581	ZANUSSI
914524508	L66843	AEG	913217144	EWT106211W	ELECTROLUX	913101327	ZWQ5122	ZANUSSI		ZWQ5122	ZANUSSI
914524509	L64845	AEG	913217145	EWT106211W	ELECTROLUX	913101329	ZWQ5102	ZANUSSI		ZWQ5102	ZANUSSI
914524510	L60640	AEG	913217146	EWT136541W	ELECTROLUX	913101330	ZWQ6100	ZANUSSI		ZWQ6100	ZANUSSI
914524511	L62640	AEG	913217148	EWT136541W	ELECTROLUX	913101331	ZWQ6120	ZANUSSI		ZWQ6120	ZANUSSI
914524512	L68640	AEG	913217149	EWB106110W	ELECTROLUX	913101332	ZWP582	ZANUSSI		ZWP582	ZANUSSI
914524513	L62840	AEG	913217150	EWT136641W	ELECTROLUX	913101333	ZWQ5104	ZANUSSI		ZWQ5104	ZANUSSI
914524514	L72640	AEG	913217151	EWT136641W	ELECTROLUX	913101334	ZWQ5105	ZANUSSI		ZWQ5105	ZANUSSI
914524515	L60840	AEG	913217158	EWB126111W	ELECTROLUX	913101335	ZWQ6101	ZANUSSI		ZWQ6101	ZANUSSI
914524520	WA1356F	AEG	913217159	EWB126110W	ELECTROLUX	913101339	ZWY1105	ZANUSSI		ZWY1105	ZANUSSI
914524521	LB3252	AEG	913217160	EWB106110W	ELECTROLUX	913101383	ZWY2220	ZANUSSI		ZWY2220	ZANUSSI
914524522	LB3452	AEG	913217161	EWB106110W	ELECTROLUX	913101384	ZWY2220	ZANUSSI		ZWY2220	ZANUSSI
914524523	LB3652	AEG	913217162	EWB126110W	ELECTROLUX	913101385	ZWQ5105C	ZANUSSI		ZWQ5105C	ZANUSSI
914524525	L6482	AEG	913217163	EWT106417W	ELECTROLUX	913101387	ZWQ35104	ZANUSSI		ZWQ35104	ZANUSSI
914524526	LP2252F	AEG	913217164	EWB86210W	ELECTROLUX	913101388	ZWQ75104	ZANUSSI		ZWQ75104	ZANUSSI
914524527	L64840	AEG	913217165	EWB96210W	ELECTROLUX	913101389	ZWQ35105	ZANUSSI		ZWQ35105	ZANUSSI
914524528	L64640	AEG	913217166	EWT106411W	ELECTROLUX	913101391	ZWQ35121	ZANUSSI		ZWQ35121	ZANUSSI
914524529	L66840	AEG	913217167	EWT126451W	ELECTROLUX	913101392	ZWQ75121	ZANUSSI		ZWQ75121	ZANUSSI
914524530	L64840	AEG	913217168	EWB86210W	ELECTROLUX	913101393	ZWQ5121	ZANUSSI		ZWQ5121	ZANUSSI
914524531	L62840	AEG	913217169	EWT106511W	ELECTROLUX	913101394	ZWQ36101	ZANUSSI		ZWQ36101	ZANUSSI
914524532	L64640	AEG	913217193	EWB76210W	ELECTROLUX	913101395	ZWQ76101	ZANUSSI		ZWQ76101	ZANUSSI
914524533	L64641	AEG	913217195	EWB85050W	ELECTROLUX	913101396	ZWQ36121	ZANUSSI		ZWQ36121	ZANUSSI
914524534	L65845	AEG	913217196	EWB86110W	ELECTROLUX	913101397	ZWQ76121	ZANUSSI		ZWQ76121	ZANUSSI
914524535	L64840	AEG	913217197	EWT136511W	ELECTROLUX	913101398	ZWQ6121	ZANUSSI		ZWQ6121	ZANUSSI
914524536	L72840M	AEG	913217198	EWT126451W	ELECTROLUX	913101403	ZWP582	ZANUSSI		ZWP582	ZANUSSI
914524537	L66840	AEG	913217202	EWT1567VDW	ELECTROLUX	913101408	ZWY1106	ZANUSSI		ZWY1106	ZANUSSI
914524543	L60847	AEG	913217204	EWT1366HDW	ELECTROLUX	913101410	ZWY31106	ZANUSSI		ZWY31106	ZANUSSI
914524544	L64840L	AEG	913217205	EWT1466HDW	ELECTROLUX	913101411	ZWY31206	ZANUSSI		ZWY31206	ZANUSSI
914524545	L64840L	AEG	913217207	EWT1066EDW	ELECTROLUX	913101422	ZWY2200	ZANUSSI		ZWY2200	ZANUSSI
914524546	L66840L	AEG	913217208	EWT1266EDW	ELECTROLUX	913101423	ZWY2220	ZANUSSI		ZWY2220	ZANUSSI
914524547	L60640	AEG	913217209	EWT1366EDW	ELECTROLUX	913101434	ZWYB1105	ZANUSSI		ZWYB1105	ZANUSSI
914524550	L62840L	AEG	913217211	EWT0862EDW	ELECTROLUX	913101435	ZWYB180	ZANUSSI		ZWYB180	ZANUSSI
914524551	L60640	AEG	913217212	EWT1062EDW	ELECTROLUX	913101446	ZWQ6102	ZANUSSI		ZWQ6102	ZANUSSI
914524552	L66640	AEG	913217214	EWT1362EDW	ELECTROLUX	913212381	ZWQ6130	ZANUSSI		ZWQ6130	ZANUSSI
914524553	L64640	AEG	913217216	EWT1262EDW	ELECTROLUX	913213321	ZWK5120	ZANUSSI		ZWK5120	ZANUSSI
914524557	L60840L	AEG	913217221	EWT1367VDW	ELECTROLUX	913213471	ZWT3202	ZANUSSI		ZWT3202	ZANUSSI
914524558	L62840L	AEG	913217224	EWT1366HDW	ELECTROLUX	913214491	ZWT12120W	ZANUSSI		ZWT12120W	ZANUSSI

PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND
914524559	L64680L	AEG	913217225	EWT1066EDW	ELECTROLUX	913216231	ZWQ598	ZANUSSI		ZWQ598	ZANUSSI
914524560	L64840L	AEG	913217226	EWT1266EDW	ELECTROLUX	913216241	ZWQ5108	ZANUSSI		ZWQ5108	ZANUSSI
914524561	L66840L	AEG	913217227	EWT1062EDW	ELECTROLUX	913216271	ZWT3203	ZANUSSI		ZWT3203	ZANUSSI
914524564	L60840L	AEG	913217228	EWT1367VDW	ELECTROLUX	913216321	ZWQ598	ZANUSSI		ZWQ598	ZANUSSI
914524565	L60640	AEG	913217229	EWT1567VDW	ELECTROLUX	913216331	ZWT3303	ZANUSSI		ZWT3303	ZANUSSI
914524566	LB3253	AEG	913217230	EWT1066ODW	ELECTROLUX	913216521	ZWQ360	ZANUSSI		ZWQ360	ZANUSSI
914524567	LB3453	AEG	913217231	EWT1062EDW	ELECTROLUX	913216531	ZWQ260	ZANUSSI		ZWQ260	ZANUSSI
914524568	LB3653	AEG	913217232	EWT1567VDW	ELECTROLUX	913216541	ZWQ270	ZANUSSI		ZWQ270	ZANUSSI
914524600	L78840	AEG	913217233	EWT1062EDW	ELECTROLUX	913216551	ZWQ385	ZANUSSI		ZWQ385	ZANUSSI
914524601	L78840	AEG	913217234	EWT1366HDW	ELECTROLUX	913216561	ZWQ380	ZANUSSI		ZWQ380	ZANUSSI
914524602	L78840	AEG	913217235	EWT1066EDW	ELECTROLUX	913216571	ZWQ5100	ZANUSSI		ZWQ5100	ZANUSSI
914524606	LR2852	AEG	913217236	EWT1266EDW	ELECTROLUX	913216611	ZWQ5108	ZANUSSI		ZWQ5108	ZANUSSI
914524607	LN78860	AEG	913217237	EWT1062EDW	ELECTROLUX	913216621	ZWQ6128	ZANUSSI		ZWQ6128	ZANUSSI
914524608	LN78860	AEG	913217238	EWT1262EDW	ELECTROLUX	913216821	ZWQ5128	ZANUSSI		ZWQ5128	ZANUSSI
914525400	L52850	AEG	913217239	EWT1066ODW	ELECTROLUX	913217054	ZWQ5128	ZANUSSI		ZWQ5128	ZANUSSI
914525500	L62850	AEG	913217240	EWT1462EDW	ELECTROLUX	913217173	ZWQ599	ZANUSSI		ZWQ599	ZANUSSI
914525501	L62853	AEG	913217241	EWT1066ODW	ELECTROLUX	913217174	ZWQ5109	ZANUSSI		ZWQ5109	ZANUSSI
914525502	L72853	AEG	913217242	EWT1066ODW	ELECTROLUX	913217175	ZWQ6129	ZANUSSI		ZWQ6129	ZANUSSI
914525503	L64851	AEG	913217243	EWT1567VDW	ELECTROLUX	913217176	ZWQ5129	ZANUSSI		ZWQ5129	ZANUSSI
914525504	L72650	AEG	913217244	EWT1066EDW	ELECTROLUX	913217181	ZWQ5129	ZANUSSI		ZWQ5129	ZANUSSI
914525505	L68650	AEG	913217245	EWT1066EDW	ELECTROLUX	913217188	ZWQ575SO	ZANUSSI		ZWQ575SO	ZANUSSI
914525506	L74653	AEG	913217246	EWT1266EDW	ELECTROLUX	913217189	ZWQ570SO	ZANUSSI		ZWQ570SO	ZANUSSI
914525507	L75655	AEG	913217247	EWT1262EDW	ELECTROLUX	913217190	ZWQ580SO	ZANUSSI		ZWQ580SO	ZANUSSI
914525508	L70657	AEG	913217248	EWT1266EDW	ELECTROLUX	913217191	ZWQ590SO	ZANUSSI		ZWQ590SO	ZANUSSI
914525509	L70654	AEG	913217250	EWT1266EDW	ELECTROLUX	913217192	ZWQ7100SO	ZANUSSI		ZWQ7100SO	ZANUSSI
914525510	L72656	AEG	913217251	EWT1466HDW	ELECTROLUX	913217194	ZWQ585SO	ZANUSSI		ZWQ585SO	ZANUSSI
914525511	L71655	AEG	913217252	EWT1266EDW	ELECTROLUX	913217270	ZWQ7100SO	ZANUSSI		ZWQ7100SO	ZANUSSI
914525512	L72658	AEG	913217254	EWT1062EDW	ELECTROLUX	913217283	ZWQ6126C	ZANUSSI		ZWQ6126C	ZANUSSI
914525513	L74652	AEG	913217259	EWT1062EDW	ELECTROLUX	913217293	ZWT3204	ZANUSSI		ZWT3204	ZANUSSI
914525514	L60850	AEG	913217260	EWT1262EDW	ELECTROLUX	913217294	ZWT3304	ZANUSSI		ZWT3304	ZANUSSI
914525515	L74651	AEG	913217261	EWT1366EDW	ELECTROLUX	913217414	ZWQB5129	ZANUSSI		ZWQB5129	ZANUSSI
914525516	L74652	AEG	913217264	EWT1066EEW	ELECTROLUX	914206105	ZWF10070W1	ZANUSSI		ZWF10070W1	ZANUSSI
914525517	L76651	AEG	913217265	EWT1067EDW	ELECTROLUX	914206107	ZWF10070W	ZANUSSI		ZWF10070W	ZANUSSI
914525519	L74650	AEG	913217266	EWT1367EDW	ELECTROLUX	914206151	ZWG6100	ZANUSSI		ZWG6100	ZANUSSI
914525521	L76853M	AEG	913217273	EWB126210W	ELECTROLUX	914206152	ZWG3100	ZANUSSI		ZWG3100	ZANUSSI
914525527	L72655	AEG	913217274	EWB106110W	ELECTROLUX	914206154	ZWGH7105	ZANUSSI		ZWGH7105	ZANUSSI
914525528	LB3453N	AEG	913217276	EWB1466HDW	ELECTROLUX	914206155	ZWG6102	ZANUSSI		ZWG6102	ZANUSSI
914525529	L64853	AEG	913217277	EWT1066EDW	ELECTROLUX	914206156	ZWG6105C	ZANUSSI		ZWG6105C	ZANUSSI
914525530	L76658	AEG	913217279	EWT1262ELW	ELECTROLUX	914206157	ZWG6105	ZANUSSI		ZWG6105	ZANUSSI

PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND
914525531	LREGINA	AEG	913217284	EWT1262EDW	ELECTROLUX	914206158	ZWG6104	ZANUSSI			
914525532	L74658	AEG	913217285	EWT1366EDW	ELECTROLUX	914206160	ZWG3100	ZANUSSI			
914525533	LBELLA	AEG	913217292	EWT1366HZW	ELECTROLUX	914206163	ZWG6101	ZANUSSI			
914525534	L64851	AEG	913217332	EWT1264ELW	ELECTROLUX	914207101	ZWH5105	ZANUSSI			
914525535	L74650	AEG	913217333	EWT1364ELW	ELECTROLUX	914207102	ZWH3105	ZANUSSI			
914525536	L64850	AEG	913217335	EWT1365EYW	ELECTROLUX	914207103	ZWH6105	ZANUSSI			
914525537	L64850	AEG	913217336	EWT1262EWW	ELECTROLUX	914207105	ZWH3105	ZANUSSI			
914525538	L74650	AEG	913217338	EWT1162EZW	ELECTROLUX	914207105	ZWH6105	ZANUSSI			
914525539	L76650	AEG	913217339	EWT1363ESW	ELECTROLUX	914207106	ZWH7100C	ZANUSSI			
914525540	L72650	AEG	913217340	EWT1261ESW	ELECTROLUX	914207107	ZWH5105	ZANUSSI			
914525542	L60550	AEG	913217341	EWB125118W	ELECTROLUX	914207109	ZWH6105	ZANUSSI			
914525543	L705500	AEG	913217342	EWT1361ESW	ELECTROLUX	914207110	ZWH7101	ZANUSSI			
914525544	L725500	AEG	913217345	WAGL2T201	ELECTROLUX	914207111	ZWH5104	ZANUSSI			
914525545	L72650	AEG	913217358	EWT0866EEW	ELECTROLUX	914212107	ZWF5100	ZANUSSI			
914525546	LAV5.0	AEG	913217359	EWT1062EFW	ELECTROLUX	914212112	ZWF10020W	ZANUSSI			
914525547	LAV5.0	AEG	913217360	EWT0862EOW	ELECTROLUX	914212113	ZWF6115	ZANUSSI			
914525548	LAV5.0	AEG	913217361	EWB85055W	ELECTROLUX	914216103	ZWF12070W1	ZANUSSI			
914525549	LAV5.0	AEG	913217362	EWB85105W	ELECTROLUX	914216104	ZWF12070W	ZANUSSI			
914525550	L75655	AEG	913217364	EWB85215W	ELECTROLUX	914216105	ZWF12170W	ZANUSSI			
914525552	L705500	AEG	913217365	EWT106415W	ELECTROLUX	914216152	ZWG6120	ZANUSSI			
914525553	L725500	AEG	913217368	EWT1360HYW	ELECTROLUX	914216153	ZWG3120	ZANUSSI			
914525554	L72557	AEG	913217369	EWT1364EDW	ELECTROLUX	914216156	ZWG6122	ZANUSSI			
914525555	L72559	AEG	913217370	EWT1264EDW	ELECTROLUX	914216158	ZWG5125	ZANUSSI			
914525560	L64850L	AEG	913217371	EWT1064EDW	ELECTROLUX	914216160	ZWG5124	ZANUSSI			
914525561	L64850	AEG	913217372	EWT11264EW	ELECTROLUX	914216170	ZWG6122	ZANUSSI			
914525563	L74750	AEG	913217373	EWT11064EW	ELECTROLUX	914217101	ZWH5125	ZANUSSI			
914525565	L66850L	AEG	913217384	EWB76215W	ELECTROLUX	914217102	ZWH3125	ZANUSSI			
914525566	L64850L	AEG	913217385	EWB86215W	ELECTROLUX	914217103	ZWH6125	ZANUSSI			
914525568	L62850L	AEG	913217386	EWB96215W	ELECTROLUX	914217105	ZWH5125	ZANUSSI			
914525569	L74750	AEG	913217387	EWT1062EFW	ELECTROLUX	914217109	ZWH5125	ZANUSSI			
914525574	L64857L	AEG	913217388	EWT1066EEW	ELECTROLUX	914217111	ZWH6125	ZANUSSI			
914525575	L62850L	AEG	913217415	EWT1264AOW	ELECTROLUX	914217113	ZWH5124	ZANUSSI			
914525576	L64880L	AEG	913217420	EWT11266AW	ELECTROLUX	914226101	ZWF14170W	ZANUSSI			
914525577	L66880L	AEG	913217421	EWT1266AOW	ELECTROLUX	914226103	ZWF14070W1	ZANUSSI			
914525578	L64850LE	AEG	913217425	EWT1276EOW	ELECTROLUX	914282104	ZWF365	ZANUSSI			
914525582	L60850L	AEG	913217426	EWT11276EW	ELECTROLUX	914282105	ZWF385	ZANUSSI			
914525583	L72750	AEG	913217427	EWT31276EW	ELECTROLUX	914282107	ZWF560	ZANUSSI			
914525584	L64850LE	AEG	913217429	EWT1276EOW	ELECTROLUX	914282108	ZWF580	ZANUSSI			
914525586	L72750	AEG	913217430	EWT1276EOW	ELECTROLUX	914282116	ZWF682	ZANUSSI			

PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND
914525587	L64850LE	AEG	913217431	EWT1376EOW	ELECTROLUX	914282117	ZWF365	ZANUSSI		ZWF365	ZANUSSI
914525591	L74651H	AEG	913217468	EWT126218W	ELECTROLUX	914282118	ZWF685	ZANUSSI		ZWF685	ZANUSSI
914525592	LB3463	AEG	913217469	EWT126218W	ELECTROLUX	914282119	ZWF684	ZANUSSI		ZWF684	ZANUSSI
914525594	L74651H	AEG	913217470	EWT1276EOW	ELECTROLUX	914282132	ZWF550	ZANUSSI		ZWF550	ZANUSSI
914525595	L76750	AEG	913217471	EWT1363EDW	ELECTROLUX	914286150	ZWG380	ZANUSSI		ZWG380	ZANUSSI
914525596	L74752	AEG	913217472	EWT1266AOW	ELECTROLUX	914286151	ZWG585	ZANUSSI		ZWG585	ZANUSSI
914525598	L64857L	AEG	913217473	EWT1266AOW	ELECTROLUX	914338807	ZWG684V	ZANUSSI		ZWG684V	ZANUSSI
914525600	L76850	AEG	913217475	EWT1276EOW	ELECTROLUX	914338808	ZWG6100V	ZANUSSI		ZWG6100V	ZANUSSI
914525601	L74850	AEG	913217479	EWT1274AOW	ELECTROLUX	914338809	ZWG6125V	ZANUSSI		ZWG6125V	ZANUSSI
914525602	L76850	AEG	913217514	EWT1062EOW	ELECTROLUX	914338810	ZWH6100V	ZANUSSI		ZWH6100V	ZANUSSI
914525603	L74850	AEG	913217517	EWT1266FOV	ELECTROLUX	914338811	ZWH6120V	ZANUSSI		ZWH6120V	ZANUSSI
914525604	L76850	AEG	913217519	EWT31262EW	ELECTROLUX	914338902	ZWG7102V	ZANUSSI		ZWG7102V	ZANUSSI
914525606	L74850M	AEG	913217520	EWT31264EW	ELECTROLUX	914338903	ZWH7100V	ZANUSSI		ZWH7100V	ZANUSSI
914525607	L76850	AEG	913217522	EWT1273ASW	ELECTROLUX	914518005	ZWC85010W	ZANUSSI		ZWC85010W	ZANUSSI
914525608	L74850	AEG	914206101	EFW10160W	ELECTROLUX	914518109	ZWC10510W	ZANUSSI		ZWC10510W	ZANUSSI
914525610	L72850	AEG	914206102	EFW10160W	ELECTROLUX	914519000	ZWC6050W	ZANUSSI		ZWC6050W	ZANUSSI
914525611	L70850	AEG	914206103	EFW10260W	ELECTROLUX	914519001	ZWC7050W	ZANUSSI		ZWC7050W	ZANUSSI
914525612	L74850	AEG	914206111	EFW106110W	ELECTROLUX	914519002	ZWC5050W	ZANUSSI		ZWC5050W	ZANUSSI
914525613	L70850M	AEG	914207001	EFW10480W	ELECTROLUX	914519003	ZWC5055W	ZANUSSI		ZWC5055W	ZANUSSI
914525614	L72850M	AEG	914207002	EFW10180W	ELECTROLUX	914519100	ZWC85050W	ZANUSSI		ZWC85050W	ZANUSSI
914525617	LR2452	AEG	914207004	EFW10480W	ELECTROLUX	914519103	ZWC85055W	ZANUSSI		ZWC85055W	ZANUSSI
914525618	LR2652	AEG	914207005	EFW10180W	ELECTROLUX	914520255	ZWF6115	ZANUSSI		ZWF6115	ZANUSSI
914525620	L76659	AEG	914207007	EFW107110W	ELECTROLUX	914520257	ZWF580	ZANUSSI		ZWF580	ZANUSSI
914525621	L74659	AEG	914207008	EFW107410W	ELECTROLUX	914520434	ZWF3145	ZANUSSI		ZWF3145	ZANUSSI
914525622	L74850	AEG	914212101	EFW10020W	ELECTROLUX	914520440	ZWF3125	ZANUSSI		ZWF3125	ZANUSSI
914525623	L76850	AEG	914216101	EFW12260W	ELECTROLUX	914521425	ZWF10070W	ZANUSSI		ZWF10070W	ZANUSSI
914525624	L76850	AEG	914216106	EFW12160W	ELECTROLUX	914521426	ZWF12070W	ZANUSSI		ZWF12070W	ZANUSSI
914525626	L74850M	AEG	914216108	EFW12160W	ELECTROLUX	914521427	ZWF12070S	ZANUSSI		ZWF12070S	ZANUSSI
914525627	L74850B	AEG	914216109	EFW12160W	ELECTROLUX	914521428	ZWF14070W	ZANUSSI		ZWF14070W	ZANUSSI
914525628	L74850B	AEG	914216110	EFW126110W	ELECTROLUX	914521429	ZWF16070W	ZANUSSI		ZWF16070W	ZANUSSI
914525630	L74850B	AEG	914217001	EFW12680W	ELECTROLUX	914521430	ZWF16070S	ZANUSSI		ZWF16070S	ZANUSSI
914525631	L74850A	AEG	914217002	EFW12480W	ELECTROLUX	914521442	ZWG5120	ZANUSSI		ZWG5120	ZANUSSI
914525632	L74850A	AEG	914217003	EFW12180W	ELECTROLUX	914521443	ZWG5140	ZANUSSI		ZWG5140	ZANUSSI
914525633	L76850A	AEG	914217006	EFW12680W	ELECTROLUX	914521444	ZWG5160	ZANUSSI		ZWG5160	ZANUSSI
914525634	L76850A	AEG	914217009	EFW127210W	ELECTROLUX	914521445	ZWG3105	ZANUSSI		ZWG3105	ZANUSSI
914525636	L76850A	AEG	914217011	EFW127310W	ELECTROLUX	914521446	ZWG3105	ZANUSSI		ZWG3105	ZANUSSI
914525637	L74850A	AEG	914217012	EFW127410W	ELECTROLUX	914521447	ZWG3125	ZANUSSI		ZWG3125	ZANUSSI
914525638	L72853A	AEG	914217014	EFW127111W	ELECTROLUX	914521448	ZWG3145	ZANUSSI		ZWG3145	ZANUSSI
914525639	L74850B	AEG	914217015	EFW127112W	ELECTROLUX	914521449	ZWG3165	ZANUSSI		ZWG3165	ZANUSSI

PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND
914525640	L74850B	AEG	914227001	EWF14680W	ELECTROLUX	914521452	ZWG3125S	ZANUSSI			
914525641	L74850A	AEG	914227002	EWF14480W	ELECTROLUX	914521453	ZWF1021	ZANUSSI			
914525642	L76850A	AEG	914227003	EWF14280W	ELECTROLUX	914521456	ZWG3105S	ZANUSSI			
914525645	L72850M	AEG	914227007	EWF14480W	ELECTROLUX	914521461	ZWF1201	ZANUSSI			
914525646	L72850M	AEG	914227009	EWF14280W	ELECTROLUX	914521482	ZWF16070W1	ZANUSSI			
914525650	L74650LE	AEG	914227010	EWF147110W	ELECTROLUX	914521484	ZWF12070S1	ZANUSSI			
914525651	L74650LE	AEG	914282101	EWF8020W	ELECTROLUX	914521489	ZWF12070G1	ZANUSSI			
914525652	L70850A	AEG	914282106	EWF6020W	ELECTROLUX	914521493	ZWF14070G1	ZANUSSI			
914525653	L72850A	AEG	914282131	EWF6120W	ELECTROLUX	914521563	ZWG6100A	ZANUSSI			
914525654	L74850A	AEG	914338800	EWF1064EDU	ELECTROLUX	914521574	ZWF9570W	ZANUSSI			
914525655	L74650LE	AEG	914338801	EWF1062EDU	ELECTROLUX	914521584	ZWF1221	ZANUSSI			
914525656	L74650LE	AEG	914338803	EWF1262EDU	ELECTROLUX	914521585	ZWF1421	ZANUSSI			
914525657	L75854A	AEG	914338804	EWF1264EDU	ELECTROLUX	914521586	ZWF1621	ZANUSSI			
914525658	L75854A	AEG	914338805	EWF1074EDU	ELECTROLUX	914521639	ZWF12370W	ZANUSSI			
914525659	L75854A	AEG	914338806	EWF1274EDU	ELECTROLUX	914521804	ZWG7105X	ZANUSSI			
914525660	LR2552	AEG	914338812	EWF1062ECU	ELECTROLUX	914521805	ZWG7105X	ZANUSSI			
914525661	L75854A	AEG	914338815	EWF1064EOU	ELECTROLUX	914521823	ZWG6145	ZANUSSI			
914525662	LR2453	AEG	914338816	EWF1074EOU	ELECTROLUX	914521824	ZWG6165	ZANUSSI			
914525663	LR2653	AEG	914338900	EWF1276EDU	ELECTROLUX	914521827	ZWGH7105	ZANUSSI			
914525666	L76850A	AEG	914338901	EWF1476EDU	ELECTROLUX	914521856	ZWG7105X	ZANUSSI			
914525667	L74850A	AEG	914338907	EWF1266EDU	ELECTROLUX	914521860	ZWG7105X	ZANUSSI			
914525670	L74650A3	AEG	914338908	EWS1066CDU	ELECTROLUX	914521900	ZWG5136	ZANUSSI			
914525671	L76650A3	AEG	914338915	EWS1066CMU	ELECTROLUX	914521901	ZWG5156	ZANUSSI			
914525672	L74659A3	AEG	914511300	EWG14440W	ELECTROLUX	914521902	ZWG5145	ZANUSSI			
914525673	L76659A3	AEG	914511301	EWG12440W	ELECTROLUX	914521903	ZWG5165	ZANUSSI			
914525674	L76650A3	AEG	914511400	EWG14740W	ELECTROLUX	914521904	ZWF3145	ZANUSSI			
914525675	L74853A3	AEG	914518107	EWS12410W	ELECTROLUX	914521907	ZWG3100	ZANUSSI			
914525700	L84850	AEG	914518110	EWS12610W	ELECTROLUX	914521908	ZWG3120	ZANUSSI			
914525702	L86850	AEG	914519101	EWG10550W	ELECTROLUX	914521909	ZWG6105	ZANUSSI			
914525703	L84850	AEG	914520266	EWF8048W	ELECTROLUX	914521912	ZWF12070W1	ZANUSSI			
914525704	L86850	AEG	914520403	EWF10140W	ELECTROLUX	914521913	ZWF14070W1	ZANUSSI			
914525705	L86859	AEG	914520405	EWF12040	ELECTROLUX	914521915	ZWF3145	ZANUSSI			
914525708	L86850	AEG	914520406	EWF12140	ELECTROLUX	914521934	ZWG5146	ZANUSSI			
914525709	L86850	AEG	914520407	EWF14145	ELECTROLUX	914522412	ZWH5125	ZANUSSI			
914525710	L84850	AEG	914520408	EWF12040W	ELECTROLUX	914522413	ZWH5100	ZANUSSI			
914525711	L86850	AEG	914520428	EWF12049W	ELECTROLUX	914522420	ZWF12080W	ZANUSSI			
914525714	LR1652	AEG	914520429	EWF10049W	ELECTROLUX	914522421	ZWF14080W	ZANUSSI			
914525715	L86850	AEG	914520438	EWF8047W	ELECTROLUX	914522423	ZWF14080G	ZANUSSI			
914525716	L84850M	AEG	914520502	EWF14240W	ELECTROLUX	914522429	ZWH5145	ZANUSSI			

PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND
914525717	LN88670	AEG	914520503	EW12240W	ELECTROLUX	914522455	ZWF1023	ZANUSSI			
914525718	LN88670	AEG	914520504	EW14240W	ELECTROLUX	914522458	ZWF1025	ZANUSSI			
914525719	L86850WS	AEG	914521401	EW12070W	ELECTROLUX	914522517	ZWF12280W	ZANUSSI			
914525721	L86850A	AEG	914521402	EW12075W	ELECTROLUX	914522518	ZWF14280W	ZANUSSI			
914525722	L86850A	AEG	914521403	EW10149W	ELECTROLUX	914522519	ZWF14280S	ZANUSSI			
914525723	L84850A	AEG	914521404	EW1070W	ELECTROLUX	914522520	ZWF16281W	ZANUSSI			
914525724	L86853A	AEG	914521405	EW18170W	ELECTROLUX	914522526	ZWH6105	ZANUSSI			
914525725	LN89470A	AEG	914521409	EW12070W	ELECTROLUX	914522528	ZWH6100	ZANUSSI			
914525727	L86859A	AEG	914521410	EW14070W	ELECTROLUX	914522529	ZWH6120	ZANUSSI			
914525730	L84850A	AEG	914521411	EW16070W	ELECTROLUX	914522530	ZWH6100A	ZANUSSI			
914525731	L86850A	AEG	914521419	EW12070W	ELECTROLUX	914522531	ZWF12580W	ZANUSSI			
914525800	L62853L	AEG	914521422	EW12070W	ELECTROLUX	914522556	ZWH7100C	ZANUSSI			
914525801	L62850L	AEG	914521423	EW14070W	ELECTROLUX	914522557	ZWH7125X	ZANUSSI			
914525802	L6485_1	AEG	914521450	EW14079W	ELECTROLUX	914522580	ZWH6125	ZANUSSI			
914525803	L74752	AEG	914521454	EW18170W	ELECTROLUX	914522583	ZWH6145	ZANUSSI			
914526001	L74950M3	AEG	914521460	EW14170W	ELECTROLUX	914522588	ZWH6105	ZANUSSI			
914526002	L74950A3	AEG	914521504	EW12670W	ELECTROLUX	914522628	ZWF14581	ZANUSSI			
914526006	L74950W	AEG	914521507	EW14375W	ELECTROLUX	914522628	ZWF14581W	ZANUSSI			
914526007	L74950W	AEG	914521508	EW12376W	ELECTROLUX	914522629	ZWF16581W	ZANUSSI			
914526008	L74950W	AEG	914521509	EW14373W	ELECTROLUX	914522630	ZWF16581S	ZANUSSI			
914526009	L76950W	AEG	914521510	EW12370W	ELECTROLUX	914522637	ZWH6195	ZANUSSI			
914526010	L76950W	AEG	914521511	EW14370W	ELECTROLUX	914522640	ZWF14380W	ZANUSSI			
914526011	L76950A3	AEG	914521512	EW16370W	ELECTROLUX	914522641	ZWF14380S	ZANUSSI			
914526012	L74952A3	AEG	914521513	EW12449W	ELECTROLUX	914522645	ZWF16581G	ZANUSSI			
914526600	L74950	AEG	914521514	EW12470W	ELECTROLUX	914522676	ZWF14380G	ZANUSSI			
914526601	L74950	AEG	914521515	EW14470W	ELECTROLUX	914522842	ZWH7125X	ZANUSSI			
914526602	L74950	AEG	914521516	EW16470W	ELECTROLUX	914522859	ZWFS7000	ZANUSSI			
914526603	L74953	AEG	914521517	EW12250	ELECTROLUX	914522860	ZWF1223	ZANUSSI			
914526604	L74950	AEG	914521518	EW14260	ELECTROLUX	914522861	ZWF1423	ZANUSSI			
914526605	L74950	AEG	914521519	EW16250	ELECTROLUX	914522882	ZWF1225	ZANUSSI			
914526606	L74950	AEG	914521520	EW16260	ELECTROLUX	914522883	ZWF1425	ZANUSSI			
914526607	L74950	AEG	914521521	EW14450	ELECTROLUX	914522884	ZWFS7000	ZANUSSI			
914526608	L74950	AEG	914521522	EW14460	ELECTROLUX	914522885	ZWH7126X	ZANUSSI			
914526609	L74950	AEG	914521523	EW16460	ELECTROLUX	914522941	ZWF1625	ZANUSSI			
914526610	L74959	AEG	914521524	EW10470W	ELECTROLUX	914523400	ZWN5105	ZANUSSI			
914526611	L74665	AEG	914521525	EW12470W	ELECTROLUX	914523402	ZWN6104	ZANUSSI			
914526613	L72950	AEG	914521530	EW10470S	ELECTROLUX	914523417	ZWN6104	ZANUSSI			
914526614	L74950	AEG	914521538	EW16670W	ELECTROLUX	914523507	ZWN3125	ZANUSSI			
914526616	L74950	AEG	914521539	EW12440W	ELECTROLUX	914523523	ZWN6105	ZANUSSI			

PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND
914526617	L74920	AEG	914521540	EFW14440W	ELECTROLUX	914523524	ZWN7125	ZANUSSI
914526618	LN78480	AEG	914521541	EFW12270W	ELECTROLUX	914523600	ZWF14791W	ZANUSSI
914526619	LN78480	AEG	914521542	EFW14270W	ELECTROLUX	914523608	ZWN6105	ZANUSSI
914526620	L74950	AEG	914521545	EFW12240W	ELECTROLUX	914523609	ZWN6125	ZANUSSI
914526621	L74950B	AEG	914521546	EFW14240W	ELECTROLUX	914523618	ZWN3145	ZANUSSI
914526622	L74959	AEG	914521564	EFW10570W	ELECTROLUX	914523620	ZWN6105	ZANUSSI
914526624	L74950A	AEG	914521568	EFW10279W	ELECTROLUX	914523621	ZWN6125	ZANUSSI
914526625	L74950A	AEG	914521587	EFW14270W	ELECTROLUX	914523623	ZWN6100	ZANUSSI
914526626	L76950A	AEG	914521592	EFW14248W	ELECTROLUX	914523624	ZWN6120	ZANUSSI
914526629	L76950A	AEG	914521593	EFW14448W	ELECTROLUX	914523658	ZWJ12591W	ZANUSSI
914526630	L74950A	AEG	914521594	EFW10670W	ELECTROLUX	914523659	ZWJ14591W	ZANUSSI
914526631	L74950A	AEG	914521600	EFW12440W	ELECTROLUX	914523685	ZWJB14591W	ZANUSSI
914526632	L74953A	AEG	914521601	EFW12660W	ELECTROLUX	914523687	ZWJ120W	ZANUSSI
914526637	L74950M	AEG	914521648	EFW10771W	ELECTROLUX	914523688	ZWJ140W	ZANUSSI
914526638	LN79480A	AEG	914521657	EFW12570X	ELECTROLUX	914604000	ZWD12270W	ZANUSSI
914526642	L74920	AEG	914521802	EFW8277W	ELECTROLUX	914604001	ZWD12270S	ZANUSSI
914526644	L74959A	AEG	914521803	EFW10277W	ELECTROLUX	914604002	ZWD14270W	ZANUSSI
914526647	L72950M	AEG	914521809	EFWM12470W	ELECTROLUX	914604003	ZWD16270W	ZANUSSI
914526648	L74950M	AEG	914521828	EFW12240W	ELECTROLUX	914604008	ZKG2105	ZANUSSI
914526649	L74950B	AEG	914521829	EFW14240W	ELECTROLUX	914604011	ZWD1460	ZANUSSI
914526652	LN77480	AEG	914521838	EFW146410W	ELECTROLUX	914604013	ZKG2145	ZANUSSI
914526655	L74950A	AEG	914521840	EFW146310W	ELECTROLUX	914604016	ZKG2125	ZANUSSI
914526657	L74950M	AEG	914521841	EFW146310W	ELECTROLUX	914604017	ZWW9570W	ZANUSSI
914526659	L74950A	AEG	914521842	EFW146318W	ELECTROLUX	914604028	ZWD12270W1	ZANUSSI
914526660	L74950A	AEG	914521844	EFW126410X	ELECTROLUX	914604029	ZWD14270W1	ZANUSSI
914526663	LN75480	AEG	914521937	EFW146118W	ELECTROLUX	914604030	ZWD16270W1	ZANUSSI
914526664	L74950A	AEG	914522401	EFW10080W	ELECTROLUX	914604031	ZWD12270S1	ZANUSSI
914526665	L72950A	AEG	914522402	EFW8180W	ELECTROLUX	914604034	ZWD12270G1	ZANUSSI
914526666	LN79680A	AEG	914522403	EFW12170W	ELECTROLUX	914604037	ZKG2145	ZANUSSI
914526667	LN79680A	AEG	914522404	EFW14170W	ELECTROLUX	914604039	ZKG2105	ZANUSSI
914526668	L72950A	AEG	914522406	EFW8180W	ELECTROLUX	914604042	ZKG7125	ZANUSSI
914526671	LN79689A	AEG	914522422	EFW10080W	ELECTROLUX	914604044	ZKG2125	ZANUSSI
914526672	L62953L	AEG	914522424	EFW14180W	ELECTROLUX	914604048	ZKG7145	ZANUSSI
914526679	L72950A3	AEG	914522428	EFW10180W	ELECTROLUX	914604049	ZKG7165	ZANUSSI
914526680	L74950A3	AEG	914522440	EFW147110W	ELECTROLUX	914604051	ZKG7143	ZANUSSI
914526681	L76950A3	AEG	914522442	EFW87210W	ELECTROLUX	914604053	ZKG7169	ZANUSSI
914526682	L72950M3	AEG	914522451	EFW107110W	ELECTROLUX	914604205	ZWW12570W	ZANUSSI
914526684	L74950A3	AEG	914522454	EFW147110W	ELECTROLUX	914604206	ZKH2125	ZANUSSI
914526686	L74959A3	AEG	914522502	EFW12480W	ELECTROLUX	914604207	ZKH2145	ZANUSSI

PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND
914526689	L76950A3	AEG	914522503	EW12680W	ELECTROLUX	914604209	ZKH2125	ZANUSSI			
914526691	LN79680A3	AEG	914522504	EW12480W	ELECTROLUX	914604211	ZKH2145	ZANUSSI			
914526692	LN79689A3	AEG	914522505	EW14480W	ELECTROLUX	914604212	ZKH2105	ZANUSSI			
914526693	L72950A3	AEG	914522507	EW14370W	ELECTROLUX	914604221	ZKH2125	ZANUSSI			
914526694	L74950A3	AEG	914522509	EW10480W	ELECTROLUX	914604300	ZWD14581W	ZANUSSI			
914526695	L74953A3	AEG	914522510	EW10680W	ELECTROLUX	914604301	ZWD14581S	ZANUSSI			
914526696	L74953M3	AEG	914522516	EW14480W	ELECTROLUX	914604302	ZWD16581W	ZANUSSI			
914526697	L74950A3	AEG	914522527	EW14480W	ELECTROLUX	914604322	ZWD14581W1	ZANUSSI			
914526698	L74950M3	AEG	914522533	EW12480W	ELECTROLUX	914604323	ZWD14581S1	ZANUSSI			
914526699	L74950A3	AEG	914522546	EW12287W	ELECTROLUX	914604341	ZKH7146J	ZANUSSI			
914526701	L84950	AEG	914522547	EW16487W	ELECTROLUX	914604401	ZWD14791W	ZANUSSI			
914526702	L84950	AEG	914522548	EW12680W	ELECTROLUX	914604415	ZKN7124	ZANUSSI			
914526703	L84950	AEG	914522563	EFM14480W	ELECTROLUX	914604429	ZKN7124	ZANUSSI			
914526704	L84953	AEG	914522564	EFM14480W	ELECTROLUX	914604430	ZWD1261	ZANUSSI			
914526706	L84950	AEG	914522565	EFM14480W	ELECTROLUX	914900259	ZWF1076	ZANUSSI			
914526707	L84950	AEG	914522578	EFH12280W	ELECTROLUX	914900260	ZWF8576	ZANUSSI			
914526708	L84950	AEG	914522581	EW14480W	ELECTROLUX	914902202	ZWS687	ZANUSSI			
914526709	L84950	AEG	914522590	EW10480W	ELECTROLUX	914902203	ZWS6107	ZANUSSI			
914526710	L84950	AEG	914522597	EW147410W	ELECTROLUX	914902204	ZWS6127	ZANUSSI			
914526711	L84950	AEG	914522598	EW147310W	ELECTROLUX	914902205	ZWS587	ZANUSSI			
914526712	L82950	AEG	914522601	EW16781W	ELECTROLUX	914902206	ZWS5107	ZANUSSI			
914526713	L84950	AEG	914522602	EW14589W	ELECTROLUX	914902304	ZWS787	ZANUSSI			
914526714	LN88480	AEG	914522603	EW16589W	ELECTROLUX	914902305	ZWS7107	ZANUSSI			
914526716	L86950A	AEG	914522604	EW14580W	ELECTROLUX	914902306	ZWS7127	ZANUSSI			
914526718	L84950A	AEG	914522605	EW16580W	ELECTROLUX	914902501	ZWD685	ZANUSSI			
914526720	LN89480A	AEG	914522606	EW14786W	ELECTROLUX	914902502	ZWD6105	ZANUSSI			
914526724	L84950A	AEG	914522607	EW14785W	ELECTROLUX	914902503	ZWD585	ZANUSSI			
914526726	L84950A	AEG	914522608	EW16785W	ELECTROLUX	914902504	ZWD5105	ZANUSSI			
914526727	L84950A	AEG	914522610	EW14780W	ELECTROLUX	914902600	ZWD785	ZANUSSI			
914526728	L84950A	AEG	914522611	EW16780W	ELECTROLUX	914902601	ZWD7105	ZANUSSI			
914526731	L84950A	AEG	914522612	EW14781W	ELECTROLUX	914904410	ZWG5125	ZANUSSI			
914526736	L84950A	AEG	914522613	EW14780	ELECTROLUX	914904411	ZWG5136	ZANUSSI			
914526737	LN89680A	AEG	914522614	EW16780	ELECTROLUX	914904412	ZWG5156	ZANUSSI			
914526739	L86950A	AEG	914522615	EW14781W	ELECTROLUX	914904421	ZWG5145	ZANUSSI			
914526741	L86950A	AEG	914522616	EW12580W	ELECTROLUX	914904422	ZWG5165	ZANUSSI			
914526742	LR1653	AEG	914522617	EW14781W	ELECTROLUX	914904423	ZWG3125	ZANUSSI			
914526745	L84950A3	AEG	914522618	EW14781W	ELECTROLUX	914904424	ZWG3145	ZANUSSI			
914526746	L86950A3	AEG	914522621	EW14470W	ELECTROLUX	914904425	ZWG3165	ZANUSSI			
914526747	L86950A3	AEG	914522622	EW16470W	ELECTROLUX	914904428	ZWG385	ZANUSSI			

PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND
914526750	L86950A3	AEG	914522623	EW16370W	ELECTROLUX	914904429	ZWG3105	ZANUSSI			
914526751	L86950A3	AEG	914522624	EW12780W	ELECTROLUX	914904431	ZWG3165	ZANUSSI			
914526752	L84950A3	AEG	914522627	EW14581W	ELECTROLUX	914904432	ZWG5105	ZANUSSI			
914526754	L84950A3	AEG	914522643	EFM14580W	ELECTROLUX	914904433	ZWG5125	ZANUSSI			
914526755	L84950A3	AEG	914522648	EW14380W	ELECTROLUX	914904434	ZWG5145	ZANUSSI			
914526756	L84950A3	AEG	914522649	EW12580X	ELECTROLUX	914904435	ZWG5145	ZANUSSI			
914526757	LR1654	AEG	914522650	EW12580X	ELECTROLUX	914904436	ZWG5165	ZANUSSI			
914605000	LR3410WT	AEG	914522655	EW16781W	ELECTROLUX	914904439	ZWF3145	ZANUSSI			
914605001	L14840	AEG	914522656	EW14781W	ELECTROLUX	914904444	ZWG6144	ZANUSSI			
914605002	L14840	AEG	914522658	EW14580W	ELECTROLUX	914904450	ZWG3125	ZANUSSI			
914605004	L14840	AEG	914522660	EW147540W	ELECTROLUX	914904451	ZWG3145	ZANUSSI			
914605006	L14840	AEG	914522663	EW167440W	ELECTROLUX	914904457	ZWF12070W1	ZANUSSI			
914605007	L12840	AEG	914522664	EW147440W	ELECTROLUX	914904458	ZWF14070W1	ZANUSSI			
914605008	L12840	AEG	914522666	EW147547W	ELECTROLUX	914904462	ZWG5101	ZANUSSI			
914605300	L16853	AEG	914522703	EW16981W	ELECTROLUX	914904463	ZWG5141	ZANUSSI			
914605301	L16850	AEG	914522704	EW16980W	ELECTROLUX	914904467	ZWF14069W	ZANUSSI			
914605302	L16850	AEG	914522705	EW16981W	ELECTROLUX	914904472	ZWG5125	ZANUSSI			
914605303	L16850	AEG	914522706	EW16981W	ELECTROLUX	914904481	ZWG5145	ZANUSSI			
914605304	L16850	AEG	914522707	EW16980	ELECTROLUX	914904492	ZWG3120	ZANUSSI			
914605308	L16850	AEG	914522708	EW16981W	ELECTROLUX	914904511	ZWG6105	ZANUSSI			
914605309	L16850	AEG	914522709	EW14981W	ELECTROLUX	914904521	ZWG6145	ZANUSSI			
914605310	L16850	AEG	914522710	EW12981W	ELECTROLUX	914904524	ZWG6165	ZANUSSI			
914605311	L14850	AEG	914522800	EW147410W	ELECTROLUX	914904526	ZWG6125	ZANUSSI			
914605312	L14850	AEG	914522801	EW147310W	ELECTROLUX	914904527	ZWG6145	ZANUSSI			
914605313	L14850	AEG	914522802	EW167320W	ELECTROLUX	914904528	ZWF1221	ZANUSSI			
914605314	L16850	AEG	914522804	EW167320W	ELECTROLUX	914904529	ZWF1421	ZANUSSI			
914605316	L14850A	AEG	914522807	EW147410W	ELECTROLUX	914904530	ZWF1621	ZANUSSI			
914605317	L14850A	AEG	914522810	EW147410W	ELECTROLUX	914904531	ZWG6125	ZANUSSI			
914605318	L16850A	AEG	914522811	EW127410W	ELECTROLUX	914904532	ZWG6145	ZANUSSI			
914605320	L16850A	AEG	914522845	EW147410W	ELECTROLUX	914904533	ZWG6165	ZANUSSI			
914605321	L16850A3	AEG	914522856	EW127410X	ELECTROLUX	914904535	ZWG6145	ZANUSSI			
914605322	L16850A	AEG	914522863	EW147313W	ELECTROLUX	914904536	ZWG6165	ZANUSSI			
914605323	L16850A	AEG	914522865	EW128310W	ELECTROLUX	914904539	ZWGH7105	ZANUSSI			
914605324	L16853A	AEG	914522866	EW128310W	ELECTROLUX	914904560	ZWG6165	ZANUSSI			
914605326	L16850A3	AEG	914522867	EW128310W	ELECTROLUX	914904712	ZWN6100L	ZANUSSI			
914605328	L16850A3	AEG	914522868	EW148310W	ELECTROLUX	914904713	ZWN6120L	ZANUSSI			
914605329	L16850A3	AEG	914522870	EW148310W	ELECTROLUX	914904715	ZWNB6120L	ZANUSSI			
914605500	L14950	AEG	914522873	EW148315W	ELECTROLUX	914904716	ZWNB6140L	ZANUSSI			
914605504	L14950A	AEG	914522874	EW148318W	ELECTROLUX	914904717	ZWNB6140AL	ZANUSSI			

PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND
914605506	L14950A	AEG	914522875	EW108310W	ELECTROLUX	914904801	ZWH6125	ZANUSSI
914605508	L14950A	AEG	914522876	EW108310W	ELECTROLUX	914904805	ZWH6165	ZANUSSI
914605509	L14950A	AEG	914522877	EW128310W	ELECTROLUX	914904806	ZWH6145	ZANUSSI
914903201	L6262L	AEG	914522881	EW148317W	ELECTROLUX	914904807	ZWH6145	ZANUSSI
914903202	L6464L	AEG	914522919	EW167443W	ELECTROLUX	914904808	ZWH7145	ZANUSSI
914903203	LN69460L	AEG	914522920	EW127443W	ELECTROLUX	914904809	ZWH8165	ZANUSSI
914903205	LN66660	AEG	914522922	EW147443W	ELECTROLUX	914904846	ZWN7120L	ZANUSSI
914903209	L60641	AEG	914522923	EW147443W	ELECTROLUX	914904847	ZWN7100L	ZANUSSI
914903308	LN69670L	AEG	914522924	EW147443W	ELECTROLUX	914904848	ZWN7100L	ZANUSSI
914903309	L64851L	AEG	914522925	EW147444W	ELECTROLUX	914904850	ZWN7120L	ZANUSSI
914903310	L64852L	AEG	914522926	EW147445W	ELECTROLUX	914904851	ZWN7120L	ZANUSSI
914903312	L74550	AEG	914522928	EW167443W	ELECTROLUX	914904852	ZWN7120L	ZANUSSI
914903313	L74555	AEG	914523403	EW10190W	ELECTROLUX	914904854	ZWN7140L	ZANUSSI
914903400	L52840	AEG	914523404	EW10190W	ELECTROLUX	914904855	ZWN7140AL	ZANUSSI
914903401	L52840	AEG	914523412	EW108210W	ELECTROLUX	914904856	ZWN7140AL	ZANUSSI
914903402	L54840	AEG	914523419	EW108211W	ELECTROLUX	914904857	ZWN7140AL	ZANUSSI
914903403	L52630	AEG	914523501	EW12491W	ELECTROLUX	914904858	ZWN7120L	ZANUSSI
914903404	L52638	AEG	914523509	EW12491W	ELECTROLUX	914904859	ZWN7120L	ZANUSSI
914903405	L54630	AEG	914523511	EW128420W	ELECTROLUX	914904860	ZWN7120L	ZANUSSI
914903406	L54638	AEG	914523516	EW128410W	ELECTROLUX	914904862	ZWN7140L	ZANUSSI
914903407	L52840	AEG	914523522	EW128410W	ELECTROLUX	914904864	ZWN7140L	ZANUSSI
914903408	L54840	AEG	914523528	EW128420W	ELECTROLUX	914904867	ZWN7148L	ZANUSSI
914903409	L54849	AEG	914523529	EW148421W	ELECTROLUX	914904868	ZWN77120L	ZANUSSI
914903410	L54840	AEG	914523612	EW14597W	ELECTROLUX	914904869	ZWN57120L	ZANUSSI
914903411	L52840	AEG	914523613	EW14591W	ELECTROLUX	914904878	ZWNB7140L	ZANUSSI
914903413	LN58460	AEG	914523616	EW10591W	ELECTROLUX	914904879	ZWNB7120L	ZANUSSI
914903414	LN58459	AEG	914523619	EW12591W	ELECTROLUX	914904880	ZWNB7140AC	ZANUSSI
914903415	L58840	AEG	914523626	EW14591W	ELECTROLUX	914904881	ZWNB7140AL	ZANUSSI
914903416	L50840	AEG	914523635	EW148541W	ELECTROLUX	914904882	ZWNB7140AC	ZANUSSI
914903417	L52840	AEG	914523636	EW168540W	ELECTROLUX	914904883	ZWNB7140AL	ZANUSSI
914903500	L60840	AEG	914523638	EW14592W	ELECTROLUX	914904885	ZWN7120L	ZANUSSI
914903501	L62840	AEG	914523640	EW148540W	ELECTROLUX	914904920	ZWF16381W	ZANUSSI
914903502	L64840	AEG	914523643	EW148540W	ELECTROLUX	914904921	ZWF12380W	ZANUSSI
914903503	L62840	AEG	914523645	EW148540W	ELECTROLUX	914904922	ZWF14380W	ZANUSSI
914903504	L64840	AEG	914523646	EW148541W	ELECTROLUX	914904925	ZWH7122J	ZANUSSI
914903505	L66840	AEG	914523647	EW168541W	ELECTROLUX	914904926	ZWH7142J	ZANUSSI
914903506	L62640	AEG	914523648	EW148540W	ELECTROLUX	914904927	ZWH7162J	ZANUSSI
914903507	L64640	AEG	914523649	EW148540W	ELECTROLUX	914904941	ZWH7132J	ZANUSSI
914903508	L66640	AEG	914523650	EW148541W	ELECTROLUX	914905402	ZWF5185	ZANUSSI

PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND	PROD/PNC	MODEL	BRAND
914903508	L66840	AEG	914523651	EWF168541W	ELECTROLUX	914905403	ZWF5105	ZANUSSI			
914903509	L64848	AEG	914523652	EWF168541W	ELECTROLUX	914905404	ZWF3105	ZANUSSI			
914903510	L6484N	AEG	914523653	EWF168547W	ELECTROLUX	914905405	ZWF385	ZANUSSI			
914903511	L60640	AEG	914523660	EWF149542W	ELECTROLUX	914905408	ZWF5105	ZANUSSI			
914903512	L62640	AEG	914523661	EWF148543W	ELECTROLUX	914905409	ZWF5125	ZANUSSI			
914903513	L64840	AEG	914523662	EWF149542W	ELECTROLUX	914905418	ZWF3125	ZANUSSI			
914903514	L66841	AEG	914523663	EWF149542W	ELECTROLUX						