

 
HC-001 理发电推子拆解图

理发电推子如何充电？充电时间？拆开后您就知道了：

里面安装了两节容量为 600 毫安小时的镍镉充电电池，按照标准充电为 60 毫安，14 小时可以充满；如果适当加大充电电流，进行快速充电，可以缩短充电时间。

如果您换成，更大容量的充电电池，充满以后可以使用更长时间，（600 毫安小时的充电电池，仅够一次理发的电量），换成大容量的电池，充电器也需要换成更大电流的充电器，否则充电时间太长，难以忍受。

电推子拆解图

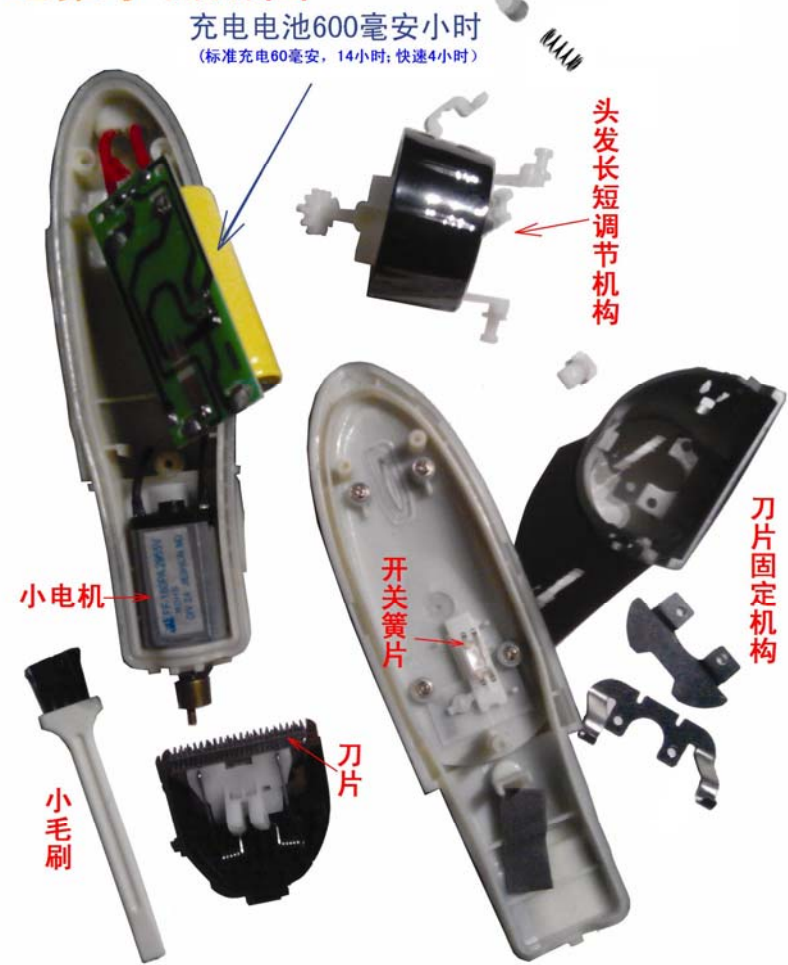

使用说明书

KAIRUI Find:

children and the elderly don't want go to salon. use this hair clipper you can be a barber in home. don't worry that you make the wrong cut. b this hair clipper have 5 cutting length from (3、 6 、 9 、 12 、 15mm). you can select the cutting length as you want. cutting the hair just like combing the hair, quickly and safety.

Dear Customer

welcome to use our KAIRUI hair clipper, this product with cutting length confrol design, wireless function more flexible. 5 adjustable cutting length can be selected as you want. we hope you are satisfying with our product.

Your KAIRUI team



Intended use:

This hair trimmer is designed to shorten and trim hair and beards. Do not use the hair trimmer to cut artificial hair.

Hazards to children:

Keep children away from this product because they often underestimate the risks involved in handling electrical equipment. There is considerable danger of cutting yourself with

the sharp shaving head.

Small parts can be highly dangerous if swallowed. Therefore, keep the hair trimmer and accessories out of the reach of infants.

Electrical hazards

Clean the shaving head by rinsing it off under the water tap.

However, the hairtrimmer itself must not be immersed in water.

The power cord and mains adaptor must not come into contact with water or other liquids, there is a risk of electric shock. Therefore, never use the hair trimmer over a filled sink or while having a bath.

If the trimmer or charging station should fall into the water, immediately pull the mains adaptor out of the socket.

Unplug the trimmer if you do not plan to use it for a longer period of time, if the trimmer malfunctions during use, during thunderstorms and when cleaning.

Do not use if the trimmer, power cord or mains adaptor show any signs of damage.

Do not attempt to open the appliance. Only have repairs made to the trimmer, the power cord or mains adaptor by an authorised dealer. Improper repairs may expose the user to considerable hazards.

Only use the mains adaptor supplied with the trimmer or an adaptor with the same technical features, otherwise the appliance could be damaged.

Only plug the mains adaptor into a properly installed 220 V ~ 50 Hz socket.

Other causes of injury

The appliance includes a double rechargeable battery pack. It must not be dis-mantled, exposed to an open flame or short-circuited.

Do not operate the appliance if the attachment is damaged.

The shaving head is very sharp. Be very careful when you use the appliance without the attachment.

 
Risk of injury! Caution - damage to the hair trimmer

Only use original accessories. Never attempt to sharpen the cutting head yourself.

Only cut natural hair with the trimmer.

Never expose the trimmer to temperatures below -10 °C or higher than +40 °C for longer periods of time.

At a glance (features)

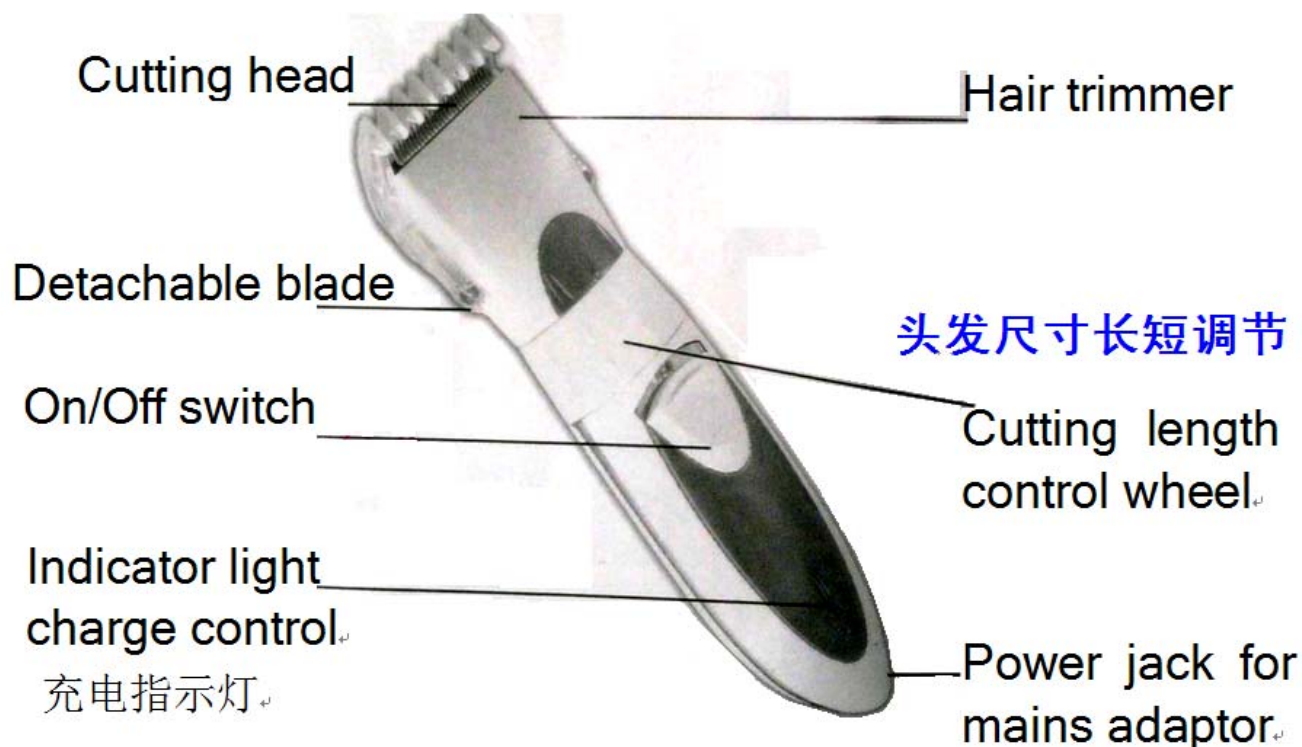

Loading the rechargeable battery

Before first time use, the hair trimmer must be fully charged.

- 1. Slide the On/Off switch downwards.**
- 2. Insert the plug of the mains adaptor into the power jack of the hair trimmer.**
- 3. Plug the mains adaptor into a power socket outlet.**

The indicator light will not go out when the rechargeable battery is loaded.

Note about the rechargeable battery

The rechargeable battery does not have its full capacity from the start. To obtain the maximum charge capacity, the battery should be fully charged prior to being used for the first time and then the hair trimmer should be used until the batteries are completely flat. The batteries should then be fully recharged. To increase the life of the rechargeable batteries, this charging and discharging procedure should be repeated approximately twice a year.

Using the trimmer without charging the batteries beforehand

Mains electricity (via the mains adaptor) can also be used to power the trimmer.

- 1. Connect the hair trimmer as described in the section "Loading the rechargeable battery".**
- 2. Unplug the adaptor after use.**

Tips and hints concerning use

The hair must be clean and dry when being cut.

 
Only cut small amounts.

Cut hair in progressively closer settings until you reach the desired length. The cutting head will jam if you try to work too quickly or try to cut too much hair at once. Let the appliance run for a short time before beginning.

The cutting head (operation without attachment) allows you to finely trim your beard even in hard to reach places and cleanly shave your hair along your temples and neck.

Thinning out function

This function evens out unevenly distributed hair volume.

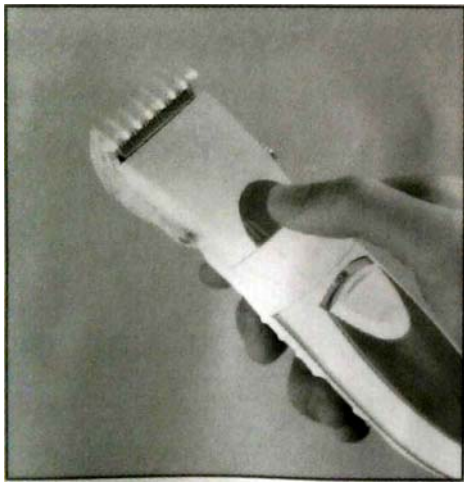

Use the guide comb to shorten hair evenly to a length of 3 -15mm.

To set the desired length, press the closure

latch of the guide

comb and slide it either upwards or down- wards.

The set length is indicated on the scale

of the appli ance.

Shaping the beard and shaving the back of the neck is done without attachments.

1. Remove the attachment.
2. Draw the cutting head at a low angle along your skin without applying pressure.

Cleaning and care

1. Remove the comb attachment.
2. Press the shaving head towards the back and remove it.
3. Brush out the shaving head insert
(it is the area behind the shaving head when it has been removed)
4. Reinsert the shaving head by inserting the latch of the shaving head into the groove of the casing.
5. Press the shaving head back into the casing. until it engages audibly.
6. Wet/dry design, For use in shower and easy cleaning

Oiling the shaving head

Oil the shaving head from time to time if you use the trimmer regularly. Use non-corroding oil, for example sewing machine oil.

1. Remove the comb attachment used.
2. Apply one to two drops of oil between the cutting teeth.
3. Turn the trimmer briefly on and then off again to distribute the oil,
4. Remove any excess oil by wiping with a cloth.

Replacing the shaving head

Only use original accessories. Accessories such as the shaving head, mains adaptor and comb attachments are available at specialist shops Never attempt to sharpen the shaving head

yourself. Switch the trimmer off!

 
 
Change the shaving head as described in Cleaning the shaving head.

Power becomes weak after a brief period

Load the rechargeable battery pack, if necessary operate the trimmer with the mains adaptor.

The trimmer pulls on hair

Clean and oil the shaving head or replace with a new one.

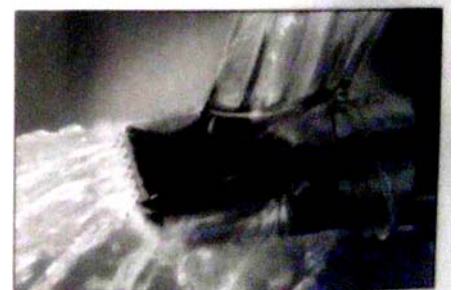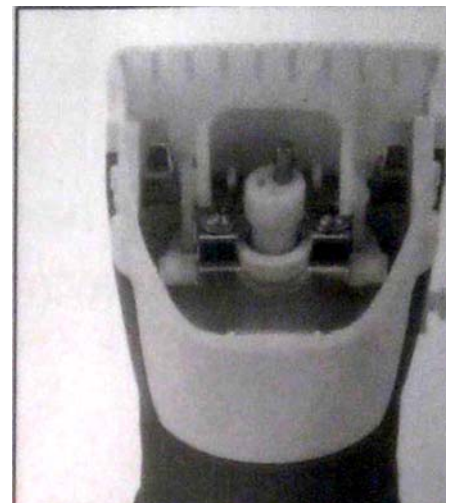

Disposal

Dispose of the packaging in the proper manner. If you wish to dispose of the appliance, turn out the screws and remove the double rechargeable battery pack Afterwards, the appliance is destroyed. Special containers are provided for disposing of rechargeable batteries at shops selling them or public collection points. The other parts of the appliance can be disposed of according to current regulations. Details are available from your local authority.

