

26	05	Count mode setting	Sub code	Main code
		Used to set the count up mode of the total counter, the developer counter, and the maintenance counter in A3WLT copying.		
		When the simulation is executed, the currently set count mode is displayed on the copy quantity display.		
		After entering the value, press the START key to memorize the value.		
06	Destination setting	Set value	Destination	
	Used to set the destination.			
	When the simulation is executed, the currently set destination is displayed on the copy quantity display.			
	After entering the value, press the START key to memorize the value.			
07	Drum sensitivity setting	Set value	Drum sensitivity	
	Used to set the drum sensitivity. The copy lamp output voltage is corrected according to the set value.			
	After entering the value, press the START key to memorize the value.			
	Used to set the original density.			
10	AE original density setting	Set value	Original density	
	Used to set the original density.			
	When this simulation is executed, the currently set value is displayed on the copy quantity display.			
	Set the value and press the PRINT button to store the value.			
13	Warm-up mode setting	Set value	Warm-up mode	
	Used to set the main motor rotation mode in warm-up mode.			
	When this simulation is executed, the currently set value is displayed on the copy quantity display.			
	Set the value and press the PRINT button to store the value.			
20	Rear edge void setting	Set value	Rear edge void	
	Used to set the rear edge void YES/NO of copy paper.			
	When this simulation is executed, the currently set value is displayed on the copy quantity display.			
	Set the value and press the PRINT button to store the value.			