



3-4. REMOTE CONTROLLER

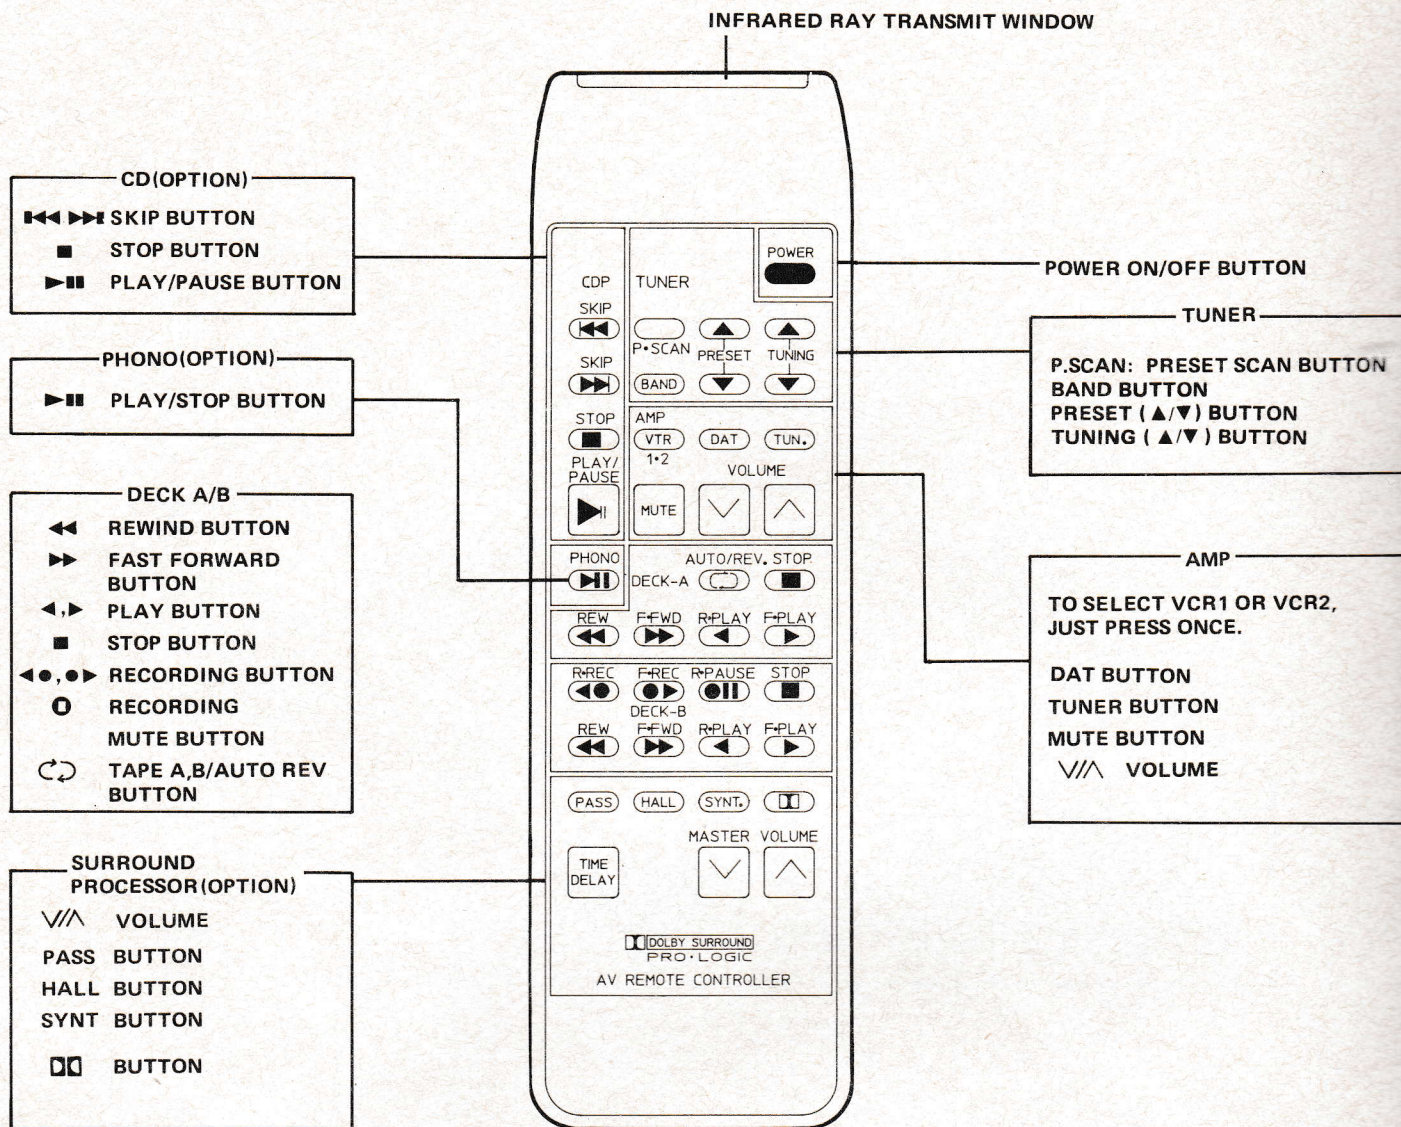

[HOW TO INSTALL BATTERIES FOR REMOCON CONTROLLER]

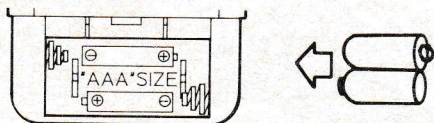

- OPEN THE BATTERY COVER AT THE BACK OF A REMOTE CONTROLLER AND LOAD 2 BATTERIES (1.5AAA TYPE) WITH PROPER POLARITY POSITIONING.
- CHANGE BATTERIES WHEN THE POWER BECOMES WEAK. REMOTE CONTROL UNIT CAN NOT BE ACTIVATED WITH LOW POWER.
- * REMOVE BATTERIES AFTER THEIR SHELF LIFE HAVE BEEN REACHED.

(HOW TO USE REMOCON CONTROLLER)

- POINT REMOTE CONTROL TOWARDS THE SIGNAL INPUT PORTION OF THE POWER AMP.
- WHEN USING THE FUNCTION BUTTON OF THE SURROUND-PROCESSOR, POINT REMOCON CONTROL TOWARDS THE REMOTE SIGNAL INPUT PORTION OF THE SURROUND PROCESSOR.
- OPERATION RANGE IS WITHIN 25 DEGREES OF EITHER WAY OF DEAD CENTER AND NOT MORE THAN 10 METER AWAY DISTANCE.
- REMEMBER THAT THE OPERATION RANGE WILL BE DIMINISHED OR REMOTE CONTROL WILL NOT OPERATE UNDER THE DIRECT SUNSHINE AND HEAT.

