



---

## Service Information

### Family/Jet Chef Microwave oven AVM 401 WH/1

8538 401 10211

Last Modification: 07/06/08

Creation Date: 07/06/08

---

<b>Spare Part List</b>	<b>2</b>
<b>Wiring Diagram</b>	<b>3</b>


---

This document is only intended for qualified technicians who are aware of the respective safety regulations.  
Subject to modifications

## Spare Part List

Pos	12NC	Description
002 0	<b>4819 440 59448</b>	Cabinet WH
002 2	<b>4819 462 79939</b>	Cover micaplate
004 0	<b>4819 462 79937</b>	Plate Bottom
013 0	<b>4819 462 79423</b>	Foot
013 1	<b>4819 462 79938</b>	Foot right back
041 0	<b>4819 417 19248</b>	Hinge lower
042 0	<b>4819 417 19514</b>	Hinge upper
100 0	<b>4819 442 38674</b>	Door cpl. WH
120 0	<b>4819 459 48654</b>	Door frame inner
130 0	<b>4819 271 38148</b>	Unit,pushbutton
130 2	<b>4819 466 89172</b>	Clip slide block
141 0	<b>4819 450 58095</b>	Oven glass
143 0	<b>4819 459 48655</b>	Door frame outer WH
255 0	<b>4819 466 78389</b>	Turntable
264 0	<b>4819 535 78156</b>	Crosspiece
320 0	<b>4819 453 58537</b>	Control panel
334 0	<b>4819 413 38154</b>	Knob
334 1	<b>4819 413 38126</b>	Clip knob inner rotacode
334 2	<b>4819 492 58134</b>	Spring, knob (not shown)
404 0	<b>4819 131 58019</b>	Magnetron
404 2	<b>4819 462 38839</b>	Air guide magnetron
406 0	<b>4819 361 18292</b>	Motor for rotary plate
406 2	<b>4819 532 68686</b>	Gasket ring for TT
412 0	<b>4819 145 78197</b>	Transformer,HT
420 0	<b>4819 121 48016</b>	Capacitor HT
420 1	<b>4819 404 79272</b>	Holder for capacitor
421 0	<b>4819 121 18197</b>	Filter mains
426 0	<b>4819 218 38038</b>	Diode HV
442 0	<b>4819 361 18313</b>	Motor fan
443 0	<b>4819 515 48059</b>	Fan
443 1	<b>4819 462 38841</b>	Air guide ventilation
485 0	<b>4819 320 28037</b>	Cable HT
490 0	<b>4819 321 18285</b>	Cable mains
502 0	<b>4819 214 78544</b>	Unit electrical
502 1	<b>4819 113 88001</b>	Resistor 100 Ohm
503 0	<b>4819 282 18712</b>	Timer
561 0	<b>4819 282 48281</b>	Thermostat for magnetron 125 C
617 0	<b>4819 280 68323</b>	Relay 24V
633 0	<b>4819 271 38145</b>	Microswitch
651 0	<b>4819 134 28029</b>	Lamp cavity 240V - 25W
910 0	<b>4819 502 18372</b>	Screw for TT-Motor
910 1	<b>4819 502 18499</b>	Screw
910 2	<b>4819 502 38274</b>	Screw for trafo M4x16St
971 0	<b>4819 253 38019</b>	Fuse T8 A
972 0	<b>4819 253 38011</b>	Fuse T250mA special

## Wiring Diagram

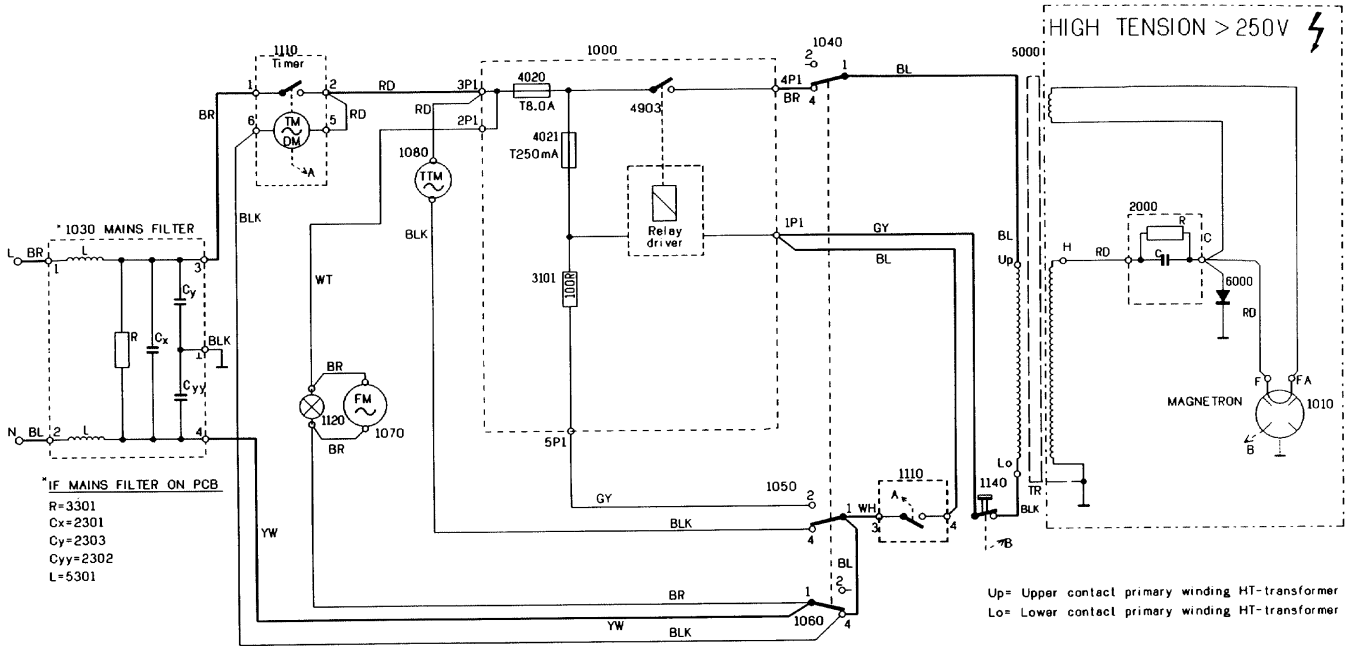

1040=SECONDARY SWITCH  
1050=MONITOR SWITCH  
1060=PRIMARY SWITCH

OVEN IN OFF POSITION  
WITH DOOR CLOSED

HERD ABGESCHALTET  
TUR GESCHLOSSEN

FOUR DEBRANCHE  
PORTE FERME

COLOUR CODE	FARBKODE	CODE DE COULEUR
YW	YELLOW	GELB JAUNE
WT	WHITE	WEISS BLANC
RD	RED	ROT ROUGE
GY	GREY	GRAU GRIS
BR	BROWN	BRAUN BRUN
BLK	BLACK	SCHWARZ NOIR
BL	BLUE	BLAU BLEU

8538 401 12291