 
PIP (Picture-in-Picture)

With this function you can display a »PIP screen« (small picture) within the main TV picture. In this way you can watch or monitor the video output from any connected equipment (for example from a VTR) while watching TV or vice versa.



Switching PIP on and off

Press ()/() 4.

The PIP screen will be displayed. The PIP picture comes from the source chosen when the TV was last used

To switch PIP off

Press 🕒 🕕 😉 again.

- 1 Press MENU 4.
- 2 Push joystick **1** to blue or green to select the symbol **2** on the menu screen Push to yellow to confirm.
- 3 Push to yellow. Push to blue or green to select »On« or »Off«. Press joystick to confirm.
- 4 To change the PIP Position:

Push to blue or green to select »PIP Position«. Push to yellow. Push to blue, green, red or yellow to select one of the four positions. Press joystick to confirm

5 Press MENU (6) to restore the normal TV picture.

Changing the position of the PIP

Press repeatedly to change the position of the PIP screen within the main screen. There are four different positions available.



Selecting a PIP source

The symbol 1 will be displayed at the bottom, left-hand corner of the screen. Press 🕤 🕲 repeatedly until the desired source is indicated (e.g. TV, AV1, AV2, YC2, AV3, YC3, AV4, YC4).

ω

 
If no video source has been connected, the PIP picture will be noisy.

A RGB input source cannot be displayed in PIP.

Swapping screens

Press (2)/ 1 0.

The main screen will switch the picture with the PIP screen.



If the PIP screen shows a TV programme and the main picture a video source, and you want to change channels, first press I @ and then the programme buttons @ or PROGR +/- 40.

Joystick





Teletext

Most TV channels broadcast information via teletext. The index page of the broadcaster (usually page 100) informs you about how to use the service. Make sure to use a TV channel with a strong signal, otherwise Teletext errors may occur.

Direct Access Function

Switching Teletext on and off

- 1 Select the TV channel which carries the teletext service you want to view.
- 2 Press once to switch Teletext on. Press 🖲 6 twice for Mix mode. The normal TV screen and the Teletext screen are overlapped.
- 3 Press C 6 to switch Teletext off.

Selecting a Teletext page

Direct Page Selection

Use the number buttons @ to input three digits of the page number. If you have made a mistake: Type in any three digits, then reenter the correct page

Page Catching

- 1 Select a teletext page with page numbers (e.g. index page).
- 2 Press the joystick ௵. »Page Catching« is displayed at the top of the page.
 Push joystick ௰ to blue or green to select the page you want. Press the joystick ௰. The requested page is displayed after some seconds.

Accessing the next or preceding page

Press (Page +) or (Page -).

Freezing a teletext subpage

Press 🔁 🐠. The symbol 🤁 is displayed.

Press 🗐 6 to resume normal teletext reception.

Revealing hidden information (e.g. for a guiz)

Press ②

Press again to cancel.

Using Fastext

(only available, if the TV station broadcasts Fastext signals)

With Fastext you can access pages with one key stroke. When Fastext is broadcast, a colour-coded menu appears at the bottom of the screen. The colours of this menu correspond to the red, green, yellow and blue marks on the Remote Commander. Push the joystick to the colour mark which corresponds to the colour-coded menu. The page is displayed after some seconds.

Joystick



continued >>>>>>: