

AV-21BT8ENS AV-21BT8ENB
 AV-21BT8EPS AV-21BT8EPB
 AV-21BT8EES AV-21BT8EEB
 AV-21BT80EP

BASIC OPERATION SERVICE MENU

■ HOW TO ENTER THE SERVICE MENU

- 1) Press the **MENU** key.
- 2) MENU screen of fig.1 will be displayed

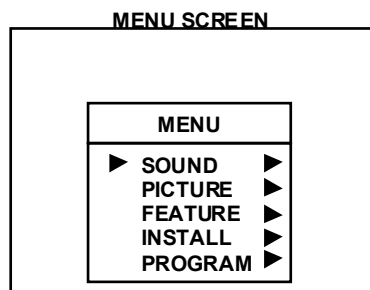


Fig.1

- 3) While the MENU screen is displayed, press the 4,7,2,5 key or INFORMATION key and MUTING key simultaneously.
- 4) The SERVICE MENU screen of (Fig.2) will be displayed.

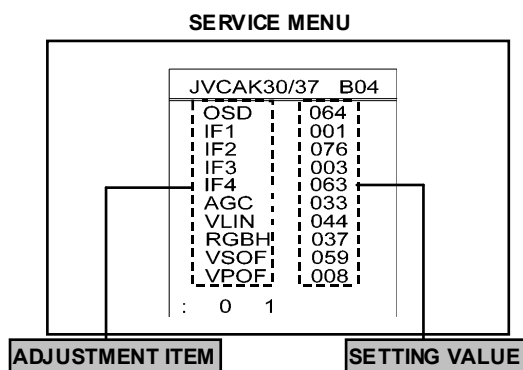


Fig.2

■ SELECTION OF ADJUSTMENT ITEMS

- 1) Enter the SERVICE MENU
- 2) Press the FUNCTION **▲/▼** key and select the ADJUSTMENT ITEM.
- 3) Press the FUNCTION **◀/▶** key and set the SETTING VALUE.

■ HOW TO EXIT SERVICE MODE

- 1) Press the **STANDARD** Key on REMOTE CONTROL UNIT.

■ HOW TO ENTER THE GEOMETRY MENU

- This model is built-in GEOMETRY MENU for geometry adjustment.
- 1) Enter the SERVICE MENU
 - 2) Press the GREEN key, geometry menu appears (Fig. 3).
 - 3) Press the FUNCTION **▲/▼** key and select the ADJUSTMENT ITEM.
 - 4) Press the FUNCTION **◀/▶** key and set the SETTING VALUE.

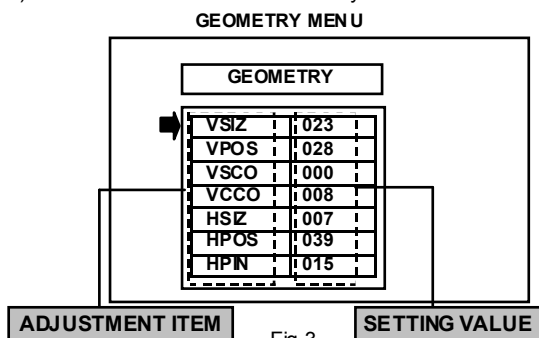


Fig.3

REMOTE CONTROL UNIT key NAME

NUMBER key

INFORMATION key

AV key

STANDARD key

COLOUR key

MENU key

FUNCTION key

JVC
RM-C1100 TV

● **FUNCTION OF COLOUR key**

RED key :
It switches the AVL to ON or OFF mode on service menu. AVL word is visible on service menu when AVL is on.

GREEN key :
It switches to GEOMETRY adjust menu. Geometry of the picture is adjusted in this menu.

YELLOW key :
It switches to VERTICAL SCAN DISABLE mode. It is useful to adjust screen voltage.

BLUE key :
It is used to adjust AGC and IF automatically on service menu.