

**SERVISNI MENU ZA TV 55V10/37V10**  
**shassis: 3Y/4Y01**

**MENU 1**

V. SIZE 20  
V. POS 33  
V. LINE 10  
V. SC 0  
H. PHASE 13  
H. BLK 0  
PATTERN 0  
H. FREQ 25

**MENU 4**

SUB\_BRI 123  
OSD CONT 100  
B. GAM SEL 0  
RG GAM DEF 0  
SCM B\_Y DC 8  
SCM R\_Y DC 4  
BLUE BLACK 1  
C/E OSD 0

**MENU 3**

RF. AGC 15  
VIF. SYS 1  
SND. TRAP 7  
VIDEO LEVEL 0 (4)  
FM LEVEL 0  
R. B. BALANCE 8  
DIGITAL OSD 0

**OPTION**

2 AV CH 0  
C. SYS. SEL 1  
TXT ON 1  
MONITOR OUT 0  
LOGO ON 1 (0)  
CUSTOM LOGO 1 (0)  
N P00 VLT 1  
TUNER TYPE 0

**MENU 2**

V. KILL 0  
R. C. 128  
G. C. 180  
B. C. 125  
R. D. 48  
G. D. 10  
B. D. 63  
COLLOR TEST 0

**Ulaz u servisni menu:**

1. Stisnuti MENU dva puta
2. Stisnuti Q.VIEW
3. Stisnuti MUTE
4. Menu-i se mjenjeju sa tipkom TIMER (sat na daljinskom)