

SERVICE MENU

The service menu is entered by pressing the <SUB-PAGE> key on the RC and VOLUME-DOWN key on the TV simultaneously when the TV is in TV-mode. The service menu is left by pressing the <TV> key.

When entering the service mode the first menu item is IF (selection of normal IF). Next items can be selected using the keys <PROGRAM-UP> and <PROGRAM-DOWN>. The value of each item can be changed using the keys <VOLUME-UP> and <VOLUME-DOWN>. The item values are displayed as decimal values, except for the tuner-band-selection, BITS and option items.

They are displayed as hexa-decimal values. All values are stored in non-volatile memory when the service menu is left. The "INIT CTV832U" item initializes the NVM: It clears all names and tuning information of all programs and writes default values for the service alignments and preset values in NVM. While doing so, the OSD displays "BUSY". When the initialization is finished, the message "READY" is written on the screen.

| Item | Default | Explanation |
|--------|---------|--|
| IF | 38.9 | IF selection (58.8, 45.8, 38.9 or 38.00 MHz) |
| IFL1 | 33.9 | IF for SECAM-L1 selection (33.4 or 33.9 MHz) |
| HP | 31 | Horizontal parallelogram |
| HB | 31 | Horizontal bow |
| EW | 37 | East-west Width for picture setting 16:9 |
| PW | 18 | East-west Parabola for picture setting 16:9 |
| UCP | 13 | East-west Upper Corner parabola for picture setting 16:9 |
| LCP | 13 | East-west Lower Corner parabola for picture setting 16:9 |
| TC | 28 | East-west Trapezium for picture setting 16:9 |
| HP4:3 | 31 | Horizontal parallelogram for picture setting 4:3 |
| HB4:3 | 31 | Horizontal bow for picture setting 4:3 |
| EW4:3 | 45 | East-west Width for picture setting 4:3 |
| PW4:3 | 15 | East-west Parabola for picture setting 4:3 |
| UCP4:3 | 35 | East-west Upper Corner parabola for picture setting 4:3 |
| LCP4:3 | 25 | East-west Lower Corner parabola for picture setting 4:3 |
| TC4:3 | 31 | East-west Trapezium for picture setting 4:3 |
| HS | 31 | Horizontal Shift |
| VS | 31 | Vertical Slope |
| VA | 31 | Vertical Amplitude |
| SC | 31 | S-Correction |
| VSD | off | Vertical Scan Disable |
| VSH | 31 | Vertical Shift |
| VX | 25 | Vertical zoom (East-west only) |
| BLR | 7 | Black Level Red |
| BLG | 7 | Black Level Green |
| WPR | 31 | White point correction Red |
| WPG | 31 | White point correction Green |
| WPB | 31 | White point correction Blue |
| Ys | 15 | Y-delay adjustment for SECAM |
| Yn | 8 | Y-delay adjustment for NTSC |
| YP | 0 | Y-delay adjustment for PAL |

Yo 0 Y-delay adjustment for external sources
 AGC 4 AGC take over
 CL 4 Cathode drive level
 Bits 00 (ACL=0; FCO=0; SVO=0; HP2=0; FSL=0; OSO=0)
 Bits1 00 (FFI=0; TV=0; AV-1=0; AV-2=0; AV-2S=0;
 AV-3=0; AV-3S=0; AV=0)

OptByte1 (Default=E3)

| | | | |
|----------|---|--------------------|-----|
| PAL-BG | = | Selection PAL-BG | (1) |
| PAL-DK | = | Selection PAL-DK | (1) |
| PAL-I | = | Selection PAL-I | (0) |
| PAL-M | = | Selection PAL-M | (0) |
| PAL-N | = | Selection PAL-N | (0) |
| NTSC-M | = | Selection NTSC-M | (1) |
| NTSC-443 | = | Selection NTSC-443 | (1) |
| SECAM-BG | = | Selection SECAM-BG | (1) |

*(1) Selected, (0) Not Selected

OptByte2 (Default=07)

| | | | |
|-----------|---|--|-------|
| SECAM-DK | = | Selection SECAM-DK | (1) |
| FRANCE | = | Selection FRANCE | (1) |
| WEB | = | Enable/Disable | (1/0) |
| PalBG Scr | = | When the PalBG Scr selected, TV searches only PalBG. Otherwise it searches all. | (0) |
| AV2 | = | Selection AV2 | (0) |

*(1) Selected, (0) Not Selected

OptByte3 (Default=E8)

| | | |
|---------|---|-----|
| | = | (0) |
| JR | = | (0) |
| HP | = | (0) |
| Vol Bar | = | (1) |
| Sub Wof | = | (0) |
| Presets | = | (1) |
| Lock | = | (1) |
| Hotel | = | (0) |

When the Hotel mode selected, It's impossible to
enter menu settings. It selects the Hotel mode. (1)

*(1) Selected, (0) Not Selected

OptByte4 (Default=B8)

| | | | |
|----------|---|---|-------|
| 16:9 | = | Set 16:9 mode active | (1) |
| 110 | = | Selection 110/90 Tube | (1/0) |
| Hpol | = | Default | (0) |
| Vpol | = | Default | (0) |
| Field | = | Default | (1) |
| FE-Out | = | Default | (1) |
| Sw-on | = | When the power on the TV, it Enables or Disables Standby Mode. | (1/0) |
| Vg-Check | = | Default | (1) |

*(1) Selected, (0) Not Selected

OptByte5 (Default=09)

| | | | |
|-----------|---|---------------------------|-----|
| Clock | = | Enable/Disable Clock Menu | (1) |
| AM/PM | = | | (1) |
| AVL | = | Auto Volume Level | (1) |
| | = | | (0) |
| 1-norma | = | Default | (0) |
| Flof-Txt | = | | (0) |
| TR | = | | (0) |
| DVD Start | = | | (0) |

*(1) Selected, (0) Not Selected

| OptByte6 | | | (Default=00) |
|-----------------|---|---------|---------------------|
| UOC-J | = | Default | (0) |
| ignrSUP | = | Default | (0) |
| ignrNDF | = | Default | (0) |
| Pal-BG/DK | = | | (0) |
| Pal-L | = | | (0) |
| Eco | = | | (0) |
| WEB ST | = | | (0) |
| WSS | = | | (0) |

| | | |
|-----|-----|---|
| TSL | 45 | Start frequency of the low-band in MHz |
| TEL | 118 | End frequency of the low-band |
| TSM | 118 | Start frequency of the mid-band |
| TEM | 400 | End frequency of the mid-band |
| TSH | 400 | Start frequency of the high-band |
| TEH | 863 | End frequency of the high-band |
| TBL | 03 | hex Value needed for switching to the low-band |
| TBN | 06 | hex Value needed for switching to the mid-band |
| TBH | 85 | hex Value needed for switching to the high-band |

16:9 / 4:3 Adjustment

The CTV832U software uses two sets of parameters for the registers HP (horizontal parallelogram), HB (horizontal bow), EW (EW width), PW (parabola/width), UCP (upper corner parabola), LCP (lower corner parabola) and IC (EW trapezium). They occur in the service menu for 16:9 screen with the listed abbreviations.

For the 4:3 screen there is a second set of these registers. They occur in the service menu with the extension '4:3' (i.e. HP4:3, HB4:3,...).

Each register set must be adjusted under the right conditions i.e. the 16:9 settings are adjusted with a 16:9 picture - the 4:3 settings with a 4:3 picture.

The inenu items EW, PW, UCP, LCP, TC, HP4:3, HB4:3,... TC4:3 and VX will only be in the service menu if the option 16:9 is set in 4 th option byte.

| TUNER PARAMETER IN SERVICE AND DEFINITION | | PHILIPS | OREGA | TEMIC | SAMSUNG | ALPS |
|--|---|----------------|--------------|--------------|----------------|-------------|
| TSL | Start frequency of the low-band in MHz | 45 | 45 | 45 | 45 | 45 |
| TEL | End frequency of the low-band | 160 | 118 | 150 | 150 | 180 |
| TSM | Start frequency of the mid-band | 160 | 118 | 150 | 150 | 180 |
| TEM | End frequency of the mid-band | 440 | 400 | 440 | 425 | 465 |
| TSH | Start frequency of the high-band | 440 | 400 | 440 | 425 | 465 |
| TEH | End frequency of the high-band | 863 | 865 | 865 | 865 | 900 |
| TBL | hex Value needed for switching to the low-band | A1 | 03 | 01 | 01 | 01 |
| TBN | hex Value needed for switching to the mid-band | 92 | 06 | 02 | 02 | 02 |
| TBH | hex Value needed for switching to the high-band | 34 | 85 | 04 | 08 | 0C |