

3. Directions for use

Tuning in to channels

Quick installation (first use)

The following operations are all described in the enclosed quick installation guide. We advise you to use it. The first time you switch on the television, a menu appears on the screen. This menu asks you to choose the language of the other menus.

If the menu does not appear, hold down the PROGRAM- and PROGRAM+ keys on the set for 4 seconds to bring it up.

