

Fuji Inverter FVR-E7S-EX

200 V 3 Φ Series, 0.1 to 4.0 kW

200 V 1 Φ Series, 0.1 to 2.2 kW

400 V 3 Φ Series, 0.4 to 4.0 kW

Instruction Manual

Contents

- | | |
|---|---|
| 1. Warning and Caution p.1 | (3) Selecting Operation Method |
| 2. Introduction p.2 | (4) Setting Data Codes |
| 3. Inspection Upon Receipt p.2 | (5) Control Circuit Connection
And Operation |
| 4. Construction And Handling p.3 | (6) Actual Operation |
| (1) Part Name | 9. Function Explanation p.22 |
| (2) Installation And Removing
Terminal Cover | (1) Function Code Tables |
| 5. Installation Instructions p.4 | (2) Function Explanation |
| (1) Installation Conditions | 10. Maintenance And Inspection p.43 |
| (2) Mounting Direction And Space | (1) Inspection Items |
| (3) Mounting Screws And Holes | (2) Periodic Replacement Part |
| (4) Removing the ventilation covers | (3) Measurement Points And
Meters |
| 6. Wiring p.5 | 11. Troubleshooting p.45 |
| (1) Main Circuit Wiring | (1) Protective Function |
| (2) Control Circuit Wiring | (2) Troubleshooting |
| (3) Basic Wiring Diagram | 12. Appendix p.48 |
| 7. Keypad Panel p.8 | (1) Standard Specifications |
| (1) Part Name And Function | (2) External Dimensions |
| (2) Controlling Method of Keypad
Panel | (3) Application of Wiring And
Equipment |
| (3) Display And Key Operation | (4) Terminal Function |
| 8. Operation p.16 | (5) Control Block Diagram |
| (1) Pre-Operation Inspection | |
| (2) Test Run Check Points | |