


HOW TO PROGRAMME YOUR REMOTE

FAAC 433 SLH/SLR SERIES – FAAC 868 SLH SERIES

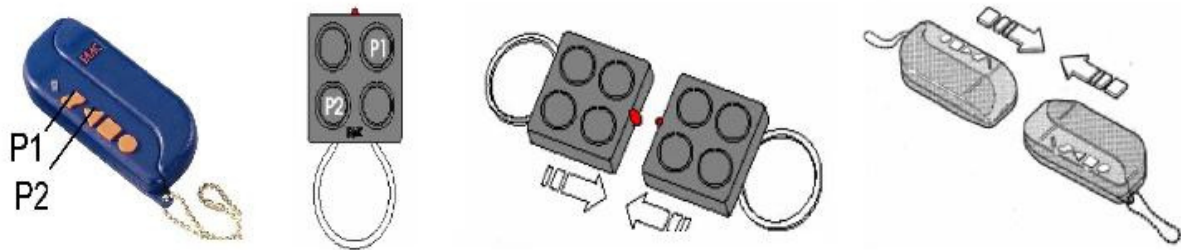

Important technical information:

In this range of remotes, there are “master” remotes and “slave” remotes.

“Master” remotes can share their code with other remotes and learn from other “master” remotes.

“Slave” remotes cannot share their codes with another remote.

To determine the type of your remote, hold down a button:

- if the light flashes once then remains lit, it is a “master” remote
- if the light comes on continuously without flashing, it is a “slave” remote

To programme your new remote by using a remote that has already been programmed, that second remote must be a “master” remote.

Remote Control Express only sells “master” remotes.

Programming using a remote that has already been programmed.

Important information:

- During programming, don't press the keys on the new remote first, you risk deprogramming the old remote.
- During programming, the door will be opened. To avoid accidents, we recommend programming your remote from inside your garage.

To programme your remote, follow these steps:

- 1- On a flat surface, like a table, place one “master” remote that has already been programmed and your new remote head to head (see image).
- 2- At the same time, press buttons P1 and P2 on the remote that has already been programmed. Release the buttons when the light on the remote flashes.
- 3- Next, hold down one of the buttons on the remote that has already been programmed.
- 4- Hold down the same button on the new remote. Wait until the light on your new remote flashes twice and then goes out, indicating that the operation has been successful.
- 5- Release all the buttons.
- 6- Verify that your new remote is working correctly.

Programming using a radio receiver.

Important information:

- During programming, the door will be opened. To avoid accidents, we recommend programming your remote from inside your garage.
- Programming your new remote will de-programme all other remotes previously programmed for your device.

To programme your remote, follow these steps:

- 1- Open the box containing the radio receiver.
- 2- At the same time, press buttons P1 and P2 on a remote that has already been programmed. Release them when the light on the remote flashes.
- 3- On the receiver card, hold down the auto-learning button (round button SW1) until the light on the card flashes.
- 4- Holding down the auto-learning button, hold down one of the buttons on the remote, until the light on the card stays on for 2 seconds.
- 5- Release all the buttons.
- 6- Verify that your new remote is working correctly.
- 7- Close the box containing the radio receiver.