

Connector colours

Nr	Black	Or	Orange
Be	Blue	Rg	Red
Mr	Brown	Ba	White
Gr	Grey	Jn	Yellow
Ve	Green		

Key to items

- 1 Battery
- 2 Ignition switch
- 3 Engine fuse box
- 4 Passenger fuse box
- 70 RH rear door switch
- 71 Passenger's door switch
- 72 Driver's door switch
- 96 Mirror control switches
- 97 Passenger's mirror
- 98 Driver's mirror

- 99 Front interior light
- 100 Rear interior light
- 101 Map reading light
- 102 Instrument panel
- a) illumination
- b) LH indicator
- c) RH indicator
- d) clock
- e) handbrake warning
- f) ABS warning


- g) airbag warning
- h) coolant temperature warning
- i) oil pressure warning
- j) dipped beam
- k) hi beam warning
- l) fog light
- m) charge warning
- n) low coolant warning
- o) brake pad wear warning
- p) low fuel warning

- 103 Coolant level sensor
- 104 LH brake pad wear sensor
- 105 RH brake pad wear sensor
- 106 Brake fluid level sensor
- 107 Handbrake switch
- 108 Fuel level sensor
- 109 Oil level sensor
- 110 Oil pressure sensor


Diagram 7

MTS H33273

Electric mirrors

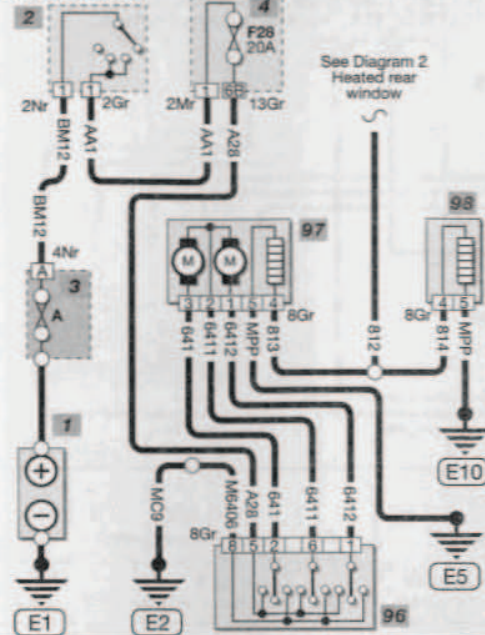

Interior lights

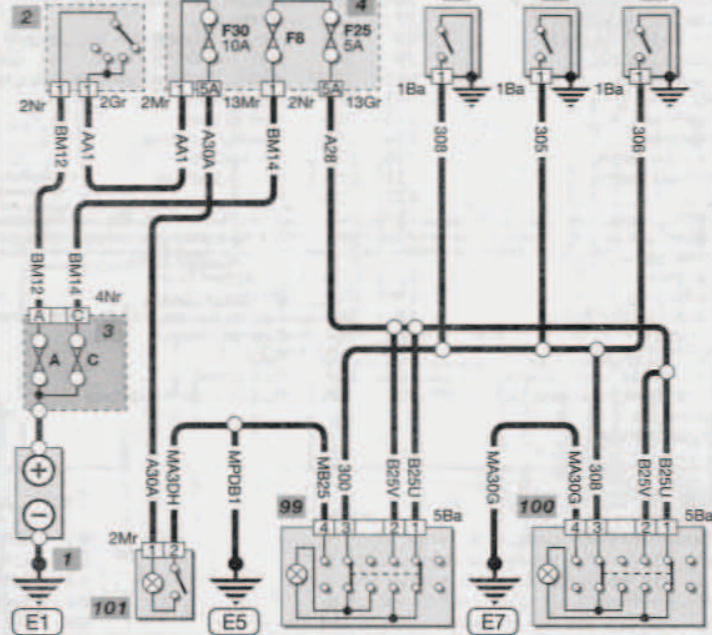

Instrument panel

