

Default

Values

Entering

Depress and hold the button 'P-' on the RC while switching on with the mains button.

(Additionally on replacement of the memory, the Hotel Mode and the band limits are to be deactivated and the AGC and AFC are to be readjusted).

Grundig

CUC2020

CTV

Hotel Mode

Depress and hold button 'i' on the RC while switching on with the mains button. In the menu line 'HOTEL' select 'ON' and leave the menu with button 'i'. Cancelling the Hotel Mode: Repeat the steps above but change 'HOTEL' to 'OFF'.

Grundig

CUC2020

CTV

OSD

position

Depress and hold the 'i' button on the RC while switching on with the mains button. Set the OSD position in the menu and store with 'OK'.

Grundig

CUC2020

CTV

Service Mode

Menu guide: 'i', 'Dialog Center', 'Service', 'Only for retailer', 'Code 8500'.

Grundig

CUC2030

CTV

Band Limits

Cancelling

Depress and hold button 'i' on the RC while switching on with the mains button. Move the bar to 'AGC' in the Service Menu and operate the buttons 'AUX', 'OK' in this order.

Grundig

CUC2030

CTV

Child Lock

Cancel

General reset with number 7038.

Grundig

CUC2030

CTV

Default

Values

Entering

Depress and hold the button 'P-' on the RC while switching on with the mains button.

(Additionally on replacement of the memory, the Hotel Mode and the band limits are to be deactivated and the AGC and AFC are to be readjusted).

Grundig

CUC2030

CTV

Hotel Mode

Depress and hold button 'i' on the RC while

switching on with the mains button. In the menu line 'HOTEL' select 'ON' and leave the menu with button 'i'. Cancelling the Hotel Mode: Repeat the steps above but change 'HOTEL' to 'OFF'.

Grundig

CUC2030

CTV

OSD

position

Depress and hold the 'i' button on the RC while switching on with the mains button. Set the OSD position in the menu and store with 'OK'.

Grundig

CUC2030

CTV

Service Mode

Menu guide: 'i', 'Dialog Center', 'Service', 'Only for retailer', 'Code 8500'.

Grundig

CUC2031

CTV

Band Limits

Cancelling

Depress and hold button 'i' on the RC while switching on with the mains button. Move the bar to 'AGC' in the Service Menu and operate the buttons 'AUX', 'OK' in this order.

Grundig

CUC2031

CTV

Child Lock

Cancel

General reset with number 7038.

Grundig

CUC2031

CTV

Default

Values

Entering

Depress and hold the button 'P-' on the RC while switching on with the mains button.

(Additionally on replacement of the memory, the Hotel Mode and the band limits are to be deactivated and the AGC and AFC are to be readjusted).

Grundig

CUC2031

CTV

Hotel Mode

Depress and hold button 'i' on the RC while switching on with the mains button. In the menu line 'HOTEL' select 'ON' and leave the menu with button 'i'. Cancelling the Hotel Mode: Repeat the steps above but change 'HOTEL' to 'OFF'.

Grundig

CUC2031

CTV

OSD

position

Depress and hold the 'i' button on the RC while switching on with the mains button. Set the OSD position in the menu and store with 'OK'.

Grundig

CUC2031