



TASTO BUTTON TASTEN	
1	21-16
2	21-15
3	21-13
4	21-12
5	21-11
6	21-10
7	21-9
8	22-17
9	22-16
0	21-17
+	25-17
- LIST	25-16
[]	22-9
R	24-10
M	26-9
<	27-16
>	27-17
--/ PG+	22-15
III	1-12
P/F PG-	22-13
⊖ SUB	26-15
? PK	26-12
⊕ MIX	26-10
STOP	26-16

TASTO BUTTON TASTEN	
NICAM D/K	26-13
[]	26-11
+ / -	23-17
SELE	1-13
NORM	22-11
[]	22-10
[]	1-11
[]	27-13
[]	1-16
[]	1-10
[]	1-15
PIP	25-11
TV	1-9
AV	1-17
[]	22-12
ROSSO RED ROT	27-9
VERDE GREEN GRUEN	27-10
GIALLO YELLOW GELB	27-15
BLU BLUE BLAU	27-12
[] TOP	27-11

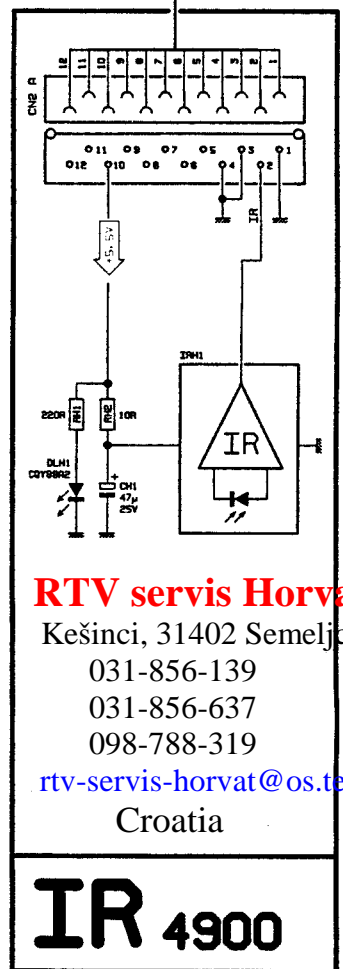

RTV servis Horvat
 Kešinci, 31402 Semeljci
 031-856-139
 031-856-637
 098-788-319
rtv-servis-horvat@os.tel.hr
 Croatia

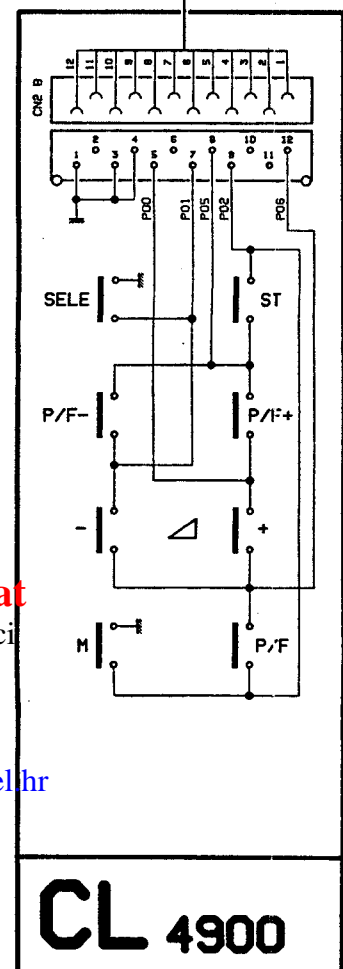

IR 4900

CL 4900