


STEREO LED FLASHING CODES.

If the TV set does not work and the stereo led is flashing, follow the sequence according to the information below, as a guide to fault finding.


1. **Unable to read or write into NVM:** 66% ON, 33% OFF twice and OFF for a second.



2. **MSP failure:** 66% ON, 33% OFF for three times and OFF for a second.

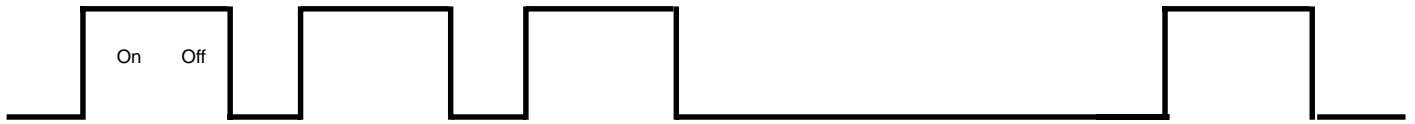

3. **VPC failure:** 66% ON, 33% OFF for four times and OFF for a second.

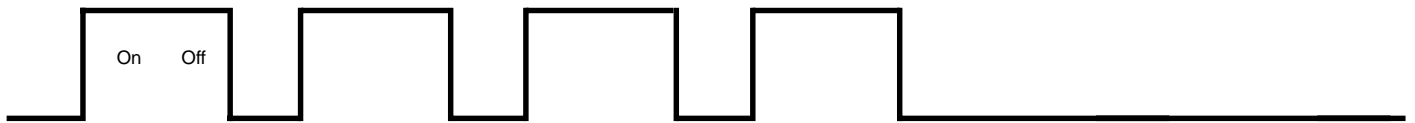

4. **SAA4956 failure:** 66% ON, 33% OFF for six times and OFF for a second.

5. **DDP failure:** 66% ON, 33% OFF for seven times and OFF for a second.