

COBY®

Kyros Internet Tablet

Model: MID7024

Model: MID8024

Model: MID1024



FIRMWARE UPDATE

This is a system firmware update.

This update will fix:














- When booting, it flashes COBY and shuts off.
- Continuously keeps rebooting.

Important- This procedure will delete all contents on Tablet.

Firmware Update Procedure


Step 1- We need a computer and MicroSD Card.

Step 2- Using the Computer, Copy the content in the MID8024.zip folder into MicroSD card.

Name ▲	Size	Type	Date Modified
 board.8024	16,101 KB	TGZ File	7/20/2011 1:10 PM
 logo	29 KB	Bitmap Image	7/20/2011 1:10 PM
 patch.patch_gettingstart	13 KB	TGZ File	7/20/2011 1:10 PM
 patch.patch_sd_path_extsd	6 KB	TGZ File	7/20/2011 1:10 PM
 recovery	6,481 KB	File	7/20/2011 1:10 PM
 u-boot	288 KB	BIN File	7/20/2011 1:10 PM
 utscript	2 KB	File	7/20/2011 1:10 PM
 utscript.sh	5 KB	SH File	7/20/2011 1:10 PM
 utscript_sd	1 KB	File	7/20/2011 1:10 PM
 utv210_root	50,978 KB	TGZ File	7/20/2011 1:10 PM
 utv210_userdata	8,514 KB	TGZ File	7/20/2011 1:10 PM
 zImage	3,273 KB	File	7/20/2011 1:10 PM
 zImage.debug	6,478 KB	DEBUG File	7/20/2011 1:10 PM

Step 3- Insert the MicroSD card into MID8024 MicroSD slot.

Step 4- Press and hold simultaneously the Home key (the center of metal key) and the power key to start the update.

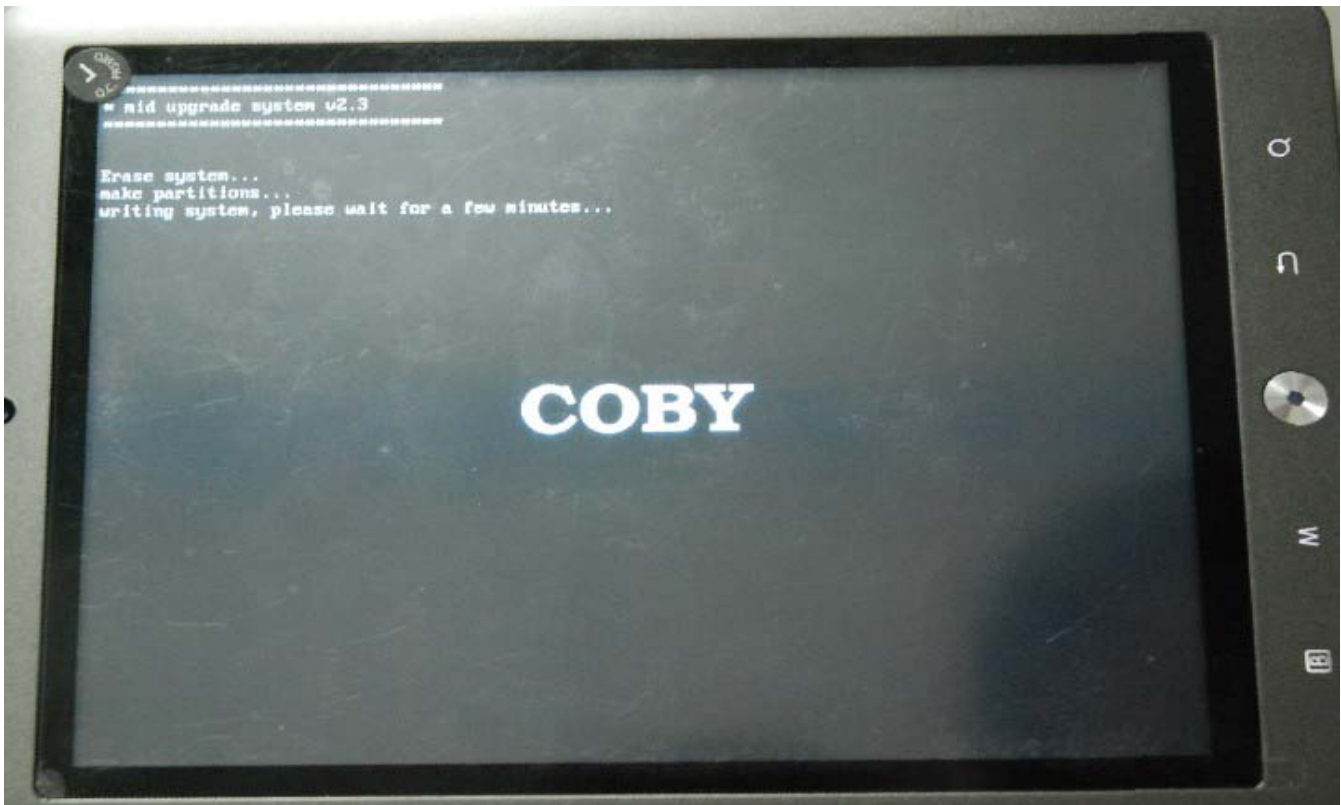

Step 5- The unit will shut off after the firmware update. Remove the MicroSD card and turn the unit on. Done.

If you have a problem with this device, Please visit us on the web at www.cobyusa.com for Frequently Ask Questions (FAQs). If these resources do not resolve the problem, then contact Technical Support

**Phone: 1-800-727-3592
Weekdays 8:30AM - 5:00PM EST
Saturday 9:00AM - 5:00PM EST**

Or

**Phone: 1-877-302-2629
Mon-Fri: 9:00AM -9:00PM SCT**