

**Digitalplatte**  
**Digital board**  
**Platine numérique**  
**Piastra digitale**  
**Placa Digital**

401 1,6V<sub>SS</sub> V

402 50V<sub>SS</sub> V


501 12V<sub>SS</sub> H

502 1200V<sub>SS</sub> H

701 2,5V<sub>SS</sub> H

702 500V<sub>SS</sub> H

NF-Sign. / AF sign / BF / BF      Vert. Imp. / Vert. imp. / Impulsion vert.  
 FBAS-Sign. / Comp. colour signal / CLSS / CLSS      Hor. Imp. / Hor. imp. / Impulsion hor.

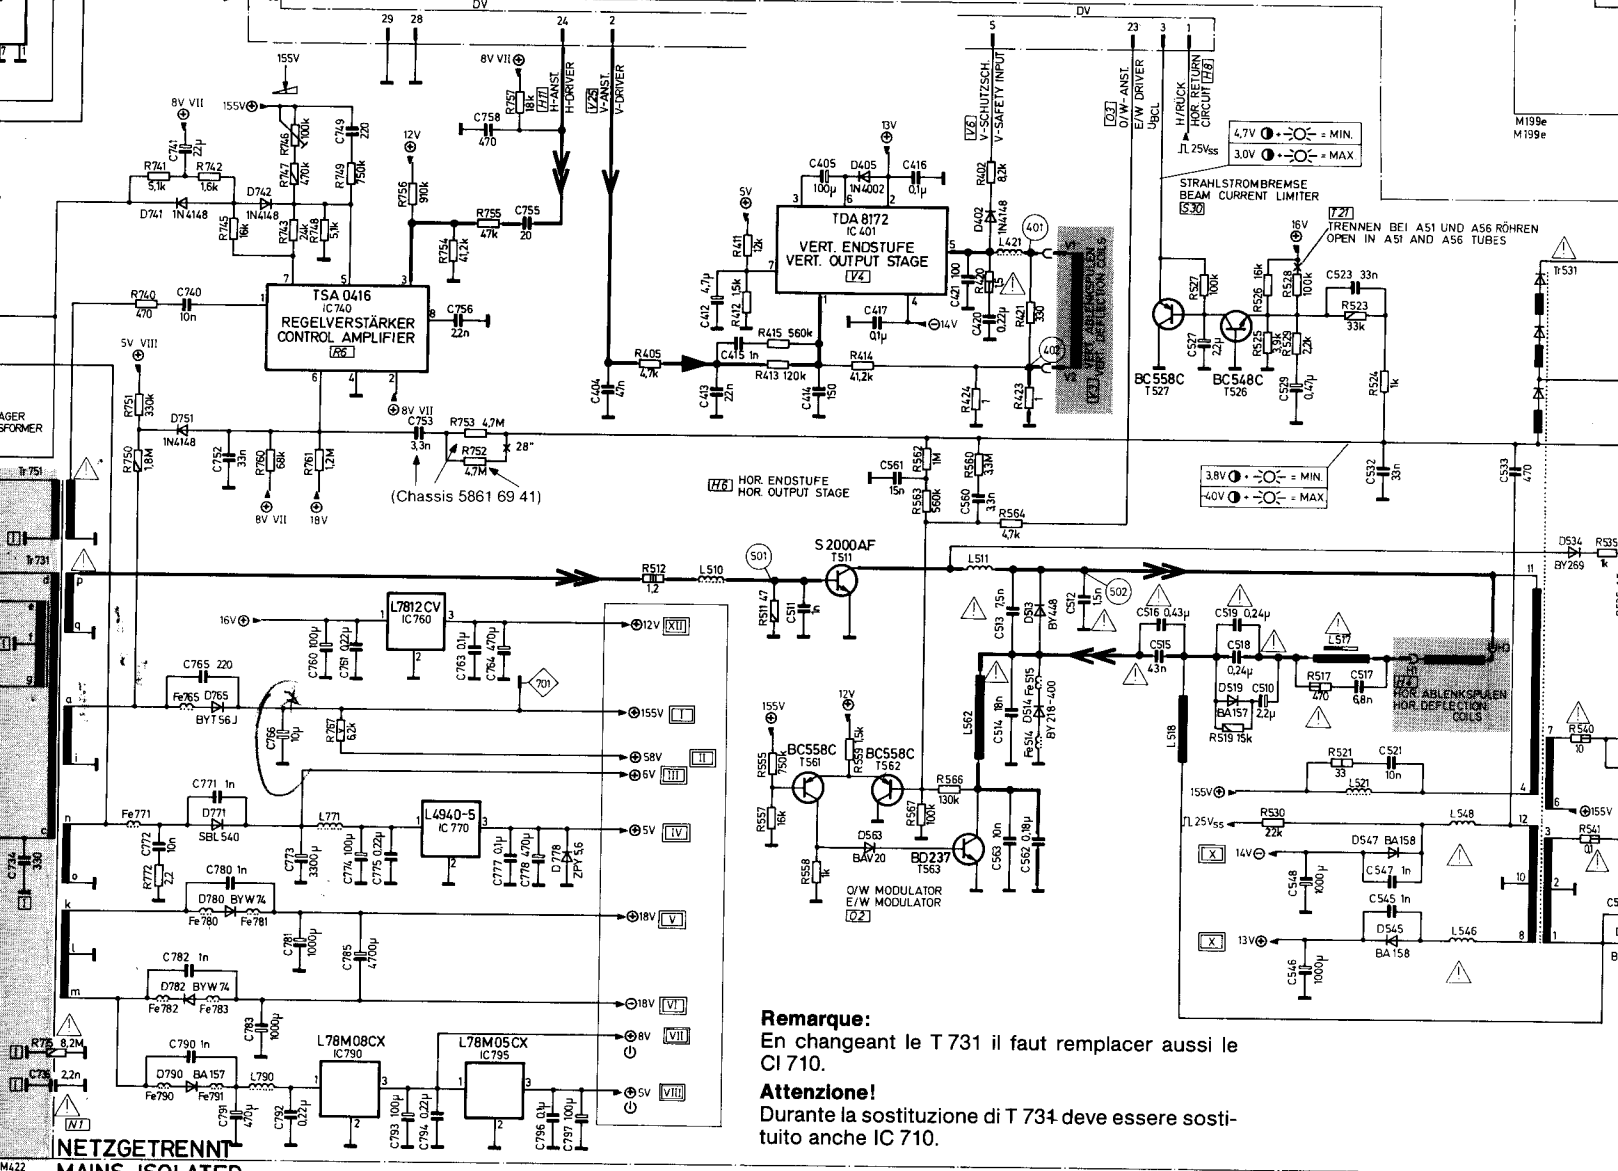

**Remarque:**  
En changeant le T 731 il faut remplacer aussi le CI 710.

**Attenzione!**  
Durante la sostituzione di T 734 deve essere sostituito anche IC 710.

