

Text/Legend

Table of failures:

Failure Identifier	Indication	Detected failure	To be checked
0	F00	Pump triac failure	Control unit
1	FH	No water inlet	Water Tap / Valve / Flowmeter / Pressostat
2	FA	Aquastop failure	Aquastop switch
3	FP	Drain failure	Drain pump / Pressostat
4		Not active	
5	F05	NTC failure (SC / OC)	NTC
6	F06	Tachometer failure (no motor movement detected)	Motor / Tachometer
7	F07	Triac short circuit detection	Control unit, Motor
8		Not active	
9	F09	Overflow failure	Pressostat
10		Not active	
11	F11	Communication failure	Control unit, I2C bus
12		Not active	
13		Not active	
14	F14	EEPROM failure	Control unit
15		Not active	
16	F16	Control failure	Control unit
17		Not active	
18	F18	Control failure	Control unit
19	F19	Mains power failure	Power
20	F20	Control failure	Control unit
21	F21	Control failure	Control unit

Display of failures on the speed leds (flashing):

Errors	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
	F:00	F:H	F:A	F:P	F:4	F:5	F:6	F:7	F:8	F:9	F:10	F:11	F:12	F:13	F:14	F:15
Speed Leds	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
	○	○	○	○	○	●	●	●	○	○	○	○	○	○	○	○
	○	○	●	●	○	○	●	●	○	○	○	○	○	○	○	○
	○	●	○	●	○	●	○	○	●	○	○	○	○	○	○	○

Errors	16	17	18	19	20	21
	F:16	F:17	F:18	F:19	F:20	F:21
Speed Leds	●	○	●	●	●	●
	○	○	○	○	○	○
	○	○	○	○	●	●
	○	○	●	●	○	○
	○	○	○	●	○	●