

TERRA 70L

FIRMWARE UPDATE

Before You start, please copy all your private files from the tablet. This operation will make default settings and delete all saved files on this tablet.

1. Download the file called „terra_70_l_130626.zip” from our website www.goclever.com
2. Copy the folder called „__init_imapx820”, directly on SD card (do not change the folder’s name and make sure on SD card is just this mentioned file)
3. Put SD card into the device and press „Power ON” buton* (Firmware will be installing automatically)
4. If u see „Remove sdcard and reboot”, please take off SD card.
5. Device will turn on automatically and will set language choice.

*REMARK. Device should be at least 30% battery life or connected to the power (recommended)