

**Die aktuelle Ersatzteilreferenzliste  
des Classic Lieferprogramms für  
DVD/CD Laserprodukte....**

**CDM = Laser Mechanismus**  
**LPU = Single Laser Pick-Up**  
**MPU = Mini Disc Pick-Up**  
**CDF = Flachbandkabel**

**The latest Cross-Reference-List for  
the Classic range of DVD/CD laser  
products ....**

**CDM = Laser Mechanism**  
**LPU = Single Laser Pick-Up**  
**MPU = Mini Disc Pick-Up**  
**CDF = Flat Cable**



Original Part No.	Brand	Classic Part No.
101 177 40	THOMSON	LPU31003-QRP
141730311	AIWA	LPU31113-QRP
1-575-001-11	SONY	CDF31010
1-575-003-11	SONY	CDF31068
1-777-955-11	SONY	CDF31101
24804019	SANYO	LPU31058-ORI
24804019	SANYO	LPU31058-ORI
2892271	UNIVERSUM	CDM31279-ORI
3041R-0041 A	LG	LPU31262-ORI
3103 309 05290	PHILIPS	CDM31174-QRP
3103 309 05290	PHILIPS	LPU31174
3104 147 00271	OTTO-VERSAND	CDM31183-QRP
3104 147 00271	PHILIPS	CDM31183-QRP
3104 147 00301	PHILIPS	CDM31080-QRP
3104 147 02170	PHILIPS	CDM31080-QRP
3305 022 20201	PHILIPS	CDM31080-QRP
350 612 70	THOMSON	LPU31061-QRP
350 650 00	THOMSON	LPU31001-QRP
35988470	THOMSON	CDM31318-ORI
411351B	SONY	LPU31003-QRP
4822 691 10615	GRUNDIG	CDM31080-QRP
4822 691 10615	PHILIPS	CDM31080-QRP
4822 691 10772	PHILIPS	CDM31185-ORI
4822 691 30258	PHILIPS	LPU31003-QRP
4822 691 30278	NAD	CDM31080-QRP

Original Part No.	Brand	Classic Part No.
4822 691 30278	PHILIPS	CDM31080-QRP
4822 691 30282	PHILIPS	LPU31001-QRP
4822 691 30354	OTTO-VERSAND	CDM31183-QRP
4822 691 30354	PHILIPS	CDM31183-QRP
559318026	TELEFUNKEN	LPU31003-QRP
559318026	THOMSON	LPU31003-QRP
614 218 6855	SANYO	LPU31042-ORI
614 258 6640	SANYO	LPU31003-QRP
620 213 3546	SANYO	LPU31051-ORI
620 217 9964	SANYO	LPU31051-ORI
645 005 5966	SANYO	LPU31057-ORI
645 005 5966	UNIVERSUM	LPU31057-ORI
645 006 7983	SANYO	LPU31058-ORI
645 006 7983	SANYO	LPU31058-ORI
6716DPH005A	LG	LPU31302-ORI
6716DPH005B	LG	LPU31302-ORI
6716DPH007B	LG	LPU31310-ORI
758793	SIEMENS	LPU31347-ORI
75952-030.55	GRUNDIG	CDM31080-QRP
75952-030.5500	GRUNDIG	CDM31080-QRP
75955-104.4200	GRUNDIG	CDM31272-ORI
8 633 811 548	BLAUPUNKT	LPU31036-ORI
882001006	SONY	LPU31336-ORI
8-820-244-01	SONY	CDM31349-ORI
8-820-244-02	SONY	CDM31349-ORI
8-848-062-01	SONY	LPU31001-QRP
884813701	SANYO	LPU31003-QRP
8-848-233-11	SONY	LPU31002-ORI
8-848-233-11	SONY	LPU31002-QRP
884831311	SONY	LPU31001-QRP
884838701	SONY	LPU31061-QRP
884841509	SONY	LPU31061-QRP
92 LHPC 1 LXASY (7/8)	SHARP	LPU31181-QRP
92 LHPC 1 MASY	SHARP	LPU31052-QRP
92 LHPC 1 MASY (5/8)	SHARP	LPU31052-QRP
92 LHPC 1 MX (7/8)	SHARP	LPU31182-ORI
928 TX 0417	SABA	LPU31001-QRP
92LHPC1CCASY	SHARP	LPU31041-QRP
9305 022 20101	PHILIPS	CDM31080-QRP
9305 022 20111	PHILIPS	CDM31080-QRP
9305 022 20201	PHILIPS	CDM31080-QRP
9305 022 20201	PHILIPS	CDM31080-QRP
9305 022 20212	PHILIPS	CDM31080-QRP
9305 022 20219	PHILIPS	CDM31080-QRP
9305 022 25001	PHILIPS	LPU31246-ORI
9305 022 30101	PHILIPS	CDM31185-ORI
9305 022 30103	PHILIPS	CDM31185-ORI
9305 022 30107	PHILIPS	CDM31185-ORI
9305 023 61001	PHILIPS	LPU31229-ORI
988 481 37119	SANYO	LPU31003-QRP
98848127110	AIWA	LPU31342-QRP
98848137119	AIWA	LPU31003-QRP
9965 000 08785	PHILIPS	CDM31174-QRP
A-4-713-410 A	SONY	LPU31260-QRP
AH30-00010A	SAMSUNG	LPU31151-ORI
AH30-20001B	SAMSUNG	LPU31345-ORI
AH97-00900A	AKAI	LPU31222-ORI
AH97-00900A	SAMSUNG	LPU31222-ORI
AH97-00961A	SAMSUNG	LPU31222-ORI

— für die Suche nach Geräten benutzen Sie bitte unsere website —  
 — for searching with models please use our website —

für weitere Informationen/ for more details: [www.classic-serviceparts.com](http://www.classic-serviceparts.com)

Original Part No.	Brand	Classic Part No.	Original Part No.	Brand	Classic Part No.
AJ30-20001B	SAMSUNG	LPU31116-ORI	IDP100A	PHILIPS	LPU31350-ORI
AK97-00166B	SAMSUNG	LPU31256-ORI	IDP200A	PHILIPS	CDM31309-ORI
AK97-00168B	SAMSUNG	LPU31256-ORI	KCP-1H	KENWOOD	LPU31203-ORI
AK97-00943A	SAMSUNG	LPU31263-ORI	KCP-3H (16PIN)	KENWOOD	LPU31316-ORI
APU0201	TELESTAR	LPU31244-ORI	KEM-400A	SONY	CDM31286-ORI
CD 94 V 5	SANYO	LPU31173-ORI	KEM-400AAA	SONY	CDM31286-ORI
CDM-12.1	GRUNDIG	CDM31080-QRP	KEM-410ACA	SONY	CDM31319-ORI
CDM-12.1	NAD	CDM31080-QRP	KEM-410CCA	SONY	CDM31319-ORI
CDM-12.1	PHILIPS	CDM31080-QRP	KES-400AAA	SONY	LPU31287-ORI
CDM-12.1/05	PHILIPS	CDM31080-QRP	KES-450A	SONY	LPU31317-ORI
CDM-12.3	PHILIPS	CDM31168-ORI	KHM-250AAA	SONY	CDM31220-ORI
CDM-12.4	OTTO-VERSAND	CDM31183-QRP	KHM-280AAA	SONY	CDM31344-ORI
CDM-12.4	PHILIPS	CDM31183-QRP	KHM-310AAA	SONY	CDM31276-QRP
CDM-12.4/01	PHILIPS	CDM31183-QRP	KHM-310AHC	SONY	CDM31318-ORI
CDM-12.4/05	PHILIPS	CDM31183-QRP	KHM-310AHC	THOMSON	CDM31318-ORI
CDM-12.6	PHILIPS	CDM31314-QRP	KHM-313AAA	SONY	CDM31294-ORI
D40163905	KENWOOD	CDM31320-ORI	KHM-430AAA	SONY	CDM31328-QRP
DA11	SANYO	CDM31174-QRP	KHS-400 B	SONY	LPU31228-ORI
DA11N	PHILIPS	CDM31174-QRP	KHS-400 C	SONY	LPU31331-QRP
DA11T3C	SANYO	CDM31175-QRP	KMK-260A AB	SONY	MPU31190-QRP
DBU-1	SONY	LPU31260-QRP	KMS-260	SONY	MPU31190-QRP
DP-C120B	AKAI	LPU31105-QRP	KMS-260 B	SONY	MPU31190-QRP
DP-C120B	DAEWOO	LPU31105-QRP	KSL-360ADM	SONY	DVL31335-ORI
H8112AF	SHARP	LPU31049-ORI	KSM-213CCM	SONY	CDM31155-QRP
H8147AF	SHARP	LPU31041-QRP	KSM-215DCP/C	SONY	CDM31349-ORI
H8148AF	KENWOOD	LPU31203-ORI	KSM-215DCP/C2NP	SONY	CDM31349-ORI
H8148AF	SHARP	LPU31203-ORI	KSM-330A	SONY	CDM31154-ORI
H8151AF	JVC	LPU31052-QRP	KSM-440ADM	SONY	CDM31115-QRP
H8151AF	QUELLE	LPU31052-QRP	KSM-440AEM	SONY	CDM31156-QRP
H8151AF (5/8)	SHARP	LPU31052-QRP	KSM-440BAM	SONY	CDM31194-ORI
H8151AS (5/8)	SHARP	LPU31052-QRP	KSM-542A	SONY	CDM31340-ORI
H8164AF	SHARP	LPU31182-ORI	KSM-620AAA	SONY	CDM31195-ORI
H8175AF	SHARP	MPU31187-ORI	KSM-770AAA	KENWOOD	CDM31320-ORI
HD 151	SHARP	LPU31052-QRP	KSM-770AAA	SONY	CDM31320-ORI
HOP-1000	DAEWOO	LPU31226-ORI	KSS-150A	AIWA	LPU31001
HOP-1000	HITACHI	LPU31226-ORI	KSS-150A	AIWA	LPU31001-QRP
HOP-1120	HITACHI	LPU31226-ORI	KSS-150A	AIWA	LPU31001R
HOP-1200S	CLATRONIC	LPU31259-ORI	KSS-150A	SABA	LPU31001-QRP
HOP-1200S	HITACHI	LPU31259-ORI	KSS-150A	SONY	LPU31001-QRP
HOP-1200S	UNIVERSUM	LPU31259-ORI	KSS-150B	SONY	LPU31001-QRP
HOP-1200W	HITACHI	LPU31273-ORI	KSS-150B	THOMSON	LPU31001-QRP
HOP-1200W	TELESTAR	LPU31273-ORI	KSS-152A	SONY	LPU31000-ORI
HOP-120X	HITACHI	LPU31303-ORI	KSS-152A	TOSHIBA	LPU31000-ORI
HOP-M3A	DENON	LPU31347-ORI	KSS-210A	AIWA	LPU31001-QRP
HOP-M3A	HITACHI	LPU31347-ORI	KSS-210A	PHILIPS	LPU31001-QRP
HOP-M3A	SIEMENS	LPU31347-ORI	KSS-210A	SONY	LPU31001-QRP
HPC-1CC	SHARP	LPU31041-QRP	KSS-210ARP	SONY	LPU31001-QRP
HPC-1H	KENWOOD	LPU31203-ORI	KSS-210B	AIWA	LPU31003-QRP
HPC-1H	KENWOOD	LPU31203-ORI	KSS-210B	PHILIPS	LPU31003-QRP
HPC-1H	SHARP	LPU31203-ORI	KSS-210B	SANYO	LPU31003-QRP
HPC-1H	SHARP	LPU31203-ORI	KSS-210B	SONY	LPU31003-QRP
HPC-1H2	TEAC	LPU31203-ORI	KSS-210B	THOMSON	LPU31003-QRP
HPC-1L	SHARP	LPU31180-QRP	KSS-212A	AIWA	LPU31001-QRP
HPC-1LX (7/8)	SHARP	LPU31181-QRP	KSS-212A	SONY	LPU31001-QRP
HPC-1MX	SHARP	LPU31182-ORI	KSS-212B	SONY	LPU31003-QRP
HPC-1UM (6/8PIN)	SHARP	LPU31339-ORI	KSS-212B	THOMSON	LPU31003-QRP
HPC-3LX	SHARP	LPU31225-ORI	KSS-213 DRP	SONY	LPU31103-QRP
HPD-60	SHARP	LPU31334-ORI	KSS-213B	SONY	LPU31061-QRP

— für die Suche nach Geräten benutzen Sie bitte unsere website —  
 — for searching with models please use our website —

für weitere Informationen/ for more details: [www.classic-serviceparts.com](http://www.classic-serviceparts.com)

Original Part No.	Brand	Classic Part No.	Original Part No.	Brand	Classic Part No.
KSS-213B	THOMSON	LPU31061-QRP	QSS200	CLARION	LPU31337-ORI
KSS-213BA	SONY	LPU31061-QRP	RAE 0130 Z	PANASONIC	LPU31212-ORI
KSS-213BRP	SONY	LPU31061-QRP	RAE 0152 Z	PANASONIC	LPU31164-ORI
KSS-213C	DENON	LPU31105-QRP	RAE 0152 Z	TECHNICS	LPU31164-ORI
KSS-213C	SONY	LPU31105-QRP	RAE 0152 ZZ	TECHNICS	LPU31164-ORI
KSS-213C	TASCAM	LPU31105-QRP	RAF0140A	PANASONIC	LPU31292-ORI
KSS-213CL	SONY	LPU31105-QRP	RAF3020A-1C	JVC	LPU31241-ORI
KSS-213D	SONY	LPU31103-QRP	RAF3020A-1C	PANASONIC	LPU31241-ORI
KSS-213E	SONY	LPU31300-QRP	RAF3022A-3C	PANASONIC	LPU31315-ORI
KSS-213F	AIWA	LPU31113-QRP	RAF3023A	PANASONIC	LPU31248-ORI
KSS-213F	SONY	LPU31113-QRP	RAF3023A1	PANASONIC	LPU31248-ORI
KSS-213Q	SONY	CDM31301-ORI	RCTR8112AFZZ	SHARP	LPU31049-ORI
KSS-213V	SONY	LPU31306-QRP	RCTR8147AFZZ	SHARP	LPU31041-QRP
KSS-240A	SONY	LPU31002-ORI	RCTR8148	KENWOOD	LPU31203-ORI
KSS-240A	SONY	LPU31002-QRP	RCTR8148AFZZ	KENWOOD	LPU31203-ORI
KSS-240A(RP)	SONY	LPU31002-ORI	RCTR8148AFZZ	SHARP	LPU31203-ORI
KSS-240A(RP)	SONY	LPU31002-QRP	RCTR8148AFZZ	TEAC	LPU31203-ORI
KSS-313C	SONY	LPU31326-ORI	RCTR8151AFZZ	JVC	LPU31052-QRP
KSS-320B	BLAUPUNKT	LPU31036-ORI	RCTR8151AFZZ	QUELLE	LPU31052-QRP
KSS-320B	SONY	LPU31036-ORI	RCTR8151AFZZ	SHARP	LPU31052-QRP
KSS-333A	SONY	LPU31001-QRP	RCTR8164AFZZ	SHARP	LPU31182-ORI
KSS-480A	AIWA	LPU31342-QRP	RCTR8175AFZZ	SHARP	MPU31187-ORI
KSS-480A	SONY	LPU31342-QRP	SF-90	SANYO	LPU31042-ORI
KSS-520A	SONY	LPU31196-ORI	SF-90 (6/6)	SANYO	LPU31042-ORI
KSS-521A	SONY	LPU31336-ORI	SF-91 (5/8)	SANYO	LPU31057-ORI
KSS-521A-K1	SONY	LPU31336-ORI	SF-91 (5/8)	UNIVERSUM	LPU31057-ORI
KSS-540A	SONY	LPU31119-ORI	SF-91 (6/5)	SANYO	LPU31072-ORI
KSS-580A	SONY	LPU31323-ORI	SF-92.5	SANYO	LPU31051-ORI
KSS-582A	SONY	LPU31201-ORI	SF-C20S	SANYO	LPU31341-ORI
KSS-610A	SONY	LPU31202-ORI	SF-C90	SANYO	LPU31104-ORI
KSS-710A	SONY	LPU31152-ORI	SF-C93	SANYO	LPU31104-ORI
M8AZKJ92070	AIWA	CDM31240	SF-C93AQ	SANYO	LPU31324-ORI
M8AZKJ93070	AIWA	CDM31240	SF-C99	SAMSUNG	LPU31293-ORI
OPC-A15-1	CLATRONIC	CDM31282-ORI	SF-C99	SANYO	LPU31293-ORI
OPC-A15-1	PHILIPS	CDM31282-ORI	SF-HD3	AIWA	CDM31240
OPTIMA-150 S	JVC	LPU31032-QRP	SF-HD3	FISHER	CDM31240-ORI
OPTIMA-6 S	JVC	LPU31032-QRP	SF-HD3	SANYO	CDM31240
OPTIMA-610	JVC	LPU31160-ORI	SF-HD3	SANYO	CDM31240-ORI
OPTIMA-7	JVC	LPU31161-QRP	SF-HD3AV	AIWA	LPU31329-ORI
OPTIMA-7 A	JVC	LPU31161-QRP	SF-HD3AV	SANYO	LPU31329-ORI
OPTIMA-7 B	JVC	LPU31161-QRP	SF-HD6	SANYO	LPU31258-ORI
OPTIMA-710 A	JVC	LPU31152-ORI	SF-HD60	SANYO	CDM31271-ORI
OPTIMA-720	JVC	LPU31163-ORI	SF-HD60	SANYO	LPU31304-QRP
OPTIMA-720 A1	JVC	LPU31163-ORI	SF-HD62	SANYO	LPU31274-QRP
OPTIMA-725	JVC	LPU31321-ORI	SF-HD65	SANYO	CDM31278-ORI
OPTIMA-725 B2	JVC	LPU31330-ORI	SF-HD65	SANYO	LPU31298-ORI
PVR-202T	LG	LPU31262-ORI	SF-HD850	AEG	LPU31291-ORI
PVR-202T	MITSUMI	LPU31262-ORI	SF-HD850	CLATRONIC	LPU31291-ORI
PVR-502W (23p/2.7cm)	LG	LPU31302-ORI	SF-HD850	DANGAARD	LPU31291-ORI
PVR-502W (23p/2.7cm)	MITSUMI	LPU31302-ORI	SF-HD850	PROSONIC	LPU31291-ORI
PVR-502W (24p/1.5cm)	MITSUMI	LPU31312-ORI	SF-HD850	SANYO	LPU31291-ORI
PVR-520T	MITSUMI	LPU31332-ORI	SF-HD850	UNITED	LPU31291-ORI
PVR-520T	TELESTAR	LPU31332-ORI	SF-HD870	SANYO	LPU31348-ORI
PVR-802W	LG	LPU31269-QRP	SF-HD88	SANYO	LPU31322-ORI
PVR-802W	MITSUMI	LPU31269-QRP	SF-P101 (5/8)	SANYO	CDM31307-ORI
PVR-802W	SONY	LPU31269-QRP	SF-P101N (16 PIN)	SANYO	CDM31175-QRP
PX 601750	YAMAHA	LPU31343-ORI	SOH-A1	SAMSUNG	LPU31047-QRP
QAL0279001	JVC	LPU31241-ORI	SOH-A1U	SAMSUNG	LPU31047-QRP

— für die Suche nach Geräten benutzen Sie bitte unsere website —  
 — for searching with models please use our website —

für weitere Informationen/ for more details: [www.classic-serviceparts.com](http://www.classic-serviceparts.com)

Original Part No.	Brand	Classic Part No.	Original Part No.	Brand	Classic Part No.
SOH-AAN (16PIN)	SAMSUNG	LPU31280-QRP	VAM 1250	PHILIPS	LPU31246-ORI
SOH-AAN (4C)	SAMSUNG	LPU31280-QRP	VAM 2201/01	PHILIPS	CDM31185-ORI
SOH-AAU	SAMSUNG	LPU31170-QRP	VAM 2201/03	PHILIPS	CDM31185-ORI
SOH-AAV	SAMSUNG	CDM31279-ORI	VAM 2201/07	PHILIPS	CDM31185-ORI
SOH-AAV	UNIVERSUM	CDM31279-ORI			
SOH-AD3	SAMSUNG	LPU31186-QRP			
SOH-AD3U	SAMSUNG	LPU31186-QRP			
SOH-AD5	SAMSUNG	LPU31296-ORI			
SOH-ADU	SAMSUNG	LPU31171-QRP			
SOH-AP/APU	SAMSUNG	LPU31116-ORI			
SOH-AP/MAX440L	SAMSUNG	LPU31116-ORI			
SOH-APU	SAMSUNG	LPU31116-ORI			
SOH-D16	SAMSUNG	LPU31209-ORI			
SOH-D21U	SAMSUNG	LPU31221-ORI			
SOH-DL3C	SAMSUNG	CDM31285-ORI			
SOH-DL3D	LG	LPU31310-ORI			
SOH-DL3D	SAMSUNG	LPU31310-ORI			
SOH-DL3E	LOEWE	LPU31305-ORI			
SOH-DL3E	PHILIPS	LPU31305-ORI			
SOH-DL3E	SAMSUNG	LPU31305-ORI			
SOH-DL6C	SAMSUNG	LPU31313-ORI			
SOH-DMZU	SAMSUNG	CDM31338-ORI			
SOH-DP1	SAMSUNG	LPU31151-ORI			
SOH-DP1U	SAMSUNG	LPU31345-ORI			
SOH-DS2	AKAI	LPU31222-ORI			
SOH-DS2	SAMSUNG	LPU31222-ORI			
SOH-DS2A	SAMSUNG	LPU31222-ORI			
SOH-DS2B	SAMSUNG	CDM31325-ORI			
SOH-DSSB	SAMSUNG	LPU31256-ORI			
SOH-DSSB	SONY	LPU31256-ORI			
SOH-DT2	SAMSUNG	LPU31263-ORI			
SOH-OT4	SONY	LPU31003-QRP			
SPU-3141	SONY	LPU31311-ORI			
SPU-3141	TOSHIBA	LPU31311-ORI			
SPU-3151	JVC	LPU31346-QRP			
SPU-3170	SONY	LPU31290-ORI			
T25005025	SHARP	LPU31203-ORI			
TAOHS-KP1	KENWOOD	LPU31343-ORI			
TAOHS-KP1	YAMAHA	LPU31343-ORI			
TAOHS-MR	TOSHIBA	LPU31000-ORI			
TCM135	THOMSON	CDM31333-ORI			
TCP 11 TK 2	THOMSON	CDM31272-ORI			
TCP 11 TK 2 X	GRUNDIG	CDM31272-ORI			
TCP 11 TK 2 X	THOMSON	CDM31272-ORI			
TCP 11 TK 2 XLF	THOMSON	CDM31272-ORI			
TCP 11 TK 3 AX	JVC	CDM31327-ORI			
TCP 11 TK 3 AX	THOMSON	CDM31327-ORI			
TOPH-7833	TOSHIBA	LPU31000-ORI			
VAL 3000	PHILIPS	LPU31229-ORI			
VAM 1201 D	PHILIPS	CDM31080-QRP			
VAM 1201/11	GRUNDIG	CDM31080-QRP			
VAM 1201/11	PHILIPS	CDM31080-QRP			
VAM 1202	PHILIPS	CDM31080-QRP			
VAM 1202 D	PHILIPS	CDM31080-QRP			
VAM 1202 J	PHILIPS	CDM31080-QRP			
VAM 1202 J	PHILIPS	CDM31080-QRP			
VAM 1202/12	PHILIPS	CDM31080-QRP			
VAM 1202/12	PHILIPS	CDM31080-QRP			

— für die Suche nach Geräten benutzen Sie bitte unsere website —  
 — for searching with models please use our website —

für weitere Informationen/ for more details: [www.classic-serviceparts.com](http://www.classic-serviceparts.com)