

Setting the Time of Day

When the clock is first connected the display flashes (0.00) and () alternately.

Press and hold both the [A] and [E] buttons down (Fig.2-21). Now press the [+] button (or the [-] button) until the correct time shows.

Do not forget that it is a 24-hour clock.

If you need to reset the cooker, turn off the power supply and wait for a couple of minutes and start again.

Minute Minder


Press and hold the [A] button (Fig.2-22), and then press the [+] button until the length of time you want to cook for is shown (Fig.2-23).

You can check the time remaining by pressing [A]. When the beeper sounds cancel it by pressing [A].

- The 'cook period', which is the length of time you want the oven to cook for.
- The 'stop time', which is the time of day you want the oven to stop cooking.

To Stop the Ovens Automatically

Press and hold the 'stop time' [E] button (Fig.2-24) and then press the [+] button (or [-] button) until the required 'stop

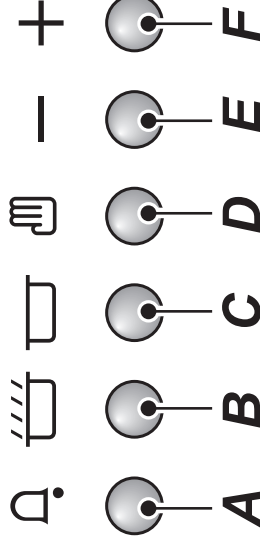

A – Minute minder, B – 'Cook' time, C – 'Stop' time, D – Manual, E & F – Time setting buttons

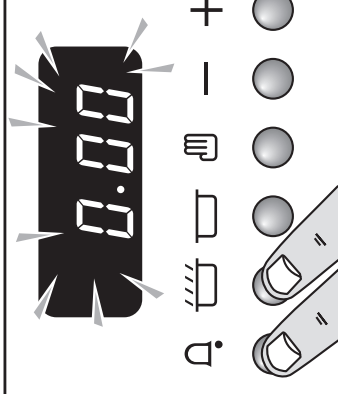


Fig.2-21

Fig.2-22

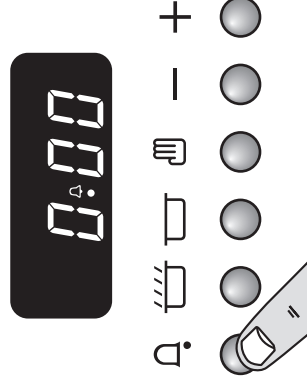


Fig.2-23

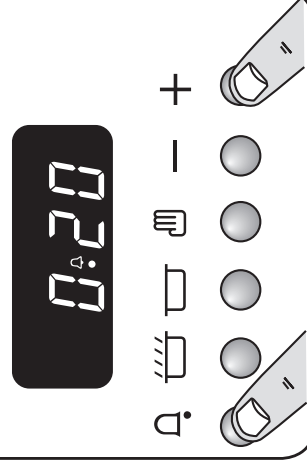


Fig.2-24

Fig.2-25