




Party Box 110 BLOCK DIAGRAM

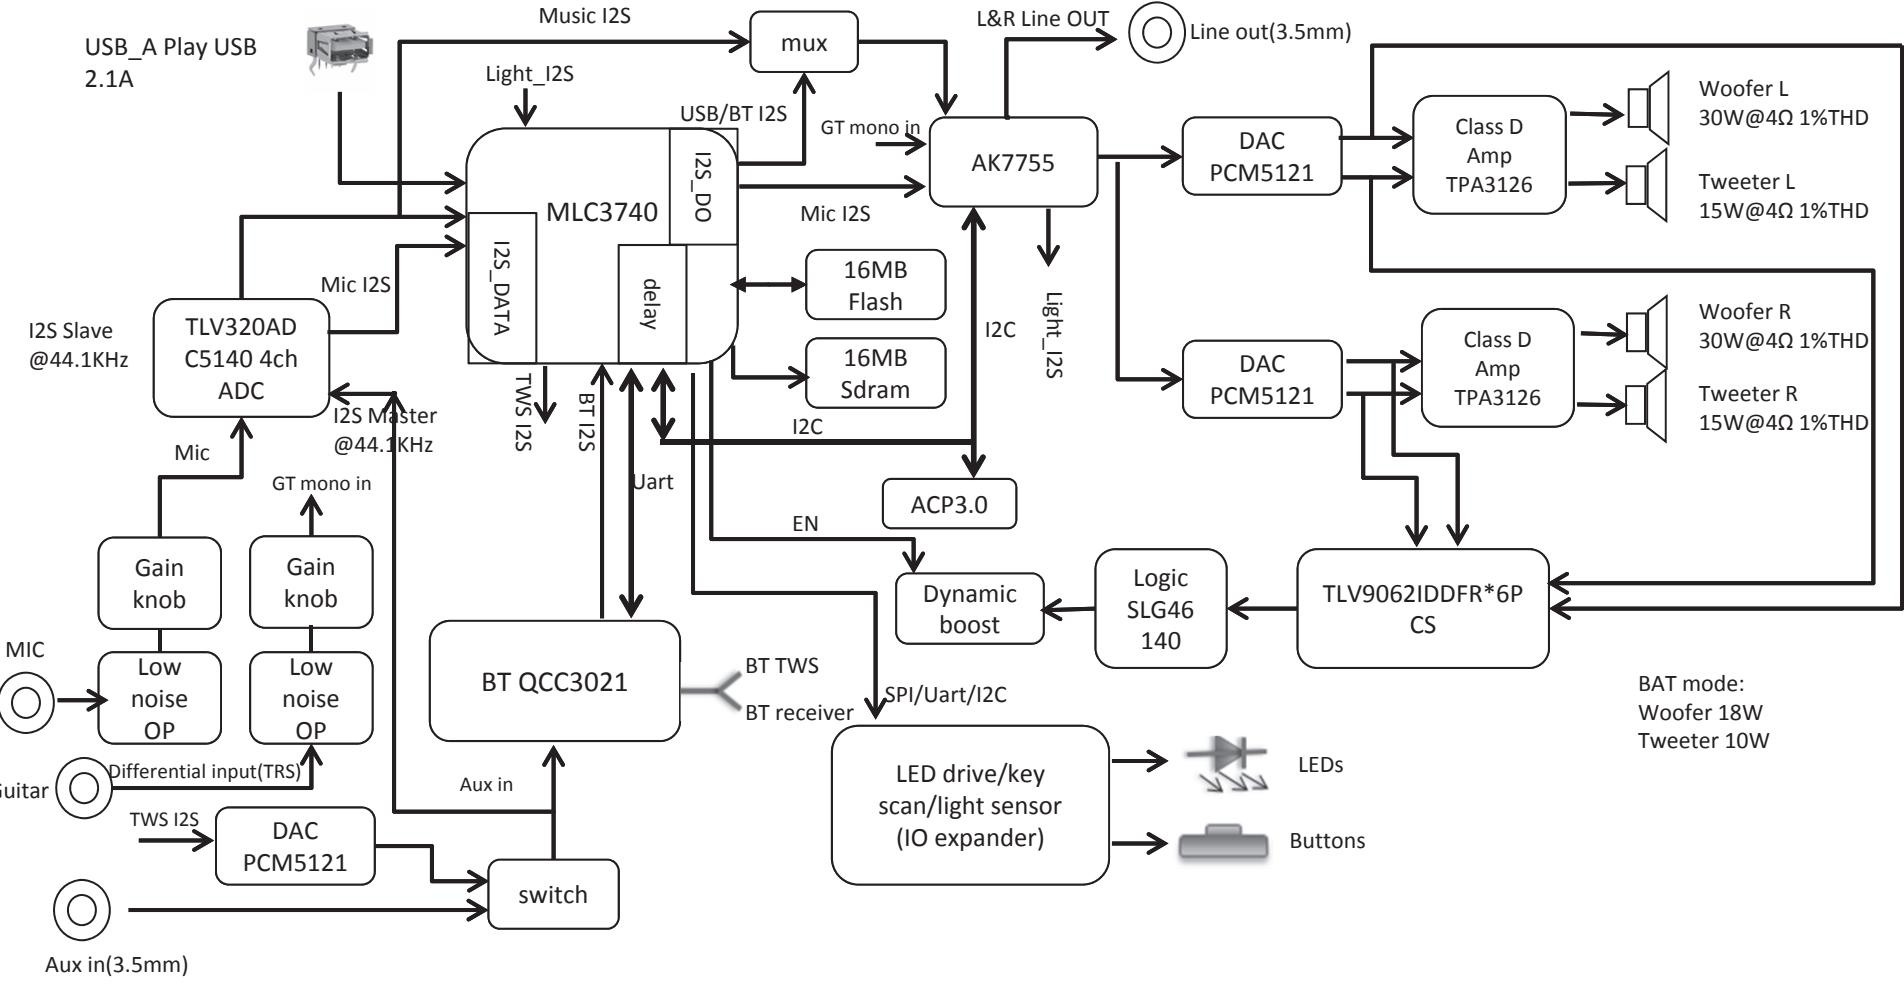





Party Box 110 BLOCK DIAGRAM

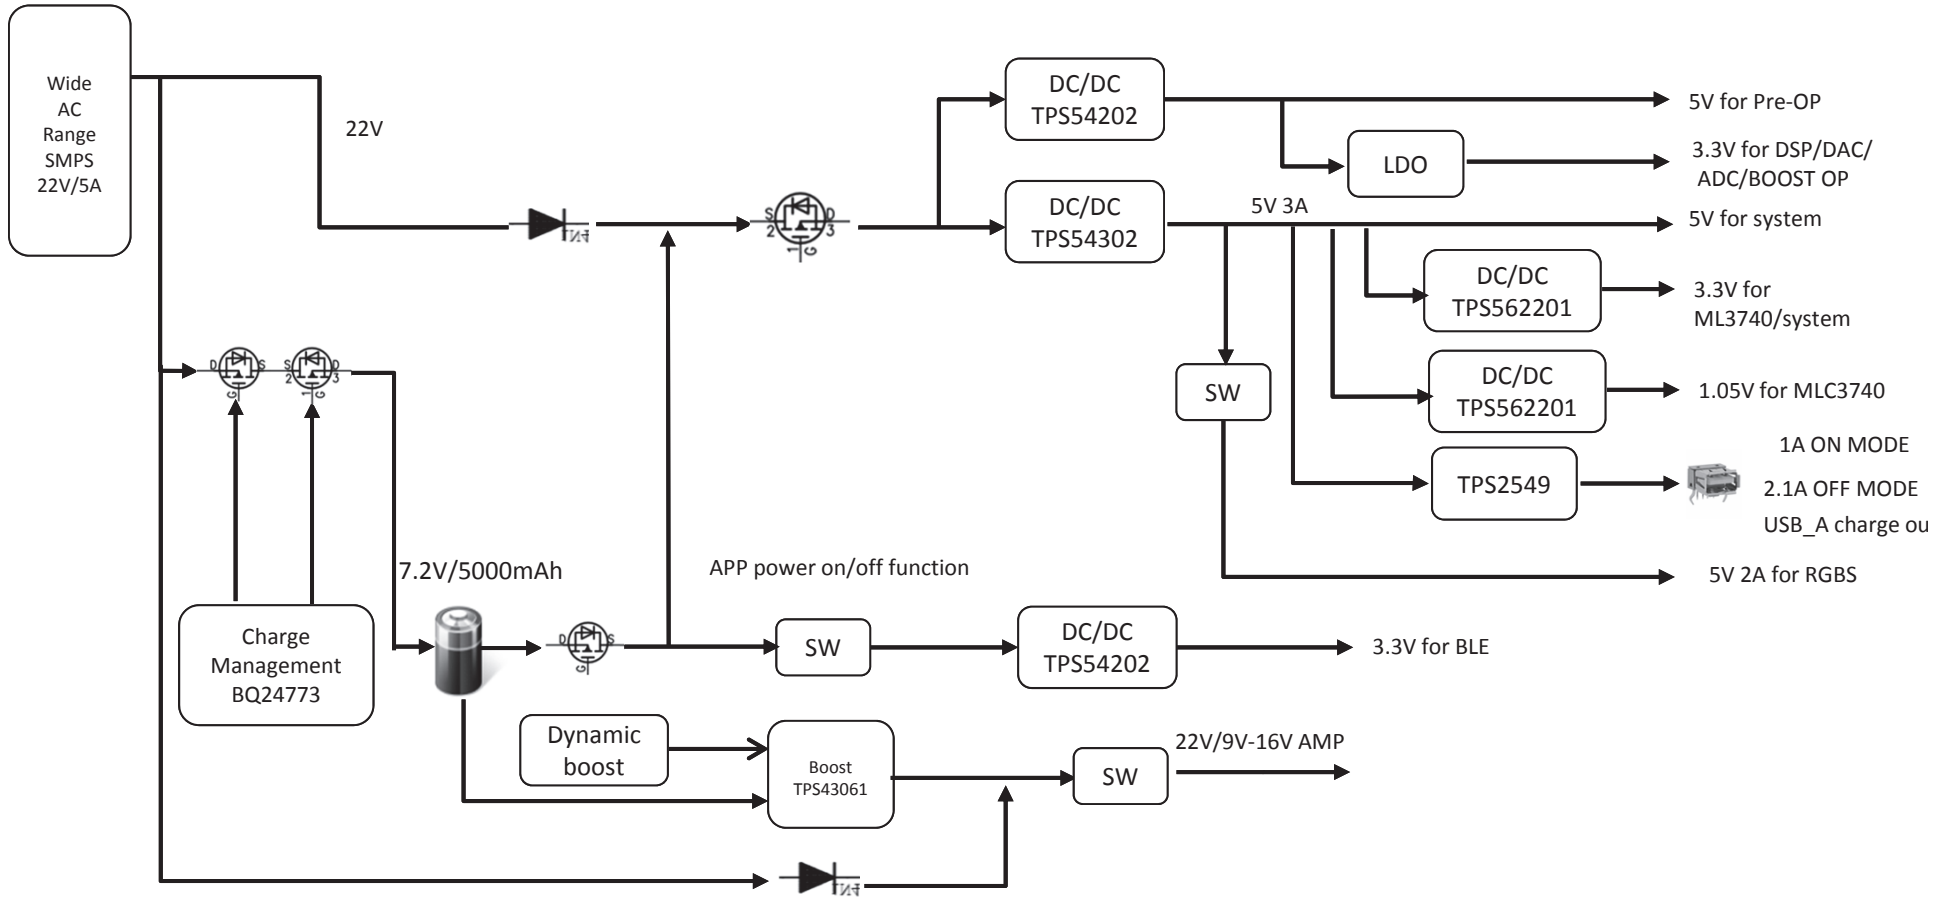

Party Box 110 Wiring Diagram

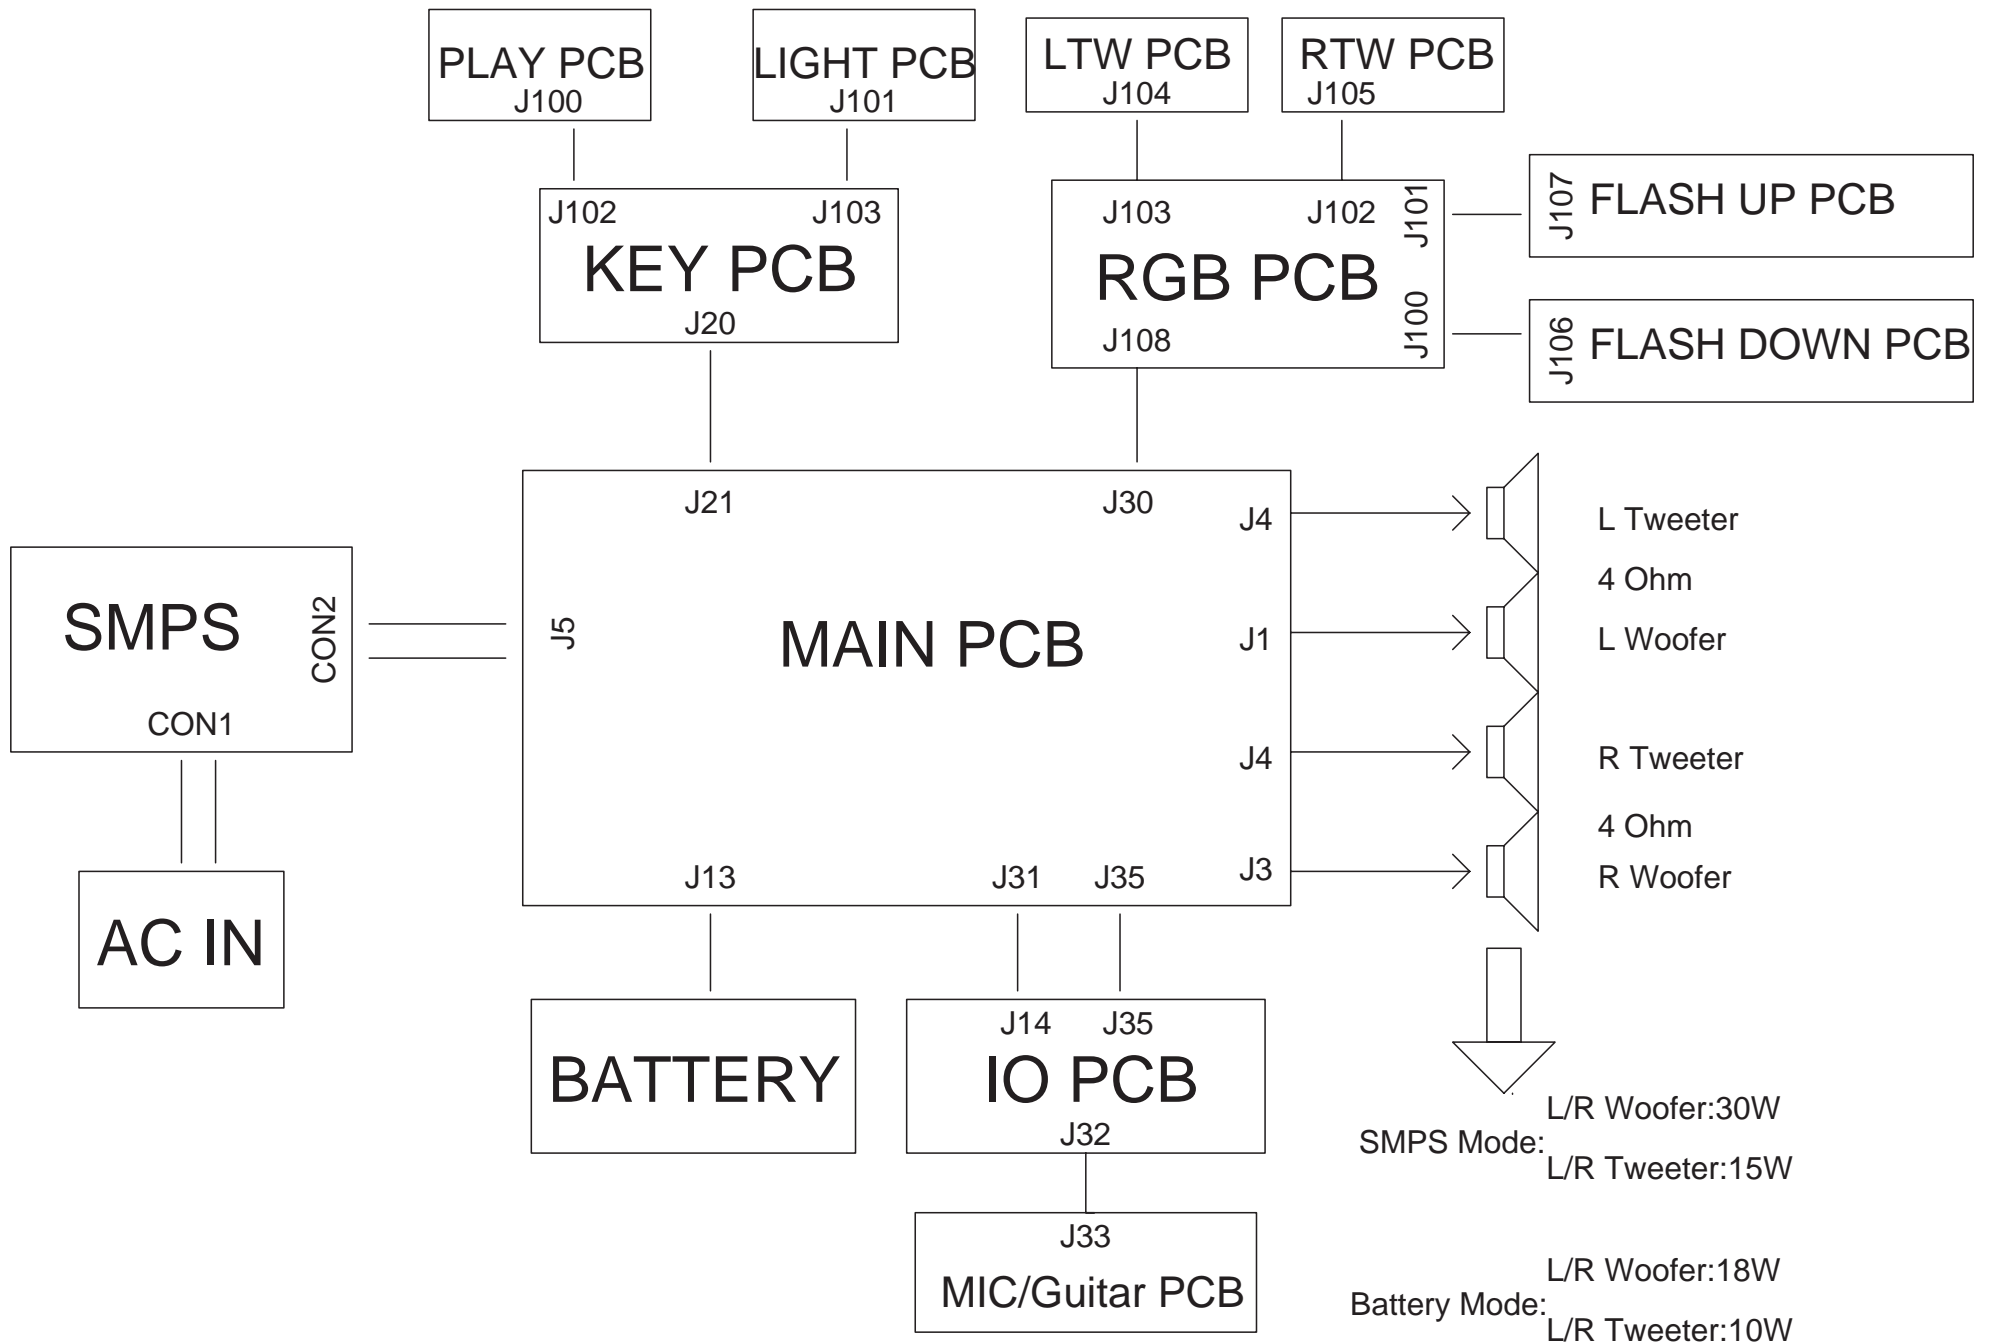

MAIN BOARD

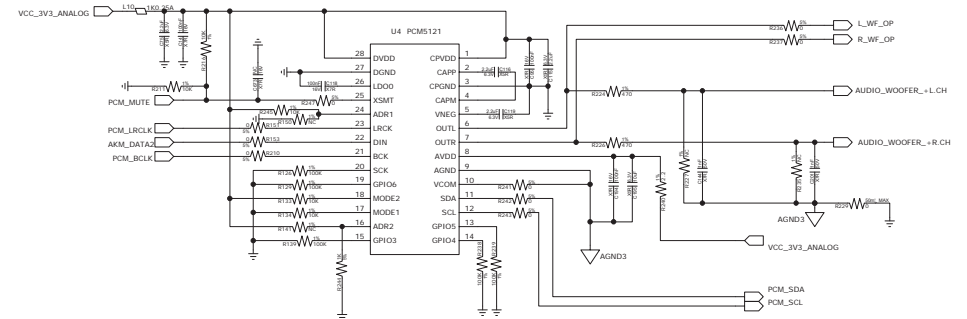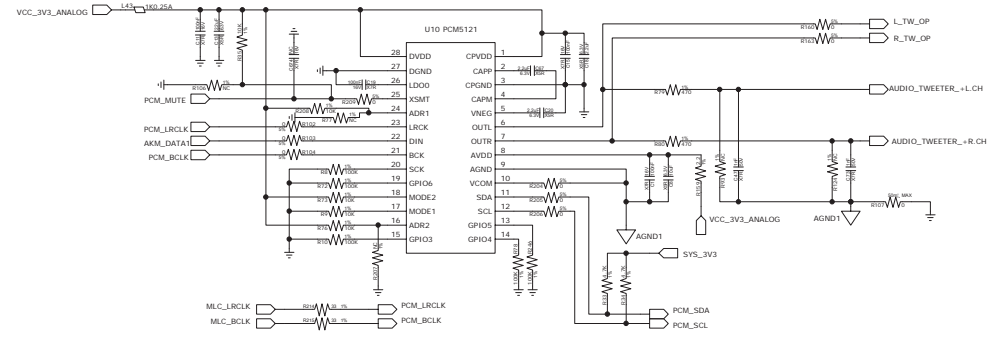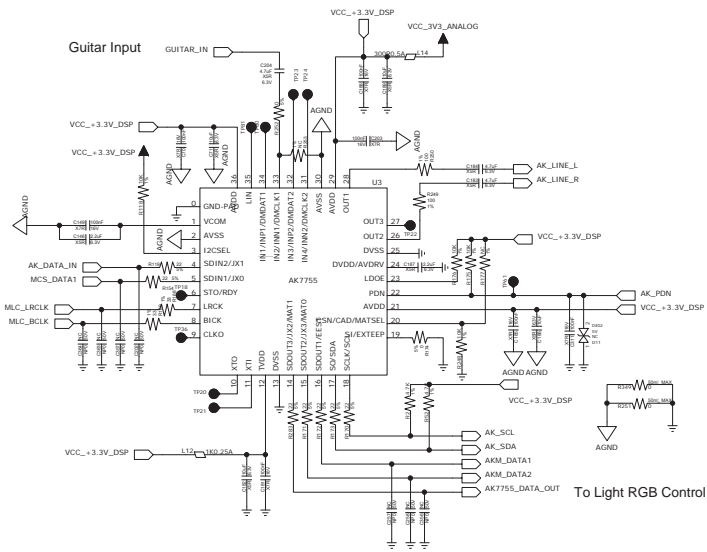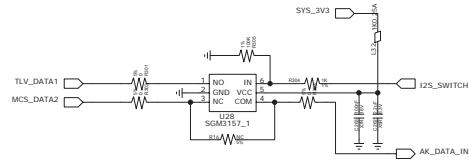

6

5

4

3

2

1

MAIN BOARD

D

D

C


C

B

B

A

A

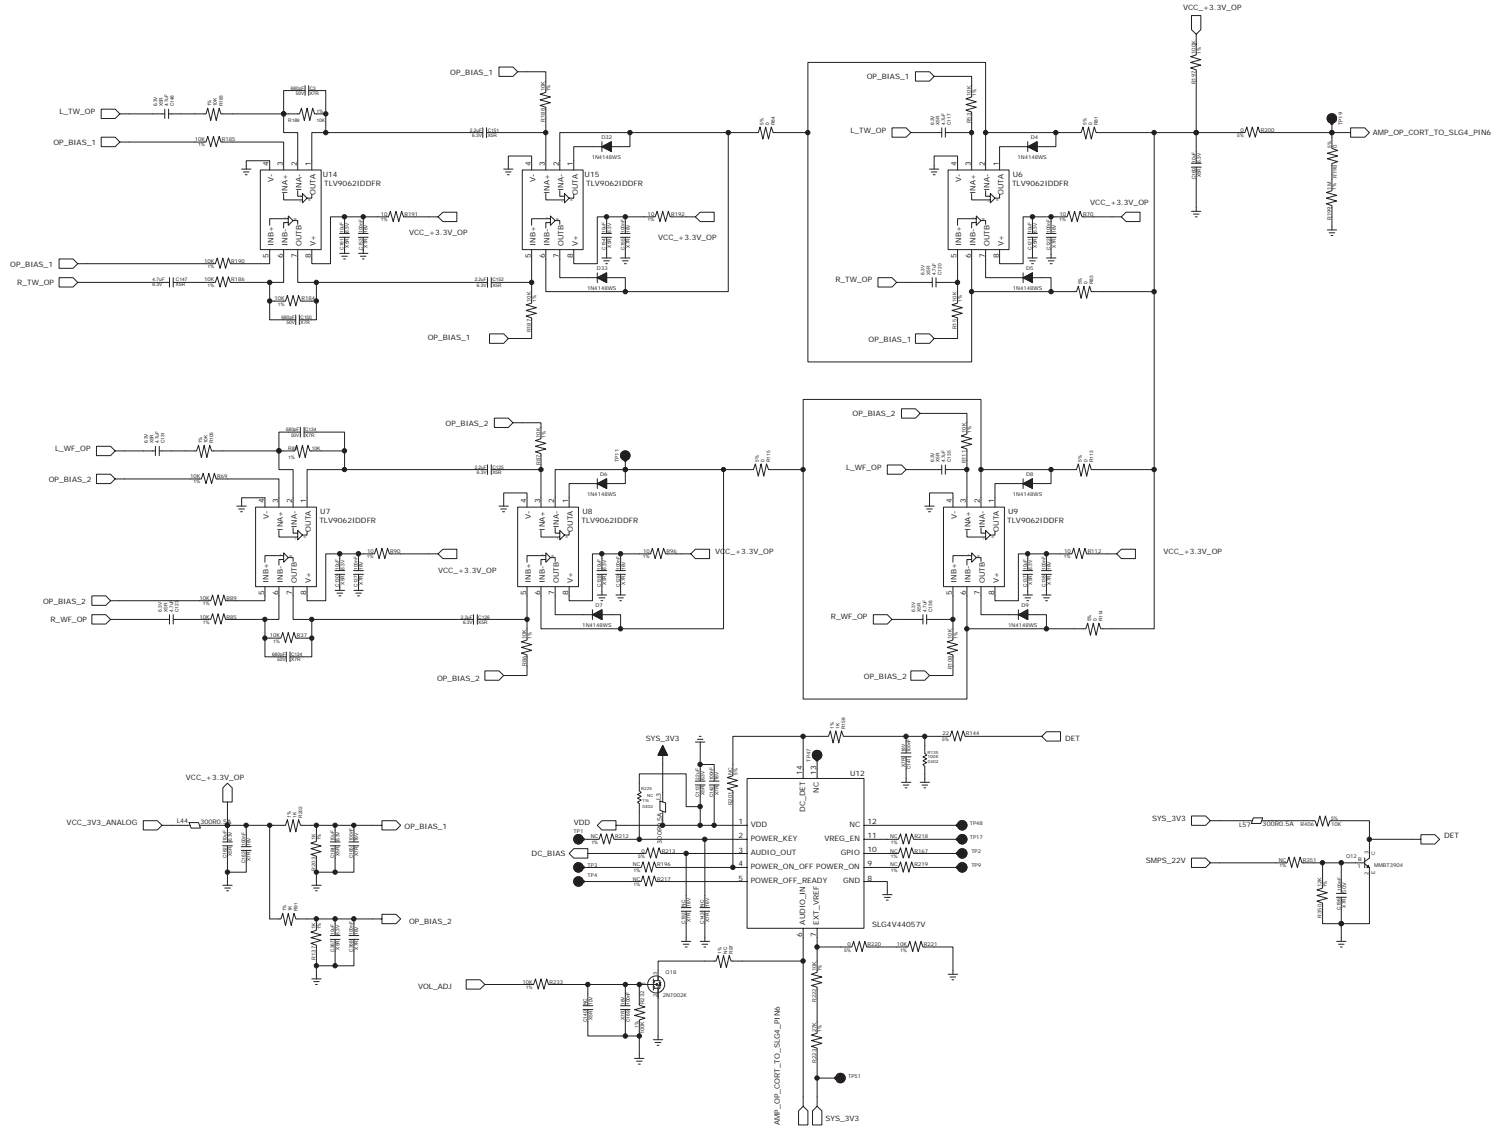

MAIN BOARD

D

D

C


C

B

B

A

A

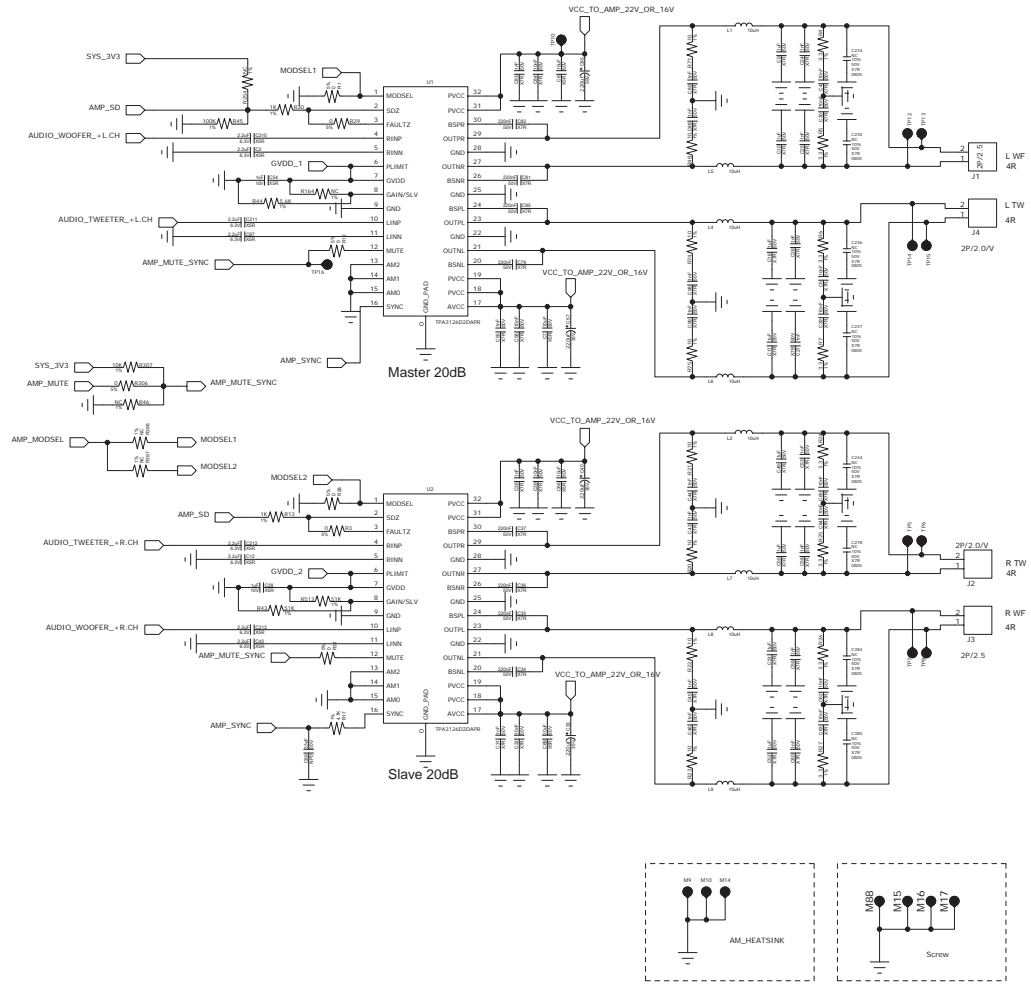

6

5

4

3

2

1

MAIN BOARD

D

D

C


C

B

B

A



A

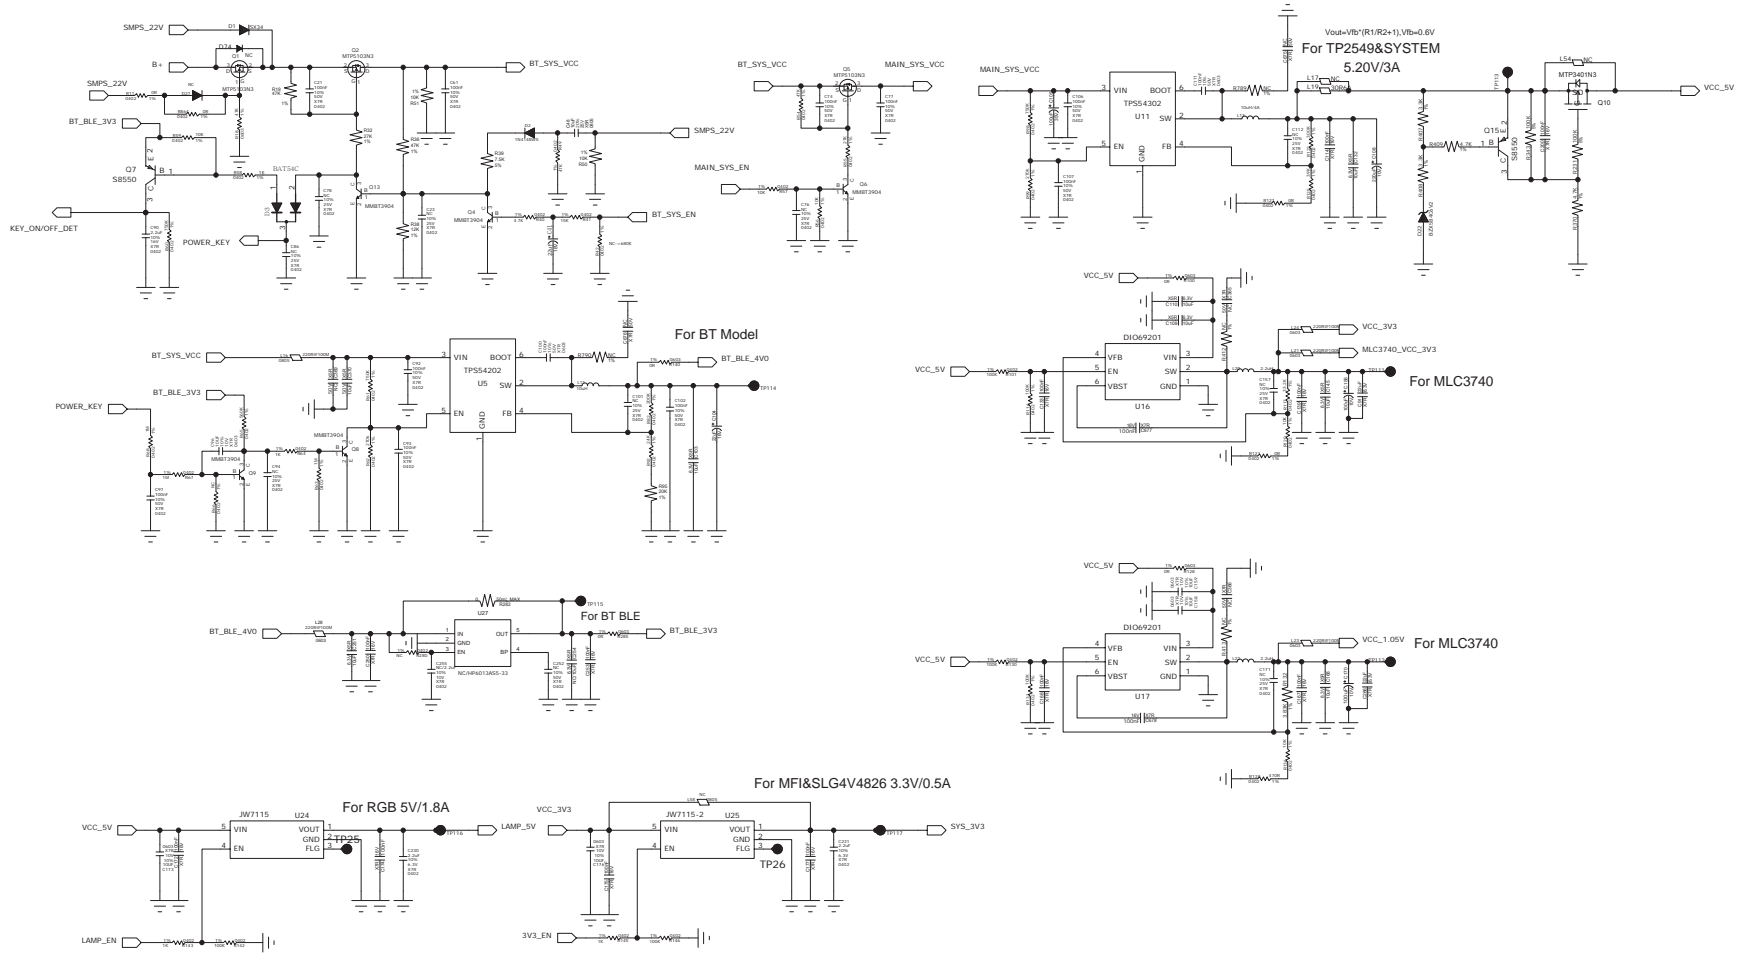

MAIN BOARD




USB-A Charge out SECTION

- 1)1A@power on mode
- 2)2.1A@power off mode

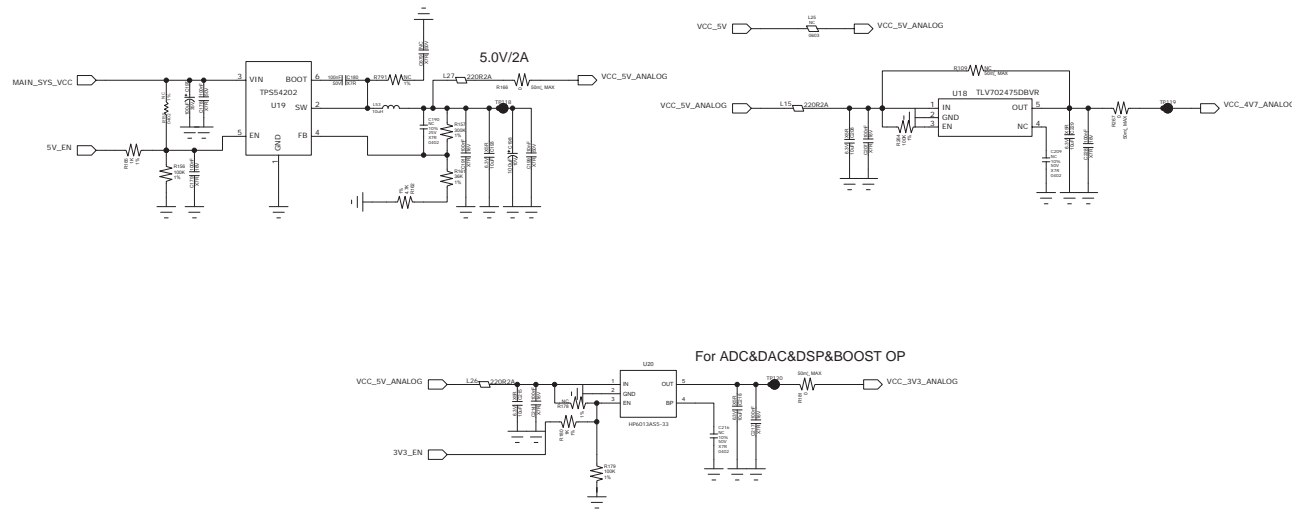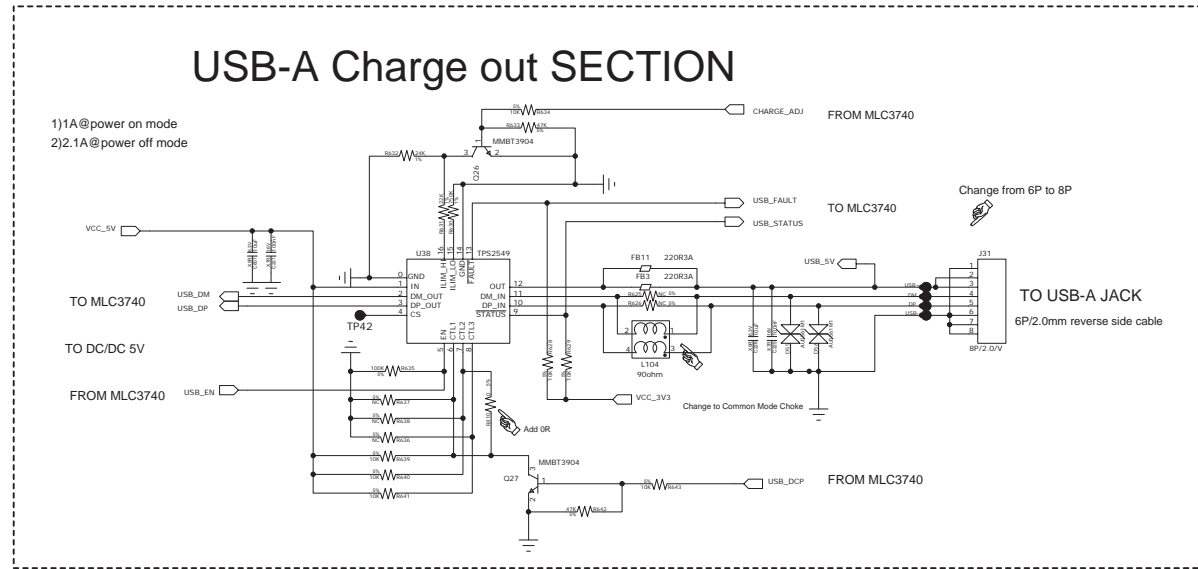

For ADC&DAC&DSP&BOOST OP

MAIN BOARD

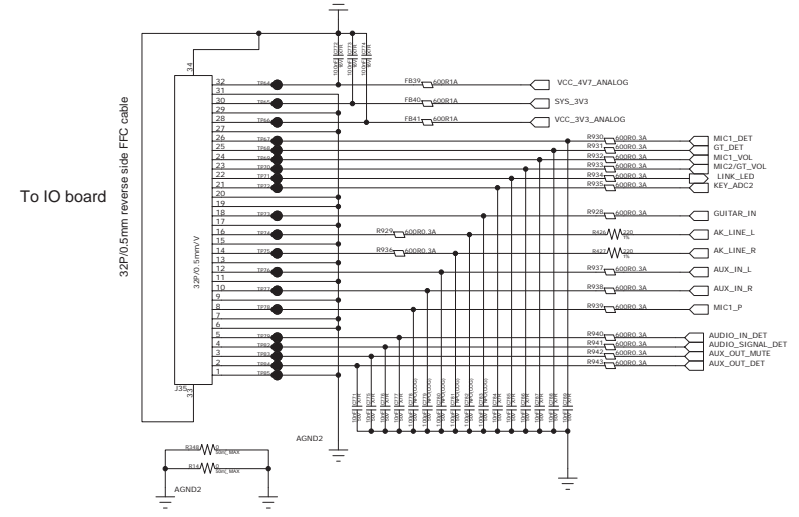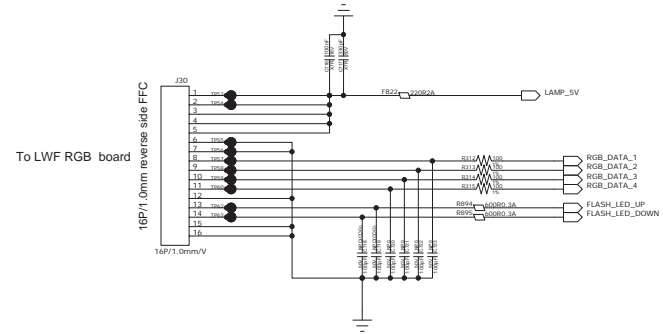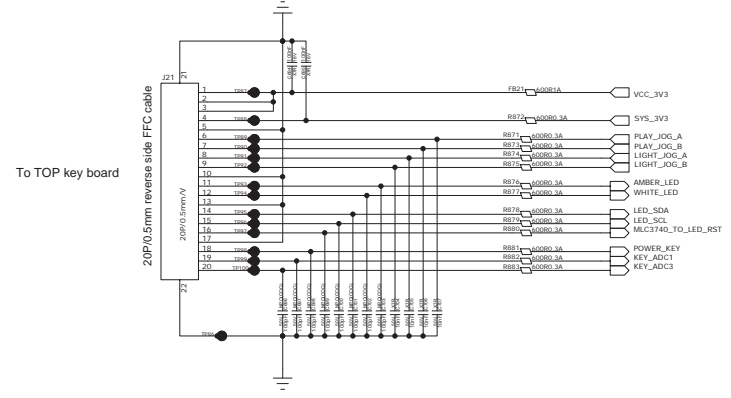

D

D

C

C


B

B


A

A



IO BOARD

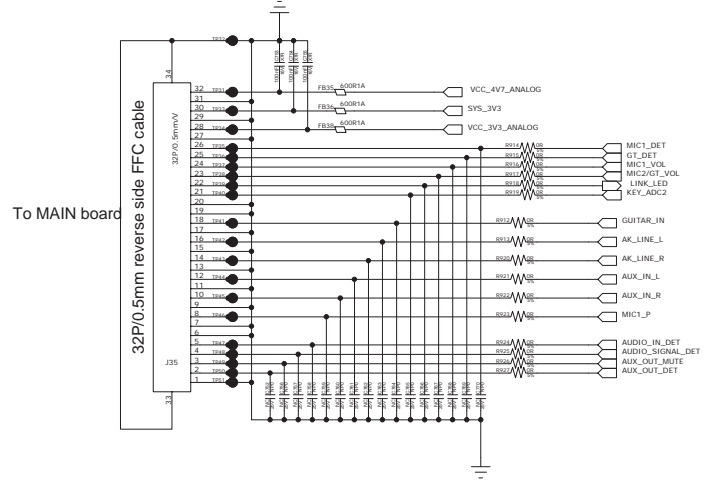


AUX IN SECTION

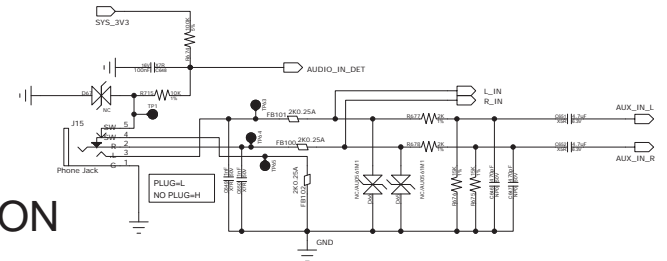



To MIC/GT IN board

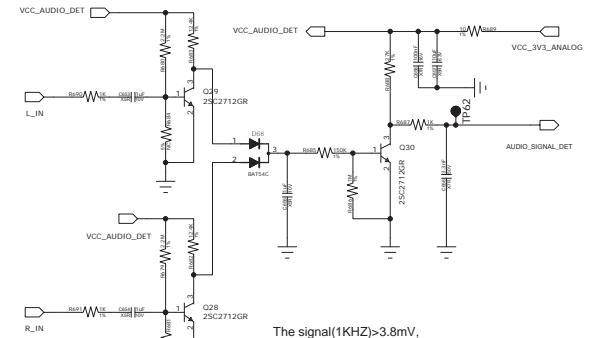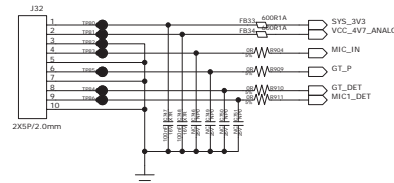



AUX OUT SECTION

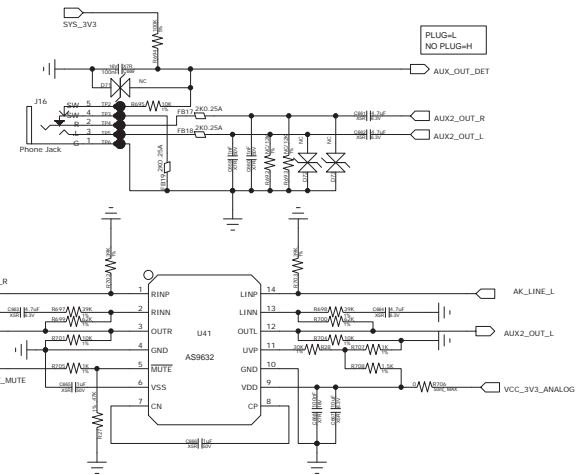

KNOB SECTION

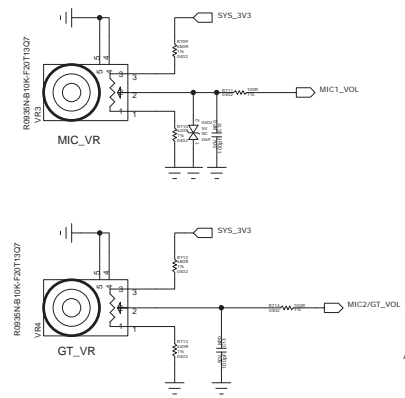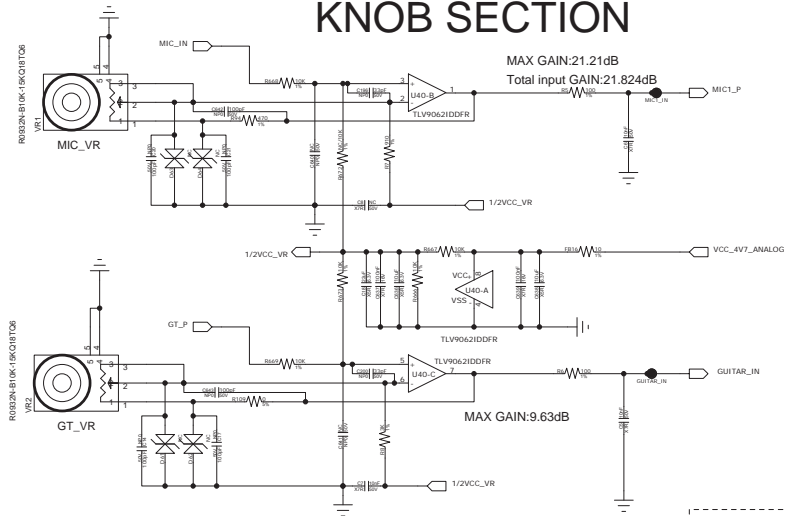

USB-A JACK

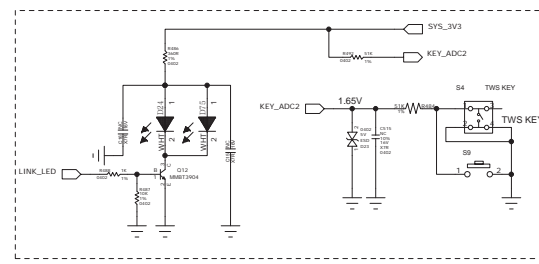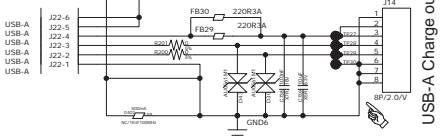

IO BOARD

D

C

B

A





D

C





B

A

20P/0.5mm reverse side FFC cable
20P/0.5mm/V

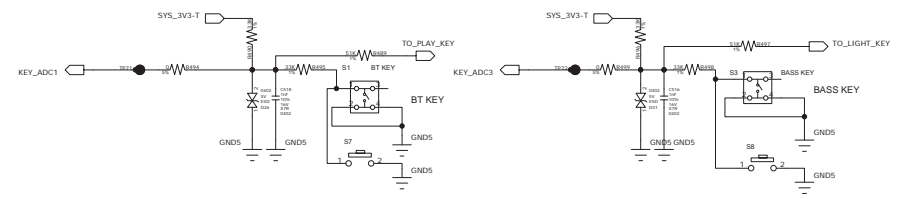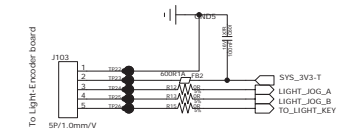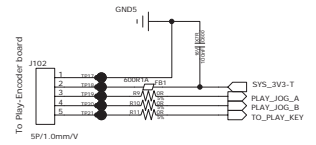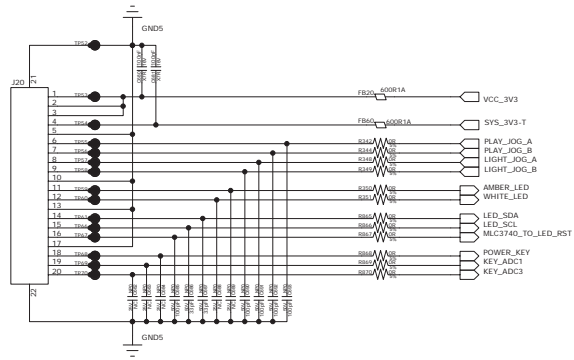

TOP KEY BUTTON

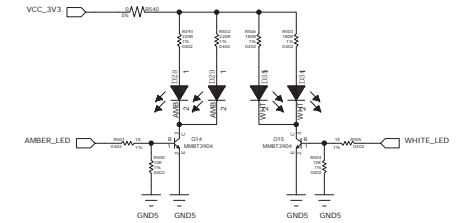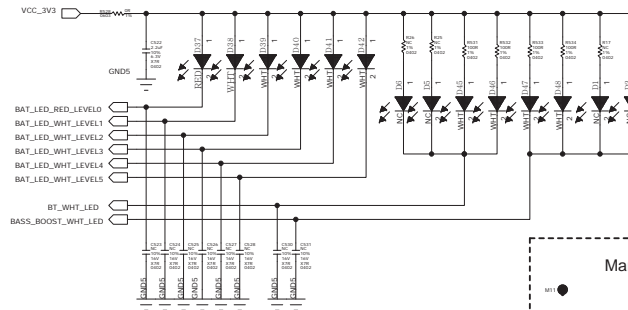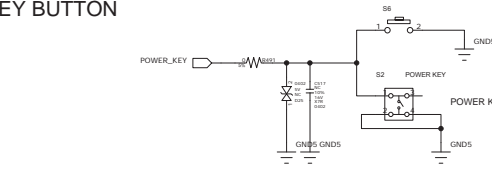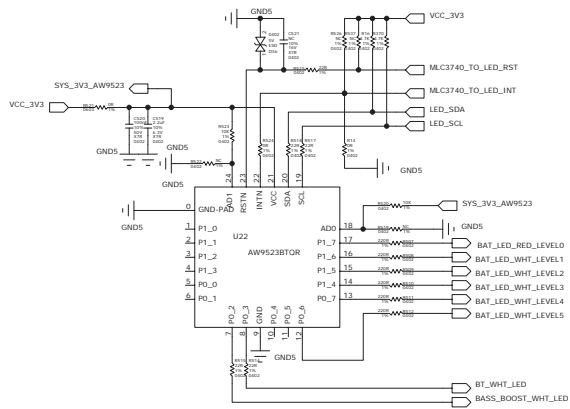

6

5

4


3

2


1

IO BOARD

Play Encoder

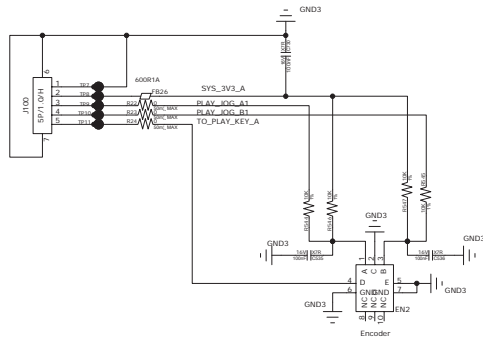

Light Encoder

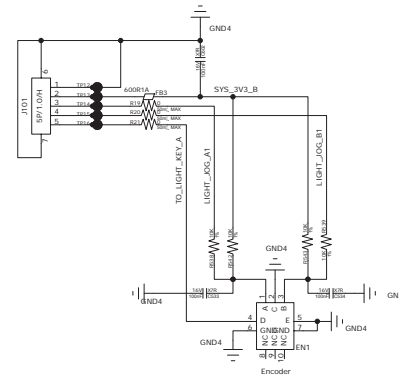

Mark



D

D

C

C

 




B

B


A

A

LWF RGB BOARD

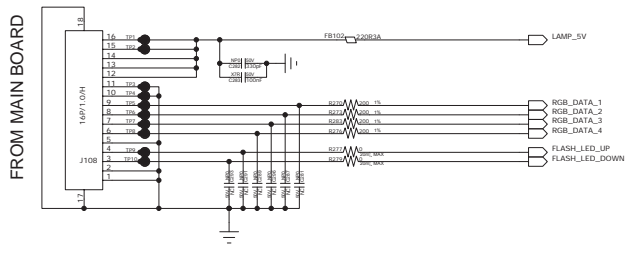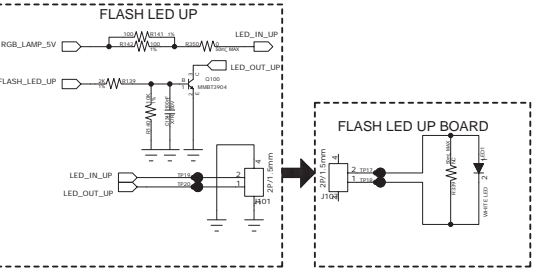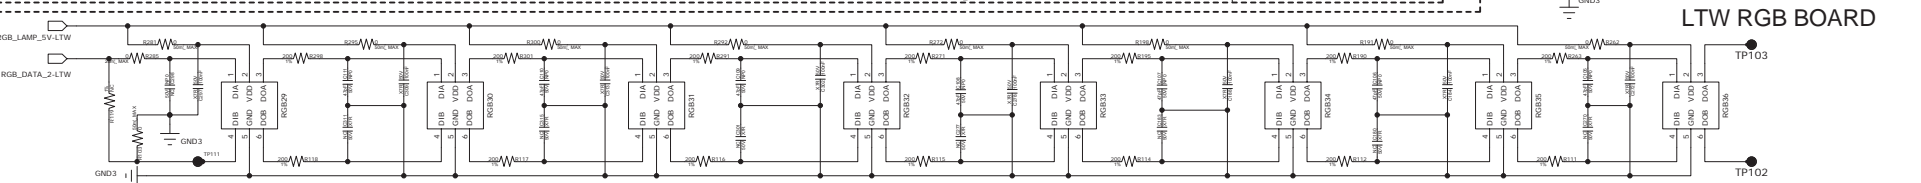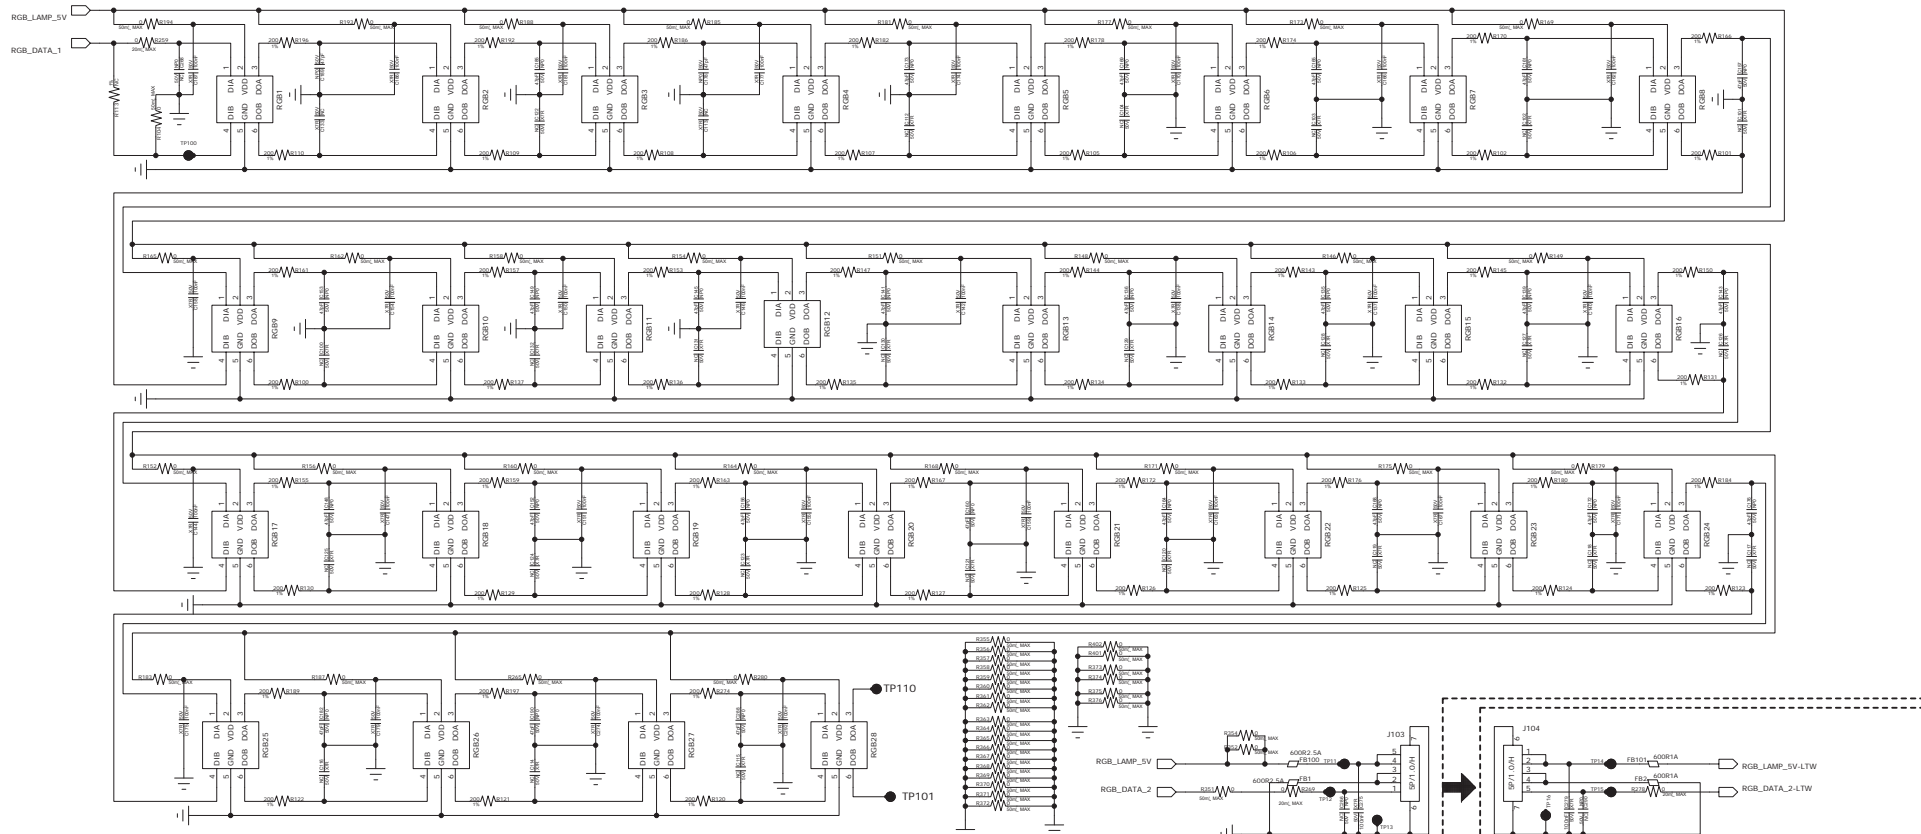


MAIN BOARD

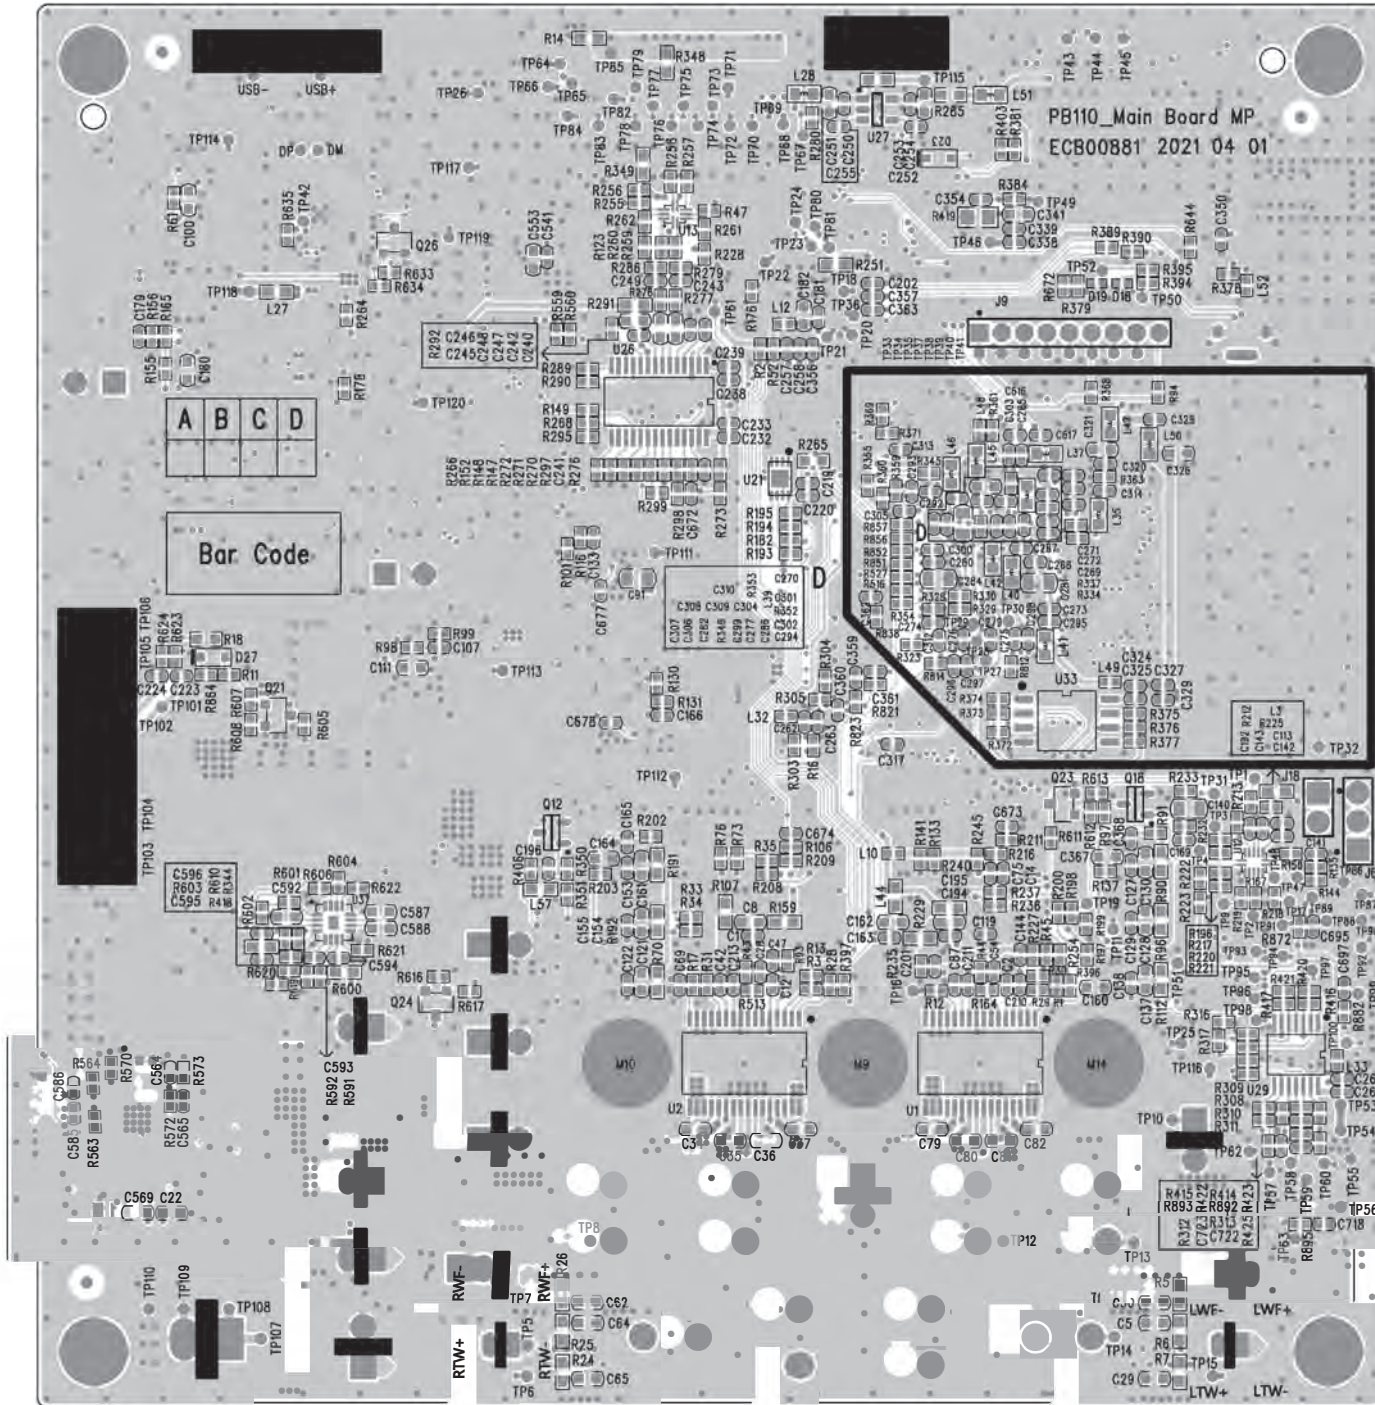


L1


RGB BOARD

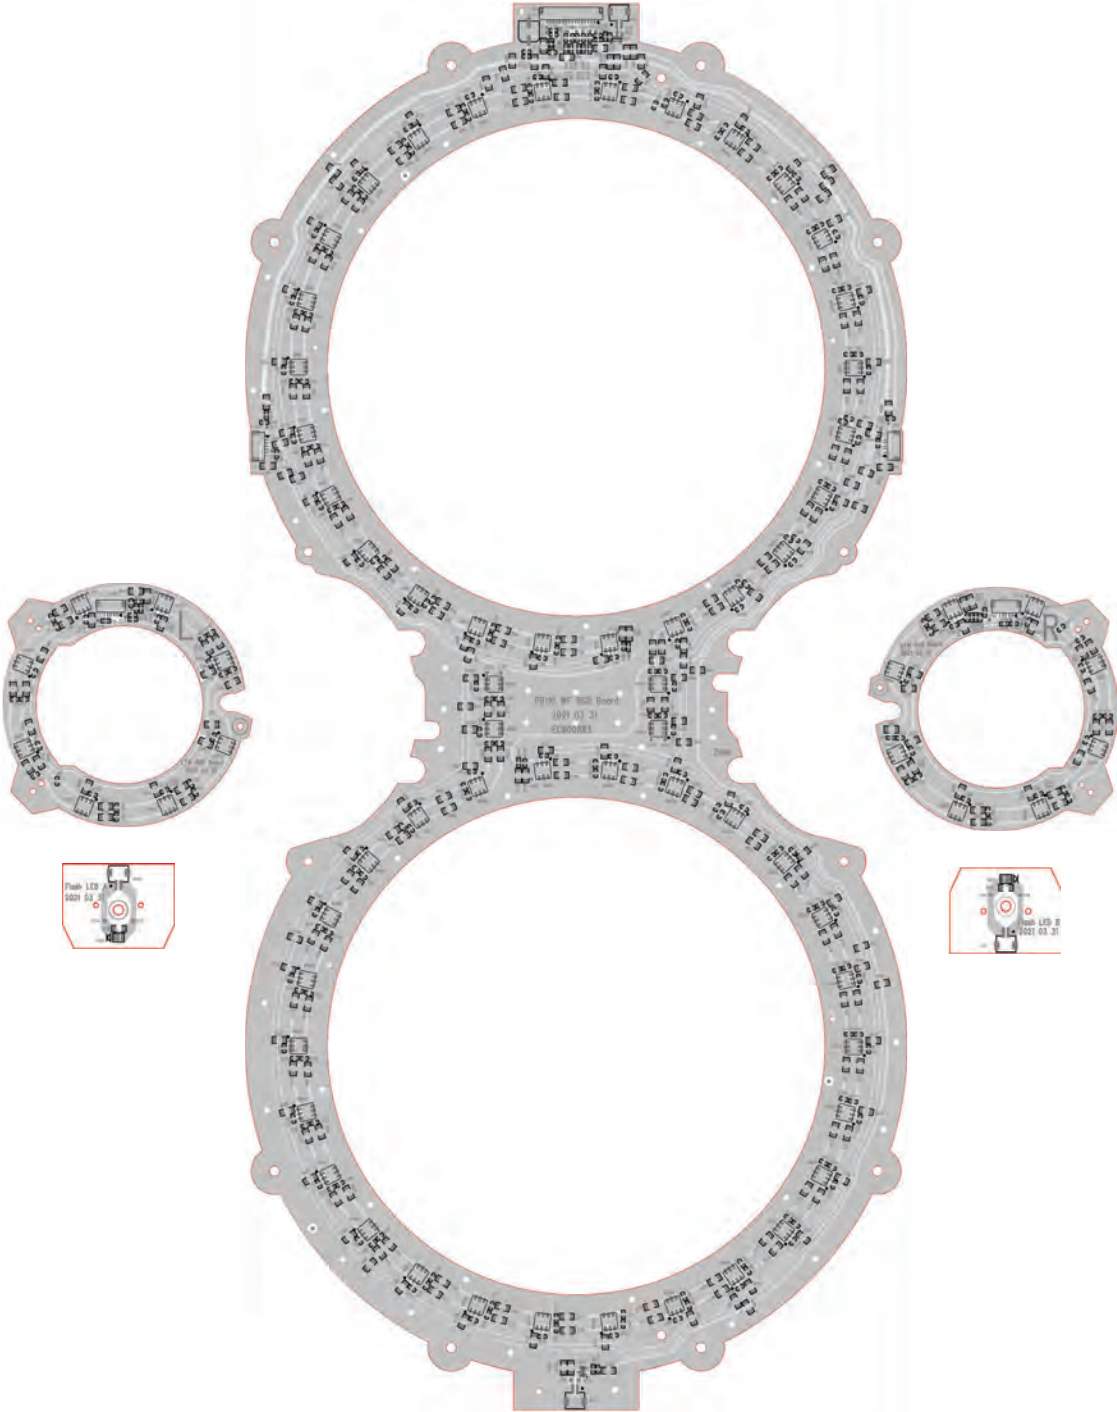


IO & Key & Mic & Light & Play Board (you have to order 2P/Ns together at same time) P/N: PAS02745077+PAS02745006

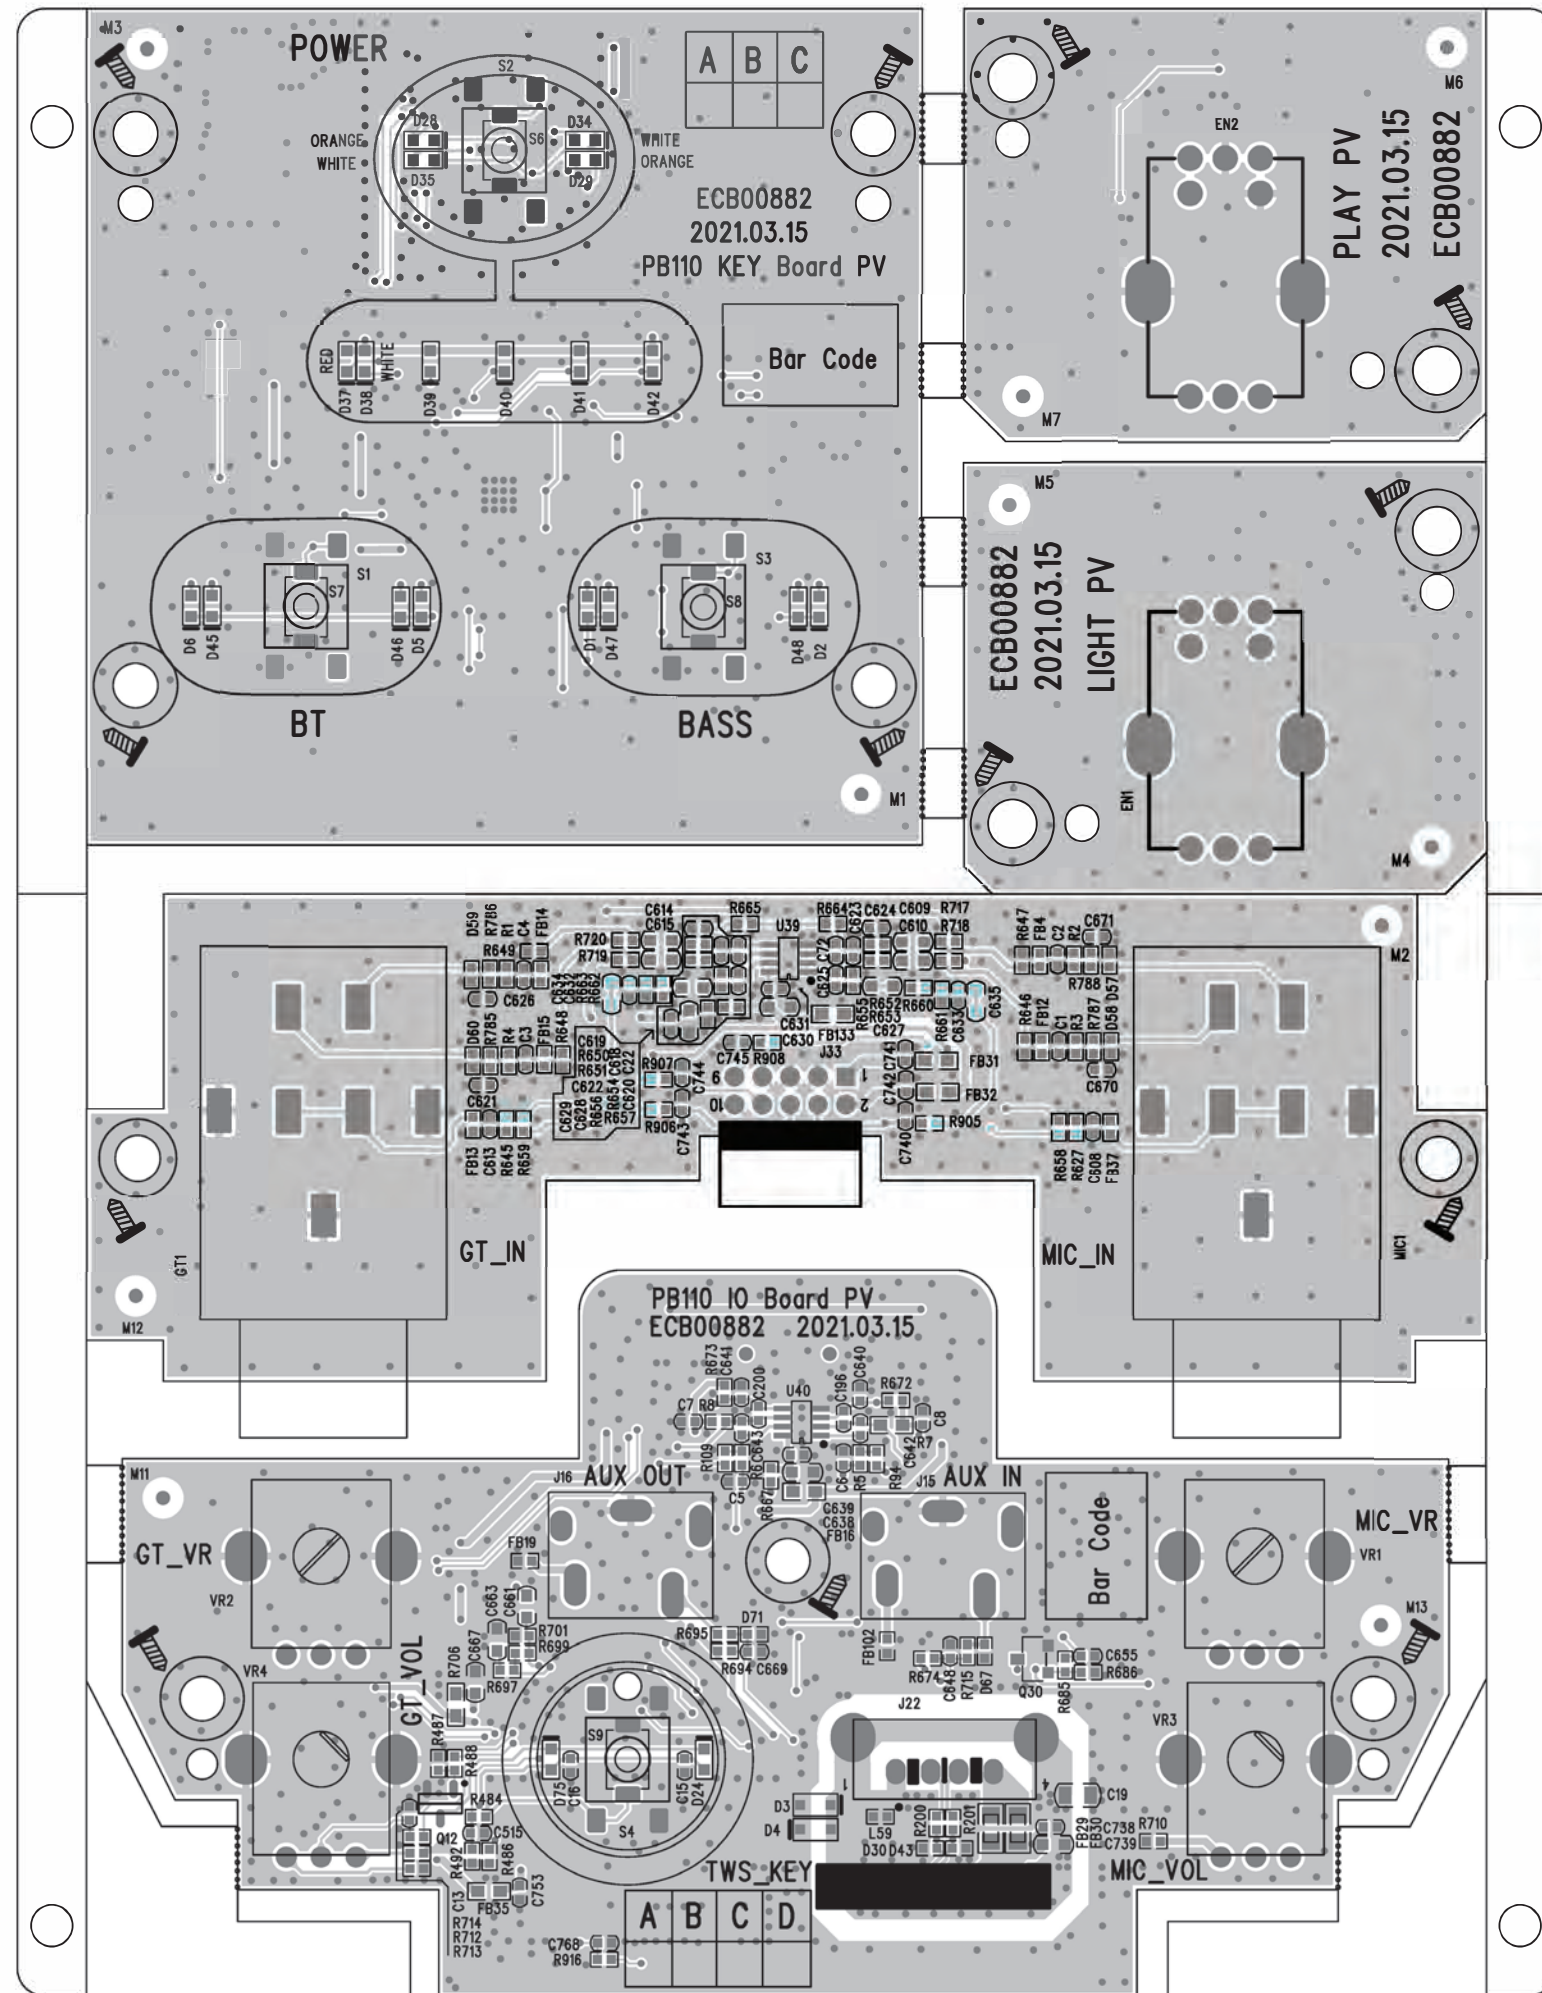


POWER BOARD

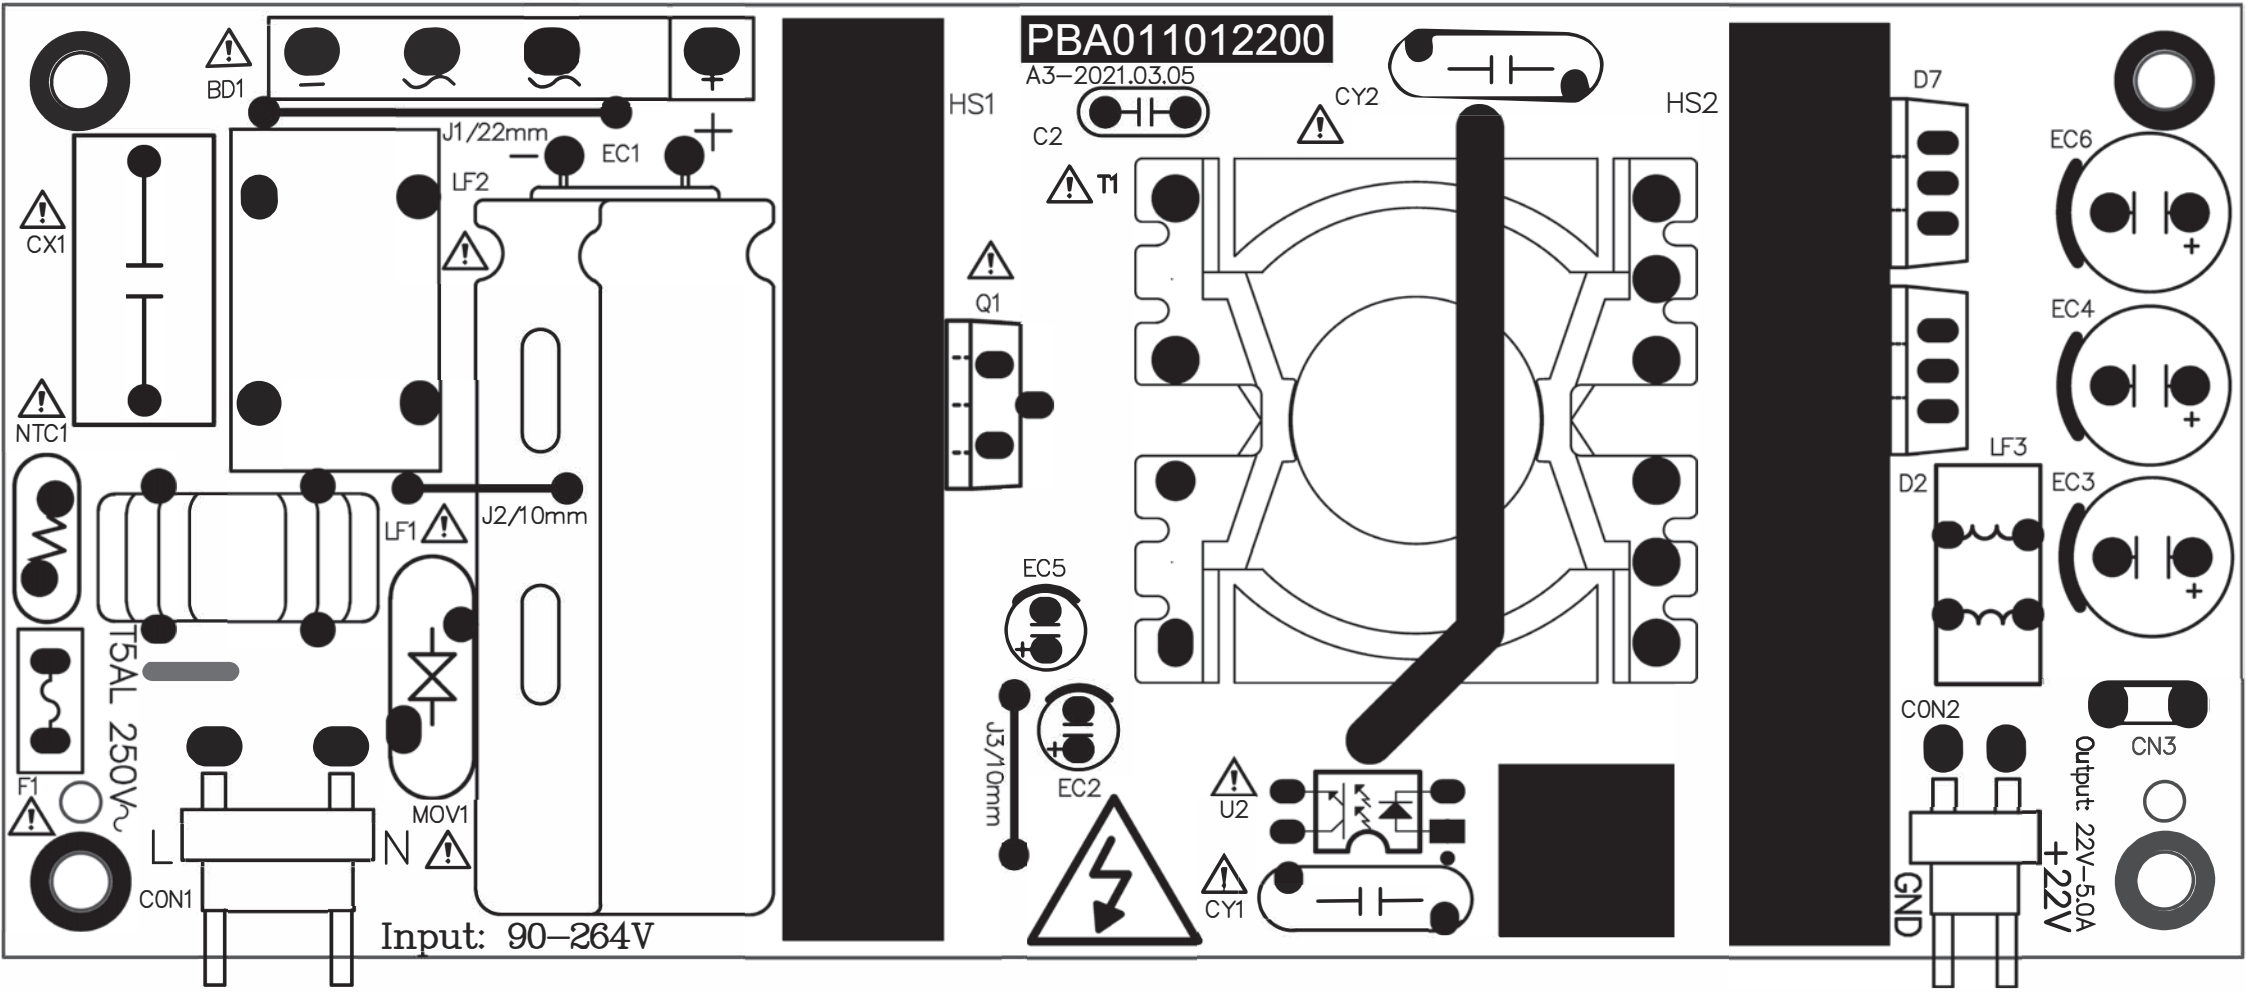

POWER BOARD

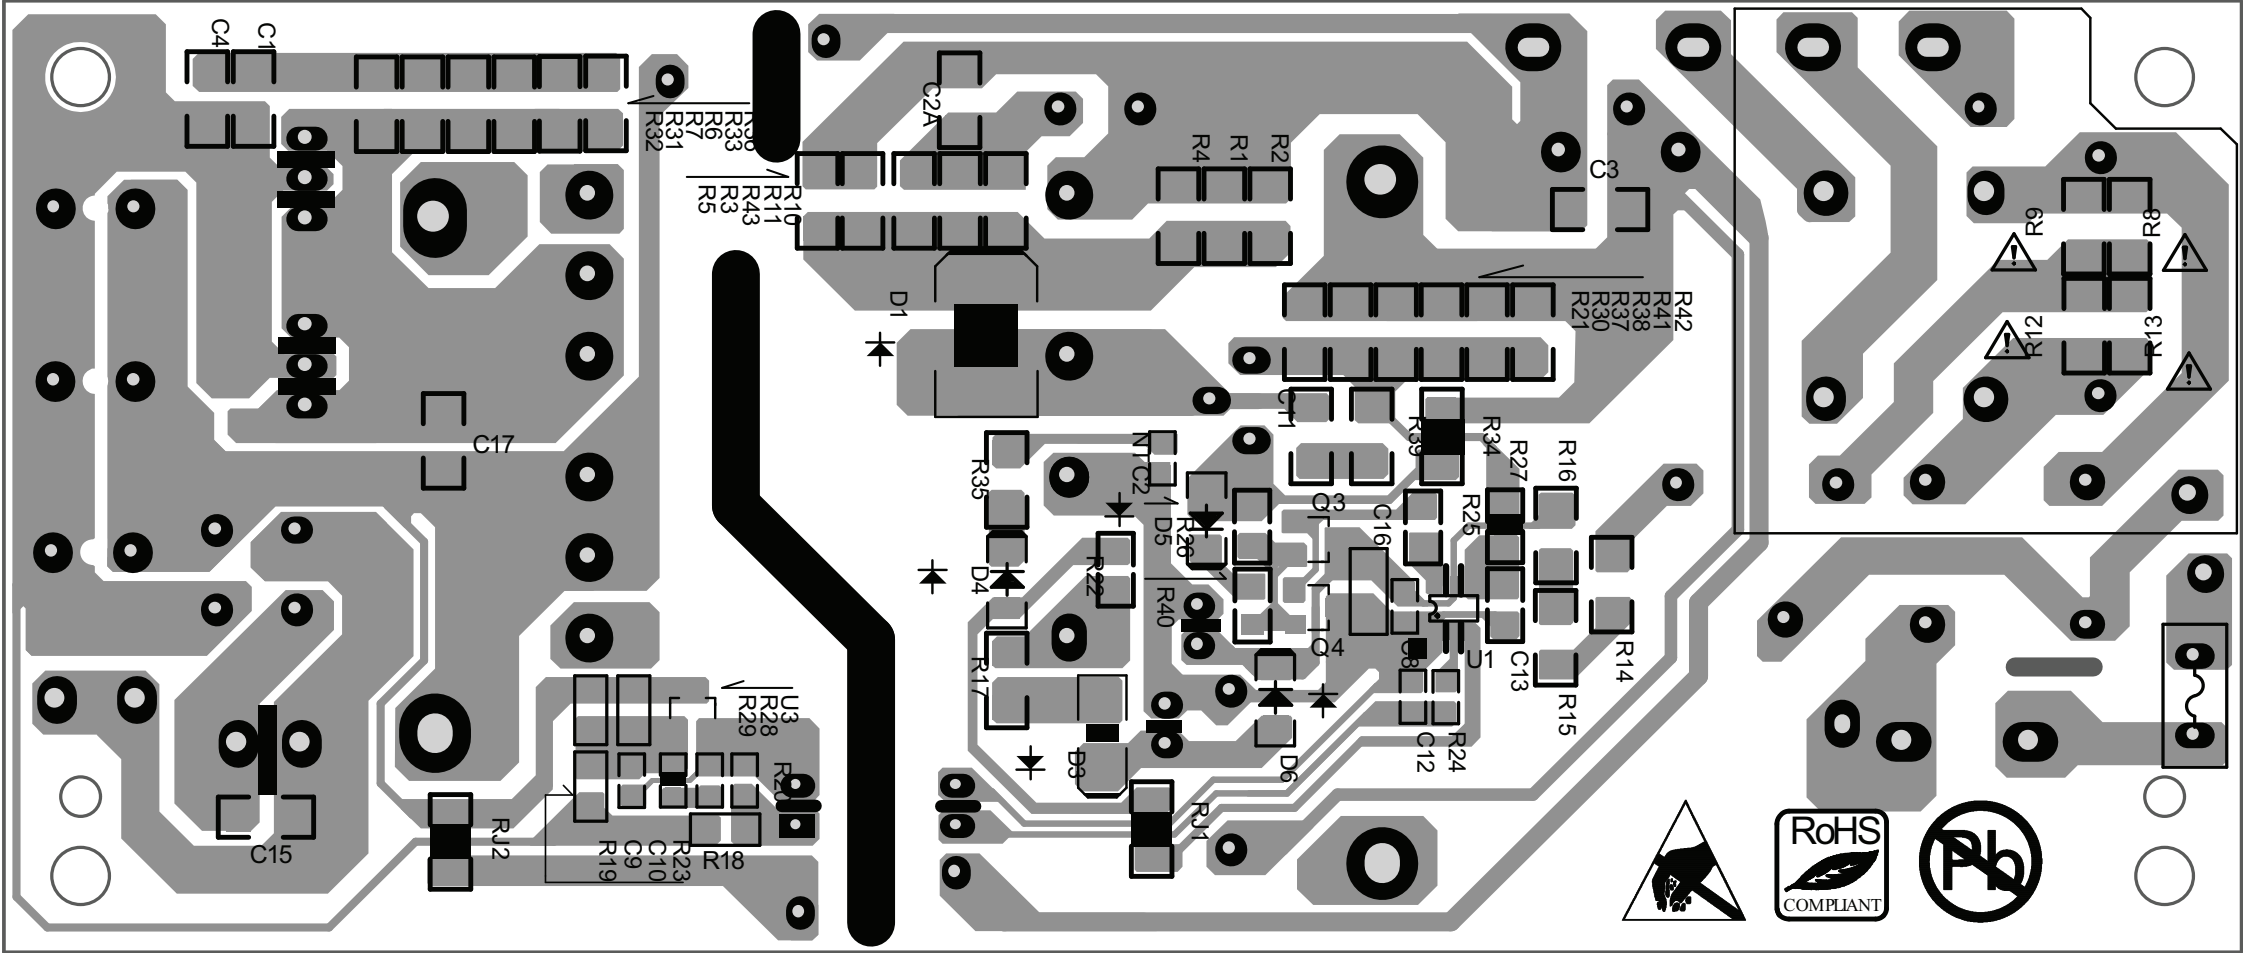

MECHANICAL EXPLODED VIEW

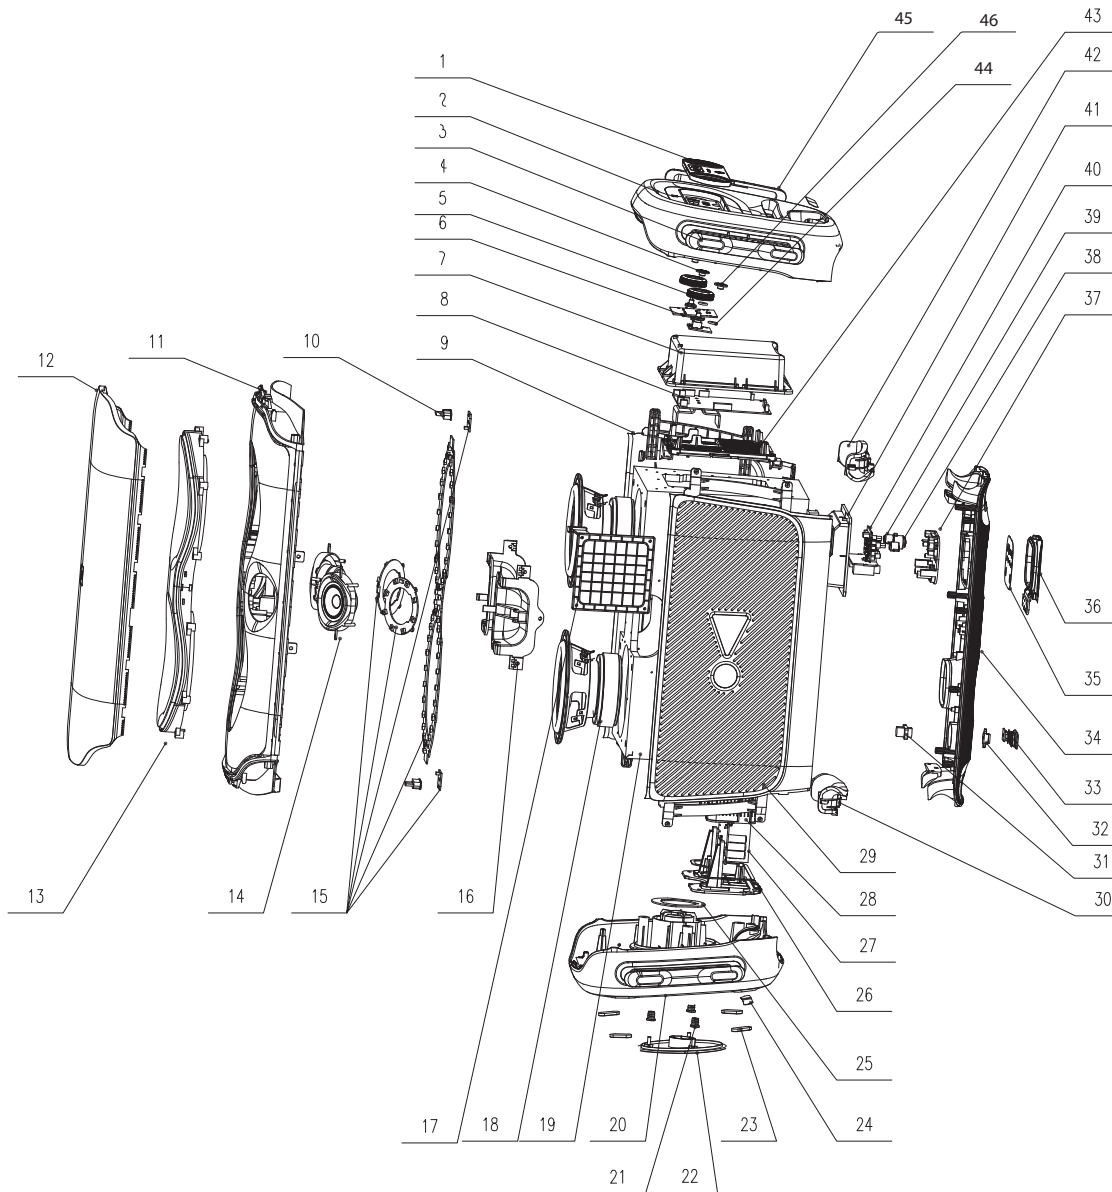

Pos. No.	P/N	Description	UoM	Usage
1	PAS02745001	CONTROL PANEL PARTYBOX110	EA	1
2	PAS02745002	TOP COVER ASSEMBLY PARTYBOX110	EA	1
3	PAS02745003	SIDE FOOT A PARTYBOX110	EA	2
4	PAS02745004	LIGHT BUTTON COVER PARTYBOX110	EA	1
5	PAS02745005	KNOB BRACKET PARTYBOX110	EA	2
6+40	PAS02745006	IO+VOL+LED+PLAY+KEY BOARD	SY	1
7	PAS02745007	MAIN BOARD SEAL BOX PARTYBOX110	EA	1
8+43	PAS02745008	MAIN BOARD PARTYBOX110	SY	1
9	PAS02745009	SIDE COVER L PARTYBOX110	EA	1
10	PAS02745010	LENS PARTYBOX110	EA	2
11	PAS02745011	FRONT HOUSING PARTYBOX110	EA	1
12	PAS02745012	GRILL ASSEMBLY PARTYBOX110	EA	1
13	PAS02745013	RING PARTYBOX110	EA	1
14	PAS02745014	TWEETER PARTYBOX110	EA	2
15	PAS02745015	RGB BOARD PARTYBOX110	SY	1
16	PAS02745016	TWEETER BRACKET PARTYBOX110	EA	2
17	PAS02745017	LI-ION BATTERY PARTYBOX110	EA	1
18	PAS02745018	WOOFER PARTYBOX110	EA	2
19	PAS02745019	WOODEN BOX ASSEMBLY PARTYBOX110	EA	1
20	PAS02745020	BOTTOM COVER ASSEMBLY PARTYBOX110	EA	1
21	PAS02745021	RUBBER PLUG PARTYBOX110	EA	3
22	PAS02745022	BOTTOM COVER PLATE PARTYBOX110	EA	1
23	PAS02745023	FOOT PARTYBOX110	EA	4
24	PAS02745024	PC SCREW HOLE COVER PARTYBOX110	EA	2
25	PAS02745025	PE GASKET PARTYBOX110	EA	1
26	PAS02745026	POWER BOARD BRACKET PARTYBOX110	EA	1
27	PAS02745027	POWER BOARD PARTYBOX110	EA	1
28	PAS02745028	POWER BOARD BOX PARTYBOX110	EA	1
29	PAS02745029	SIDE COVER R PARTYBOX110	EA	1
30	PAS02745030	HANDLE BRACKET PARTYBOX110	EA	2
31	PAS02745031	AC POWER JACK PARTYBOX110	EA	1
32	PAS02745032	AC POWER BRACKET PARTYBOX110	EA	1
33	PAS02745033	AC POWER SEAL COVER PARTYBOX110	EA	1
34	PAS02745034	REAR HOUSING PARTYBOX110	EA	1
35	PAS02745035	PC CHIP PARTYBOX110	EA	1
36	PAS02745036	IO SEAL COVER ASSEMBLY PARTYBOX110	EA	1
37	PAS02745037	IO COVER PLATE PARTYBOX110	EA	1
38	PAS02745038	TWS BUTTON PARTYBOX110	EA	1
39	PAS02745039	KNOB PARTYBOX110	EA	2
41	PAS02745040	IO SEAL BOX PARTYBOX110	EA	1
42	PAS02745041	SILICONE HANDLE PARTYBOX110	EA	2
44	PAS02745043	RUBBER RING COVER PARTYBOX110	EA	2
45	PAS02745044	SIDE FOOT B PARTYBOX110	EA	2
46	PAS02745042	PLAY BUTTON COVER PARTYBOX110	EA	1

JBL PARTYBOX 110 SPARE PARTS LIST V1.2

Pos. No.	P/N	Description	UoM	Usage
1	PAS02745001	CONTROL PANEL PARTYBOX110	EA	1
2	PAS02745002	TOP COVER ASSEMBLY PARTYBOX110	EA	1
3	PAS02745003	SIDE FOOT A PARTYBOX110	EA	2
4	PAS02745004	LIGHT BUTTON COVER PARTYBOX110	EA	1
5	PAS02745005	KNOB BRACKET PARTYBOX110	EA	2
6	PAS02745077	KEY/MIC/LIGHT/PLAY BOARDS PARTYBOX110	SY	1
7	PAS02745007	MAIN BOARD SEAL BOX PARTYBOX110	EA	1
8+43	PAS02745008	MAIN BOARD PARTYBOX110	SY	1
9	PAS02745009	SIDE COVER L PARTYBOX110	EA	1
10	PAS02745010	LENS PARTYBOX110	EA	2
11+12	PAS02745076	FRONT HOUSING ASSY PARTYBOX110	SY	1
13	PAS02745013	RING PARTYBOX110	EA	1
14	PAS02745014	TWEETER PARTYBOX110	EA	2
15	PAS02745015	RGB BOARD PARTYBOX110	EA	1
16	PAS02745016	TWEETER BRACKET PARTYBOX110	EA	2
17	PAS02745017	LI-ION BATTERY PARTYBOX110	EA	1
18	PAS02745018	WOOFER PARTYBOX110	EA	2
19	PAS02745019	WOODEN BOX ASSEMBLY PARTYBOX110	EA	1
20	PAS02745020	BOTTOM COVER ASSEMBLY PARTYBOX110	EA	1
21	PAS00918176	RUBBER PLUG CITATION200/PARTYBOX110	EA	3
22	PAS02745022	BOTTOM COVER PLATE PARTYBOX110	EA	1
23	PAS02745023	FOOT PARTYBOX110	EA	4
24	PAS02745024	PC SCREW HOLE COVER PARTYBOX110	EA	2
25	PAS02745025	PE GASKET PARTYBOX110	EA	1
26	PAS02745026	POWER BOARD BRACKET PARTYBOX110	EA	1
27	PAS02745027	POWER BOARD PARTYBOX110	EA	1
28	PAS02745028	POWER BOARD BOX PARTYBOX110	EA	1
29	PAS02745029	SIDE COVER R PARTYBOX110	EA	1
30	PAS02745030	HANDLE BRACKET PARTYBOX110	EA	2
31	PAS02745031	AC POWER JACK PARTYBOX110	EA	1
32	PAS02745032	AC POWER BRACKET PARTYBOX110	EA	1
33	PAS02745033	AC POWER SEAL COVER PARTYBOX110	EA	1
34	PAS02745034	REAR HOUSING PARTYBOX110	EA	1
35	PAS02745035	PC CHIP PARTYBOX110	EA	1
36	PAS02745036	IO SEAL COVER ASSEMBLY PARTYBOX110	EA	1
37	PAS02745037	IO COVER PLATE PARTYBOX110	EA	1
38	PAS02745038	TWS BUTTON PARTYBOX110	EA	1
39	PAS02745039	KNOB PARTYBOX110	EA	2
40		IO BOARDS PARTYBOX110	SY	1
41	PAS02745040	IO SEAL BOX PARTYBOX110	EA	1
42	PAS02745041	SILICONE HANDLE PARTYBOX110	EA	2
44	PAS02745043	RUBBER RING COVER PARTYBOX110	EA	2
45	PAS02745044	SIDE FOOT B PARTYBOX110	EA	2
46	PAS02745042	PLAY BUTTON COVER PARTYBOX110	EA	1
	PAS02745064	I/O FFC CABLE PARTYBOX110	EA	1
	PAS02745065	RGB FFC CABLE A PARTYBOX110	EA	1
	PAS02745066	RGB FFC CABLE B PARTYBOX110	EA	2
	PAS02745067	TWEETER CABLE PARTYBOX110	EA	2
	PAS02745068	WOOFER CABLE UP PARTYBOX110	EA	1
	PAS02745069	KNOB FFC CABLE PARTYBOX110	EA	2

PAS02745070	FLASH LAMP CABLE PARTYBOX110	EA	2
PAS02745071	KEY BOARD FFC CABLE PARTYBOX110	EA	1
PAS02745072	DC CABLE CABLE PARTYBOX110	EA	1
PAS02745073	WOOFER CABLE DOWN PARTYBOX110	EA	1
PAS02745074	CHARGING CABLE PARTYBOX110	EA	1
PAS02745075	AC WIRE CABLE PARTYBOX110	EA	1
PAS02745045	AC POWER CORD AM PARTYBOX110	EA	1
PAS02745046	AC POWER CORD CN PARTYBOX110	EA	1
PAS02745047	AC POWER CORD KO PARTYBOX110	EA	1
PAS02745048	AC POWER CORD AU PARTYBOX110	EA	1
PAS02745049	AC POWER CORD TH PARTYBOX110	EA	1
PAS02745050	AC POWER CORD EU PARTYBOX110	EA	1
PAS02745051	AC POWER CORD IN PARTYBOX110	EA	1
PAS02745052	AC POWER CORD UK PARTYBOX110	EA	1
PAS02745053	AC POWER CORD JN PARTYBOX110	EA	1
PAS02745054	AC POWER CORD BR PARTYBOX110	EA	1
PAS02745055	GIFT BOX AM PARTYBOX110	EA	1
PAS02745056	GIFT BOX CN PARTYBOX110	EA	1
PAS02745057	GIFT BOX AS PARTYBOX110	EA	1
PAS02745058	GIFT BOX EU PARTYBOX110	EA	1
PAS02745059	GIFT BOX IN PARTYBOX110	EA	1
PAS02745060	GIFT BOX UK PARTYBOX110	EA	1
PAS02745061	GIFT BOX JN PARTYBOX110	EA	1
PAS02745062	GIFT BOX BR PARTYBOX110	EA	1
PAS02745063	GIFT BOX RU PARTYBOX110	EA	1
PAS02745078	ANTENNA PARTYBOX110	EA	1