

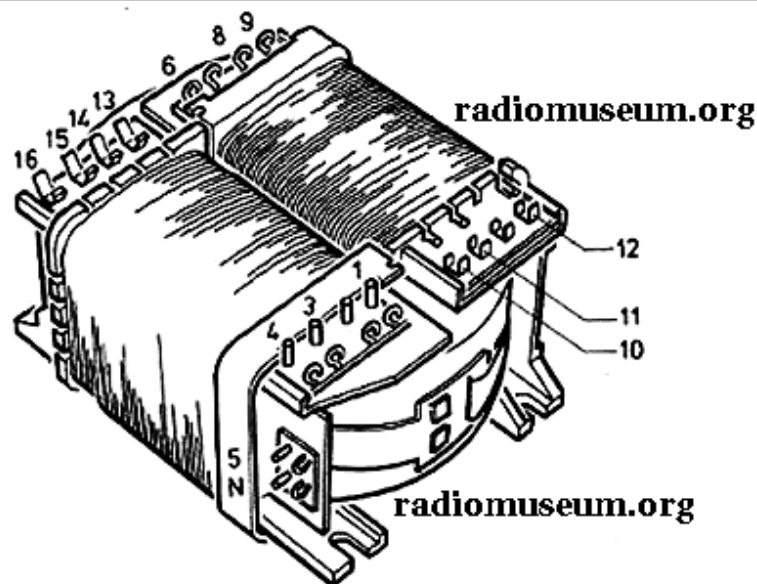


Fig. 1

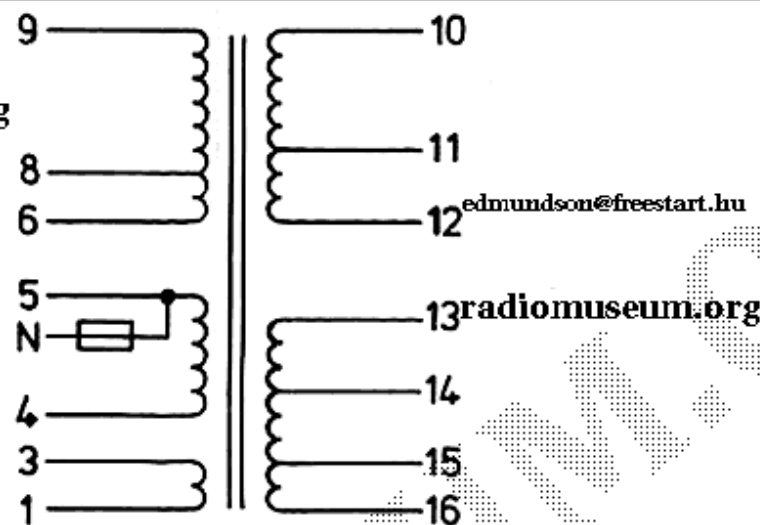


Fig. 2

radiomuseum.org

4.3 Parts list Nomenclature Ersatzteilliste Onderdelenlijst

Item	Orderingnumber	Type/description				
F 1	4822 253 30023	Fuse 1,4 A Delayed	C 3	4822 124 40152	8200 μ F	50 V
F 2	4822 252 20001	Fuse 1,5 A Thermal	C 4	4822 124 20605	1,5 μ F	63 V
F 3	4822 253 30028	Fuse 4 A Delayed	C 5	4822 121 41161	100 nF	100 V
SK 1	5322 277 14258	Main switch	C 6	4822 124 20713	47 μ F	40 V
SK 2	4822 273 30265	Range switch	R 1	5322 111 44163	0,22 Ω	5 W 10%
M 1	4822 346 10095	Amp meter 0-3 A	R 2	4822 110 53107	1k Ω	0,5 W 5%
M 2	4822 346 10096	Volt meter 0-30 V	R 3	4822 112 31085	150 Ω	11 W 10%
T 1	4822 146 20635	Main transformer	R 4	4822 110 53134	10k Ω	0,5 W 5%
D 1	4822 130 50312	BY225-200	R 5	4822 101 20297	2k2 Lin Pot. meter	
D 2	4822 130 34048	BZX75C2V8	R 6	4822 110 53107	1k Ω	0,5 W 5%
D 3	4822 130 34533	BY227	R 7	5322 111 44163	0,22 Ω	5 W 10%
D 4	4822 130 30621	1N4148	R 8	4822 110 53054	10 Ω	0,5 W 5%
D 5	5322 130 34107	BZX61C13	R 9	4822 110 53054	10 Ω	0,5 W 5%
D 6	4822 130 34048	BZX75C2V8	R 10	4822 110 53207	5M8 Ω	0,5 W 5%
TS 1	4822 130 41031	BDX64	R 11	4822 110 53092	270 Ω	0,5 W 5%
TS 2	4822 130 40823	BD139	R 12	5322 116 50586	1k54 Ω	0,4 W 1%
IC 1	4822 209 80591	LM317T	R 13	5322 116 54562	1k4 Ω	0,4 W 1%
C 1	4822 122 30103	22 nF 100 V	R 14	5322 116 54559	1k24 Ω	0,4 W 1%
C 2	4822 121 41161	100 nF 100 V	R 15	5322 116 54521	412 Ω	0,5 W 1%
			R 16	4822 110 73112	1k5 Ω	0,33 W 5%
			R 17	4822 101 20297	2k2 Lin Pot. meter	
			R 18	4822 110 73125	4k7 Ω	0,33 W 5%
			R 19	4822 110 73069	39 Ω	0,33 W 5%
			R 20	4822 113 80295	0,39 Ω	5 W 10%
			R 21	4822 110 53125	4k7 Ω	0,5 W 5%
			R 22	4822 101 10014	Var. Res.	4k7
			R 23	4822 110 53118	2k7 Ω	0,5 W 5%
			RE 1	4822 280 20095		Relay