




11 Disassembly and Reassembly

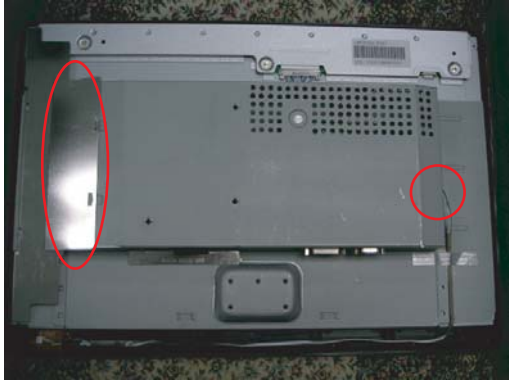
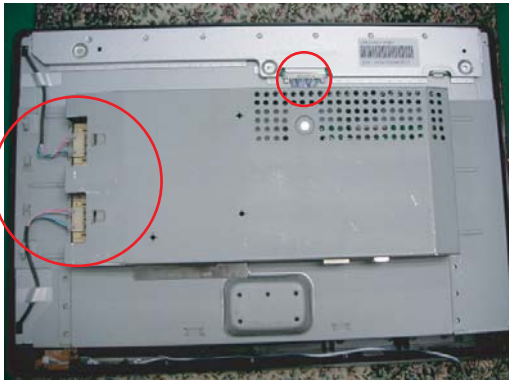

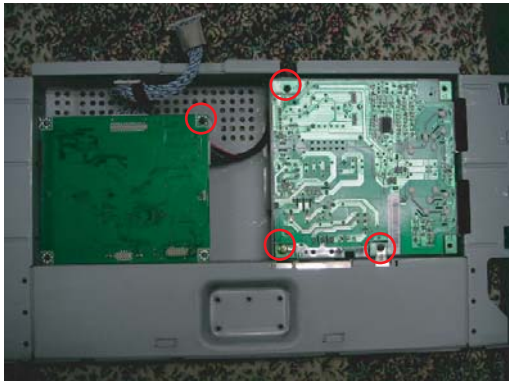
This section of the service manual describes the disassembly and reassembly procedures for the LHA20WS TFT-LCD monitors.

⚠ WARNING: This monitor contains electrostatically sensitive devices. Use caution when handling these components.

11-1 Disassembly

- ⚠ Cautions:**
- 1. Disassembly stand on the flat desk.
 - 2. Disconnect the monitor from the power source before disassembly.

Description	Picture Description
1. Remove 3 screws from the stand and Remove stand.	
2. Remove 3 screws from the stand and Lift up back cover.	<div></div>

Description	Picture Description
<p>4. Use the jig to remove the shield lamp. (Be careful Shield.)</p> <p>5. Remove the FUNCTION Wire from PCB ASS' Y.</p>	 A photograph of the back of a white electronic device chassis. A red circle highlights a silver, oval-shaped shield lamp on the left side. Another red circle highlights a small component on the right side of the chassis.
<p>6. Remove the Panel Lamp wire.</p> <p>7. Remove the LVDS Wire from Panel.</p>	 A photograph of the back of the device chassis. Two red circles highlight the panel lamp wire on the left and the LVDS wire on the right.
<p>8. Remove 4 screws.</p>	 A close-up photograph of the back of the device chassis. Four red circles highlight screws located along the top edge of the chassis.
<p>9. Remove 4 screws and Lift up the Main PCB and IB Board.</p>	 A photograph of the back of the device chassis. Two red circles highlight the main PCB and IB board, which are visible through the chassis.

Description	Picture Description
10. Main PCB and IB Board	